



Configuring the HTML display tab in BIS Access Engine (ACE)

Bosch
Sicherheitssysteme GmbH
Postfach 1111
85626 Grasbrunn
Germany
Visitors:
Robert-Bosch-Ring 5
85630 Grasbrunn
Tel +49 89 6290 -0
www.boschsecurity.com

This document explains how to configure an extra tab in the **Cards** dialog of BIS Access Engine (ACE), and how to use this tab for displaying personnel data via HTML.

30 November 2018

Contents

1	Configuring the operator's user profile	2
2	Configuring the HTML that will be displayed	3
2.1	Customizing the HTML	4
3	Modifying the label of the HTML display tab.....	8

Prerequisites

- A BIS ACE version 4.6.9608.0 or later has been installed.
- The operator is familiar with the ACE system parameter editor.

Overview


This document describes the steps needed for the operator to add an HTML display tab to the **Cards** dialog of the ACE Dialog Manager after the first installation of BIS/ACE. The tab will always appear as leftmost tab.

The configuration has 3 steps:


1. Authorize the operator to view HTML pages. This is done by modifying the operator’s user profile.
2. Configure a source URL for the tab that is to display HTML information.
3. (Optional) Change the label of the new tab.

1 Configuring the operator’s user profile

1. In the BIS Configuration Browser, select **Administration > ACE User profiles** from the side bars
2. Load the profile of the operator, and select the dialog **Cards** from the list.
3. In the **Special functions** popup dialog at the bottom of the page, select **HTML display**.
4. Save the profile.

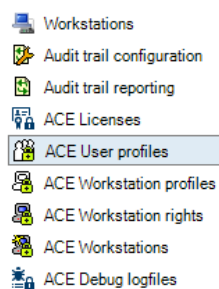


Name	Execute
Main menu	
Personnel data	No
Persons	No
Companies	No
Print badges	No
Cards	Yes
PIN code	No
Blocking	No
Blacklist	No
Group of persons	No
Group authorizations	No
Areas	No
Change division	No
PegaSys Stoppage card	No
Key	No
Visitors	No
Visitors	No
Visitor cards	No
Guard Tours	No
Define guard tours	No
Manage guard tours	No
Tour monitoring	No
Define routes	No
Correct routes	No
System data	No

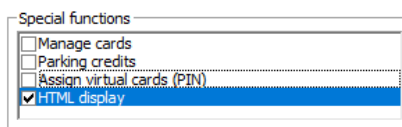

2 Configuring the HTML that will be displayed

1. In the BIS Configuration Browser, select **Tools > ACE System parameter editor** from the side bars
2. Select the topic **HtmlDisplayDlg > HtmlPage**
3. Select the check box **Parameter** and enter either the path to the HTML file or a URL (Examples: c:\temp\index.html or www.bosch.de).
4. Save the changes.

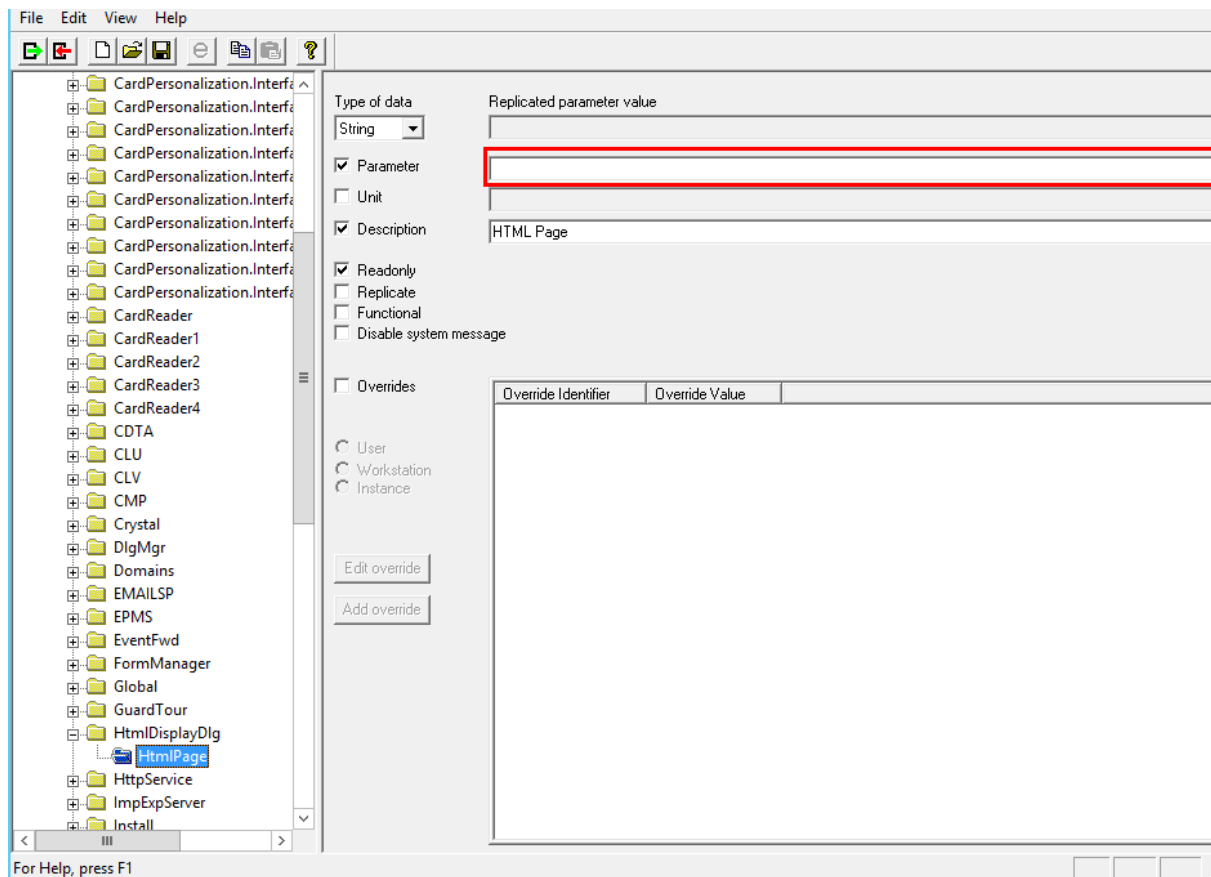

5. Restart the ACE Dialog Manager and select the **Cards** dialog:
A new tab with the title **Extern** will be visible as first tab in the dialog.
Whenever a person is selected, this tab will display the HTML file that you entered in the steps above, in the ACE System parameter editor.



Note: If a path of the following form is used:

30 November 2018

Page 4 of 9

\\<computername>\MgtS\Customer Configuration\AC\Documents\Symbols\DetectorSymbols.htm

-- then the operator must ensure that all workstations have at least read access to the folder containing the HTML file, and to subfolders referenced by the HTML. **Therefore test your configurations thoroughly on server and clients.**

Avoid using URLs that are either slow-loading or unreliable, because the URL will be reloaded each time the personnel record is changed.

2.1 Customizing the HTML

The HTML contents can be customized using data from the person record that has been selected in the dialog. If no person is selected the tab is empty.

For convenience placeholders can be used. The placeholders refer to the person's data in the Persons table of the BIS_ACE database. The general form for placeholders is <\$ + uppercase field name + \$>.

For example, a reference to the last name of a person is <\$LASTNAME\$>.

Example 1: If the operator specifies a URL of the form

<somePath>\<\$LASTNAME\$>-<\$FIRSTNAME\$>.html

and the selected a personnel record has last name Doe and first name John then the dialog will try to load the HTML file:

<somePath>\Doe-John.html

Example 2: HTML code of the form: [www.google.de/#q=<\\$Lastname\\$>](http://www.google.de/#q=<$Lastname$>)

will open a google instance with a search for the selected persons last name.

The following table lists the available fields of the Person table:

Fieldname	Value type	Remarks
PERSID	A string of 16 characters	
PERSNO	A string of up to 12 characters	
PERSCODE	A string of up to 12 characters	



PERSCLASS	A string of up to 1 characters	
RANKCODE	A string of up to 1 characters	
LASTNAME	A string of up to 80 characters	
FIRSTNAME	A string of up to 40 characters	
DATEOFBIRTH	A string of 10 characters like 01.12.1985	The format may change with the language and may be empty
SEX	A numeric value	May be empty
STREETHOUSENO	A string of up to 40 characters	
ZIPCODE	A string of up to 12 characters	
CITY	A string of up to 32 characters	
PHONEPRIVATE	A string of up to 32 characters	
DATELASTCARD	A string of 19 characters like 04.05.2017 08:09:32	The format may change with the language and may be empty
STATUS	A numeric value	May be empty
REVISER	A string of up to 40 characters	
DOMAIN	A numeric value	May be empty
SUBDOMAN	A numeric value	May be empty
MAIDENNAME	A string of up to 40 characters	
GRADE	A string of up to 40 characters	
MARITALSTATUS	A numeric value	May be empty



ARISTOCRAY	A string of up to 40 characters	
NATIONALITY	A string of up to 40 characters	
COUNTRY	A string of up to 40 characters	
ACTIVITY	A string of up to 255 characters	
REASONSTAY	A string of up to 255 characters	
REASONACTIVITY	A string of up to 255 characters	
ATTENDANT	A string of up to 40 characters	
REMARK	A string of up to 255 characters	
RESEARCH	A numeric value	May be empty
IDTYPE	A string of up to 40 characters	
IDNUMBER	A string of up to 40 characters	
IDVALIDUNTIL	A string of 10 characters like 01.12.1985	The format may change with the language and may be empty
EMAIL	A string of up to 255 characters	
LAYOUT	A string of up to 255 characters	
SIZEOFPERS	A numeric value	May be empty
CITYOFBIRTH	A string of up to 32 characters	
PHONEMOBILE	A string of up to 32 characters	
PHONEOFFICE	A string of up to 32 characters	




PHONEOTHER	A string of up to 32 characters	
FAXPRIVATE	A string of up to 32 characters	
FAXOFFICE	A string of up to 32 characters	
WEBPAGEURL	A string of up to 255 characters	
DEPARTMENT	A string of up to 40 characters	
COSTCENTRE	A string of up to 32 characters	
CENTRALOFFICE	A string of up to 40 characters	
JOB	A string of up to 40 characters	
ADDITIONALLASTNAME	A string of up to 80 characters	
NUMBERPLATE	A string of up to 16 characters	

Hint for tester: Try out diacritic and non-Latin characters to see whether the characters are interpreted correctly in the URL.

3 Modifying the label of the HTML display tab

1. In the BIS Configuration Browser, select **Tools > ACE System parameter editor** from the side bars
2. Select the topic **Tabs > HTMLDisplay**
3. Select the check box **Parameter** and enter a new label for the tab.
4. Save the new configuration.

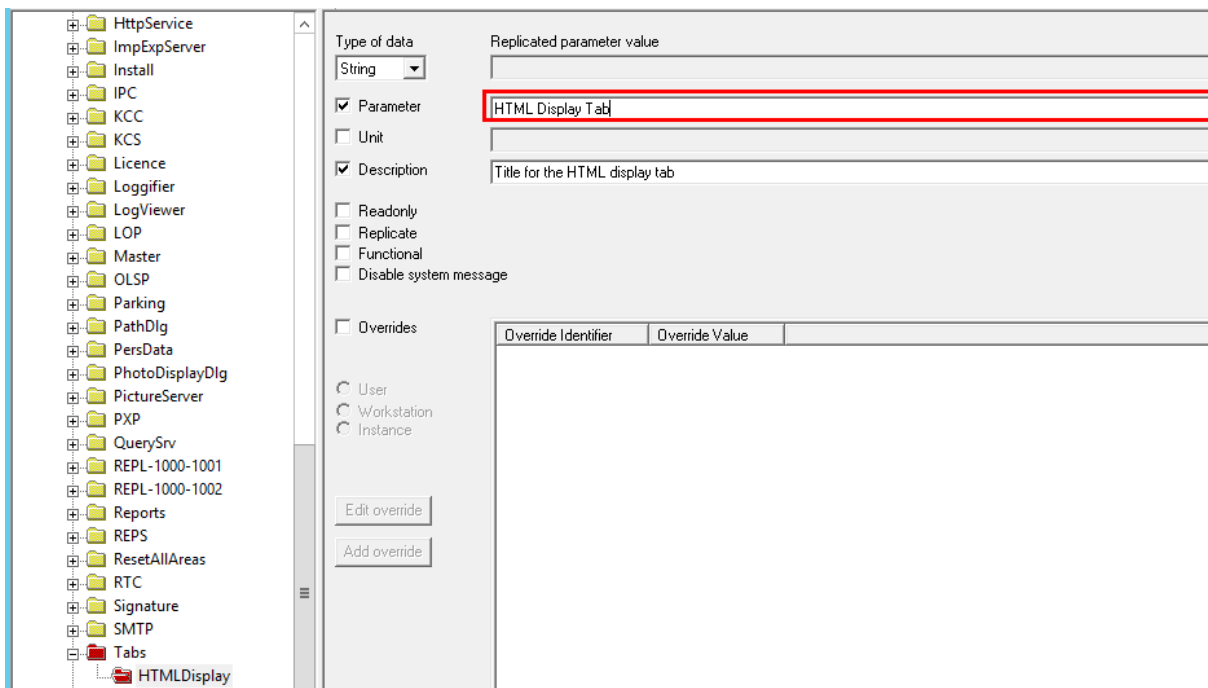

After restarting the ACE Dialog Manager the first tab on the **Cards** dialog will display the modified label.



- Personen
- Firmen
- Ausweis-Druck
- Ausweise**
- PIN-Code
- Personen sperren
- Schwarze Liste
- Personen-gruppen
- Gruppen-berechtigungen
- Bereich setzen

Geburtsname:

Personal-Nr: Gel

Personalkennung: ▼

Firma: ▼

Kfz.-Kennzeichen:

Ausweis-Nr: Leser

Ausweis-Nr.	Verwendungstyp	PegaSys	Sperre(n)	Angelegt am

HTML Display Tab | Berechtigungen | Weitere Daten | PegaSys | SmartIntego | Parken