

The diagram shows the main unit, a large rectangular box with a handle on the right side. Below the main unit are four accessories, each with a quantity label:

- A small electronic component (labeled x1).
- A curved cable (labeled x2).
- A coiled cable with connectors (labeled x2).
- A circular component with a mounting bracket (labeled x1).

At the bottom of the diagram are two additional items:

- A document or manual.
- An open cardboard box.

This diagram shows the internal layout of the microwave oven's back panel. It includes various electronic components such as capacitors, resistors, and integrated circuits. Four screws are indicated by lines pointing to their locations: two at the top corners and two at the bottom corners, used to secure the back panel.

! B Series



! B520

The diagram shows the back of a TV with various components labeled with numbers 1 through 10. The components are:

- 1: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 2: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 3: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 4: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 5: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 6: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 7: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 8: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 9: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)
- 10: Bottom panel (indicated by a circle and arrow pointing to the bottom of the TV)

Two circular callouts provide detailed views of the removal process:


- Callout 1:** Shows the bottom panel being removed from the back of the TV. An arrow points to the panel, and a screwdriver is shown removing a screw.
- Callout 2:** Shows the bottom panel being removed from the back of the TV. An arrow points to the panel, and a screwdriver is shown removing a screw.

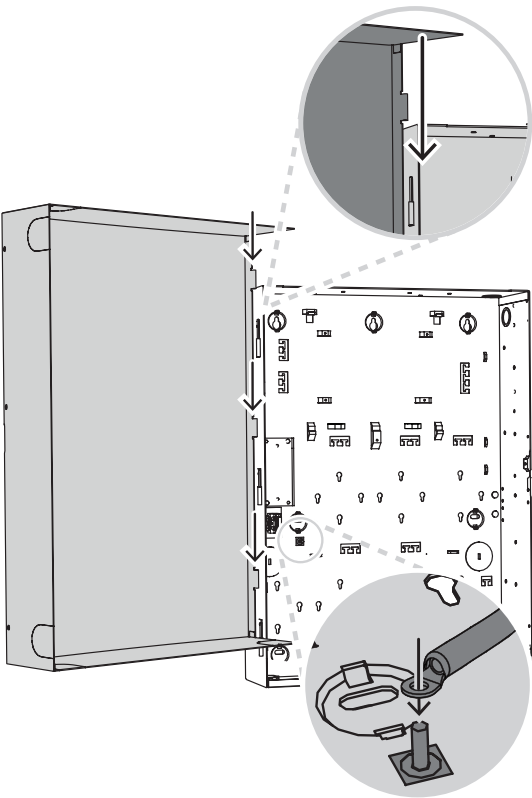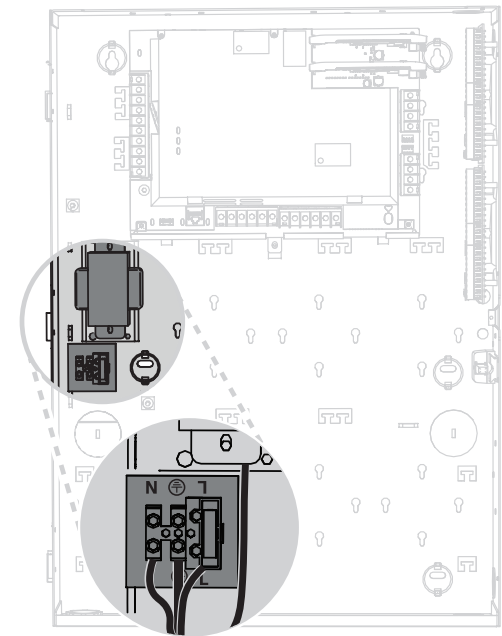

Region	Certification
USA	UL 294 - Access Control Systems Units
	UL 864 - Control Units and Accessories for Fire Alarm Systems
	UL 985 - Household Fire Warning System Units
	UL 1023 - Household Burglar Alarm System Units
	UL 2610- Commercial Premises Security Alarm Units and Systems
Canada	CAN/ULC S304-16 3 rd Edition - Signal Receiving Centre and Premise Burglar Alarm Control Units Implementation of Continuing Certification
	ULC-S545 - Residential Fire Warning System Control Units
	ULC-S559 - Fire Signal Receiving Centres and Systems

Mechanical	
	B18 Large Universal Enclosure, White
Dimension (H x W x D cm)	57.30 cm x 41.10 cm x 11.80 cm
Dimension (H x W x D in)	22.50 in x 16.40 in x 4.60 in
Weight (kg)	4.50 kg
Weight (lb)	10 lb
Material	Steel
Color	White

Large Universal Enclosure B18

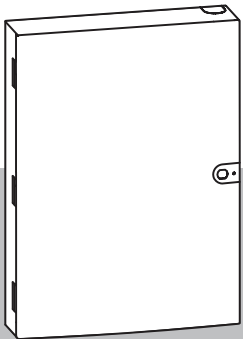

en Quick install guide

Bosch Security Systems B.V.
Torenallee 49
5617 BA Eindhoven
Netherlands
www.boschsecurity.com
© Bosch Security Systems B.V., 2022