

This document supplements the *Conettix D6600/D6100IPv6 Installation and Operation Guide* (P/N: 4998122704).

1.0 Network Ethernet Module

In the *D6600/D6100IPv6 Installation and Operation Guide* (4998122704), all references to **Network Ethernet Module** are the ITS-D6686-UL if you are in the US or Canada, or the ITS-D6686-INTL for all other regions.

2.0 D6600 Electrical Connection



EN60950 Safety standard requires the following for electrical connection of the D6600 in CE countries.

“The equipment must be connected to an earthed mains socket-outlet.”

- In Finland: "Laite on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan."
- In Norway: "Apparatet må tilkoples jordet stikkontakt."
- In Sweden: "Apparaten skall anslutas till jordat uttag."

3.0 Additional Printer Specification

In *Section 6.0 Printer Specifications* of the *D6600/D6100IPv6 Installation and Operation Guide* (4998122704), include the following specification:

The printer must be installed within 15.25 m (50 ft) of the D6600/D6100IPv6/D6100i.

4.0 Rack Mount Installations

Rack mounting hardware is included with the D6600, and is available as an accessory for the D6100IPv6/D6100i (P/N: D6100RMK).

5.0 Specifications

In *Section 16.0 Specifications* of the *D6600/D6100IPv6 Installation and Operation Guide* (4998122704), include the following specification:

D6100IPv6/ D6100i Power Input	AC Nominal Operating Range	Use the supplied transformer. The transformer must have an output voltage of 18 VAC 50-60 Hz, 40 to 50VA.
-------------------------------------	----------------------------	-----------------------------------------------------------------------------------------------------------------



