



1 - How to login:

 
-)) Swipe your card on the left hand side speaker to login and press the triangle button of your side to select your position.

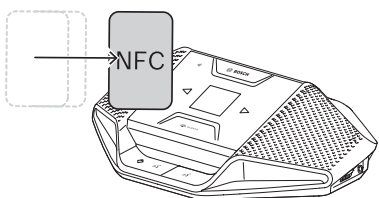

-)) Avatar icon means successful login.
-)) A no-entry sign means login failed.

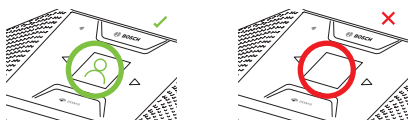

-)) Stable/solid wifi icon shows that you have identified yourself successfully.
-)) Fast blinking wifi icon or no-entry sign show that the identification was not successful.



To log out


Log out by swiping your card again.



2 - How to select a language:


-)) Plug in the headphones and press the triangle buttons if it is not automatically selected.
- If you log in using NFC, your preferred language will be selected by default.

3 - How to adjust the volume:

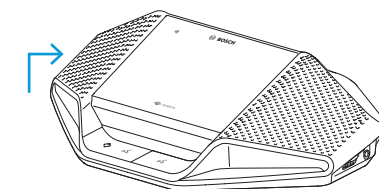


-)) Adjust the headphone volume by scrolling the volume wheel on the side your headphone is plugged.

4 - What buttons to press:

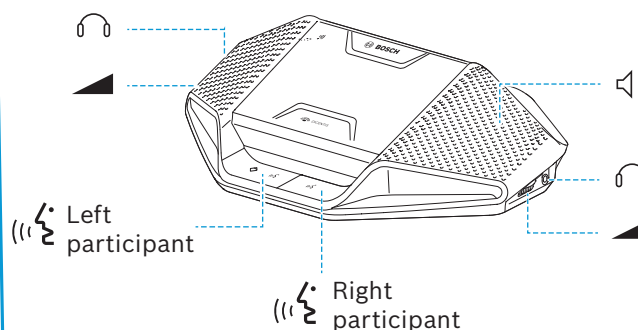


-)) Press to issue or cancel a request to speak.

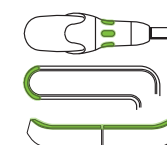


GREEN LED:

Indicates that a request-to-speak is accepted.
Flashing indicates first in list.
You cannot speak until red light.

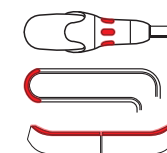

RED LED:

 Power on button indicates that the microphone is active you can push the microphone button to disable.
Flashing indicates last minute.



WHITE LED:

White speaker icon indicates that the floor is granted when the button is pressed.