

DCNM-IDESK | DCNM-IDESKVID Interpreter Desk

en Quick user guide



Incoming pre-selected languages:

Select the required language with the selection buttons on the left. The selected language will be highlighted. Press and hold down the button and rotate the rotary button on the right to change the language. If the language is set to none, nothing is displayed. Pushing the rotary button selects the first language.

The relay status is indicated by:

- FLR** | no active interpreting. The floor audio is copied to the language;
- + direct interpreting;
 - relay interpreting;
 - double relay interpreting.

Shows if the stem-microphone or headset is used.

Loudspeaker volume control:

Control the volume of the loudspeaker. Booth in use: automatically mutes the loudspeaker.

Headphone control:

Tone and volume control of the headphones or headset.

General information:

Red circle: microphone on.
Blue circle: microphone off.

Loudspeaker is active or muted.

10 FIN Language of the loudspeaker.

13:58 Current time or the elapsed time since the microphone is activated. Click to switch between modes.

Audible beeps are enabled.

Phone outside the booth is ringing.

CO2 level inside the booth is too high.
 Shows the interpreter is issuing a speak slow request.

Headphones without protection are selected.

Outgoing languages:

Select the outgoing language with the selection buttons on the right. The selected language will be highlighted. Press and hold down the button and rotate the rotary button on the right to change the language. If the language is set to none, nothing is displayed for that button (only for output B and C). Pushing the rotary button selects the first language.

Shows if the stem-microphone or headset is used.

Language is engaged. A blinking orange dot indicates that multiple interpreters are active on the same output language.

Recessed button:

Enable and disable the audible beeps.

Rotary button:

Pre-select the loudspeaker language. The loudspeaker is only audible when the booth is not in use. Select the headphones upon connecting it.

Assignable buttons:

Select the function for each button. Press and hold down the button, when the microphone is inactive, for the menu to appear.

Switch between the current time and the elapsed time.

Switch between camera view and presentation view on the external monitor.

Get an overview of the languages and their relay status.

Keep the button pressed when you are interpreting to signal that the current speaker is talking too fast to be interpreted.

Select headphones/headsets and enable microphone selection of headset.

Floor /Auto Relay button:

Press to select Floor as input language. The Floor LED will be lit. The Auto-relay LED will be lit when the input automatically switches to the Auto-relay language. Use the button to toggle between Auto-relay language and Floor.

Microphone button:

Press to activate the microphone and start/stop the elapsed time counter. Red LED: microphone on. Off LED: booth in use, microphone off. Green LED: booth not in use.

Mute button:

Press and hold to temporary mute the microphone and pause the elapsed time counter.

