# DS6R2 Series 6-zone Self-contained Control Panel

www.boschsecurity.com






- ▶ 6 alarm input zones and 1 keyswitch input
- ▶ 1 alarm relay output and 2 solid-state outputs
- ▶ 1 master PIN code and 3 user PIN codes
- ▶ Wireless receiver and key fob support

The DS6R2 is a self-contained, 6-zone control panel. Use it as a stand-alone security system, or connect it to a Multi-Tenant System (MTS). MTS is a distributed security system for monitoring and controlling a large number of small sites. Examples include apartment and condominium complexes, retail plazas, office buildings, and educational or hospital campuses.

# **System overview**

**DS6R2 System Overview** 

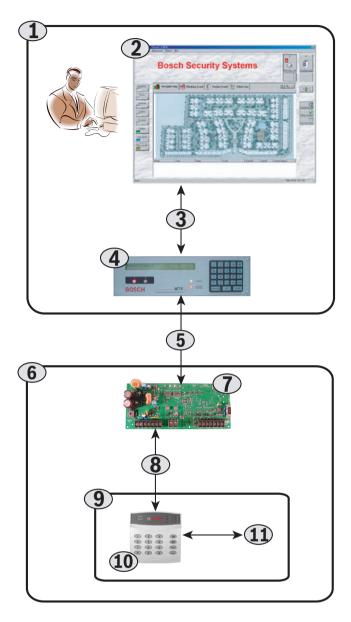

- 1. Local security office
- 2. Multi-Tenant Software (MTSW)
- 3. RS-232 bus
- Multi-Tenant Receiver (MTR); supports two Controller Area Network (CAN) branches
- 5. CAN bus; supports 100 gateways per branch
- 6. Multi-Tenant complex with individual tenant units
- 7. Multi-Tenant Gateway (MTGW); supports three RS-485 branches per gateway and 40 nodes per branch (120 nodes per gateway)
- 8. RS-485 bus
- 9. Individual tenant unit<sup>1</sup>
- 10. DS6R2 Self-contained Control Panel

11. Peripheral devices: 6 zones (wired or wireless), 3 devices per zone, and 6 key fobs

# **Functions**

## Security

Control panel programming is restricted to personnel who have the appropriate master code. If the master code is unknown, authorized personnel can reset the control panel's master code to its default value, and then specify a new master code.

For normal operating tasks, such as routine arming and disarming functions, you can assign up to three user codes to the individual tenant. If desired, you can disable user codes entirely.

## **Timers**

The DS6R2 provides individually programmable timers for Alarm Time, Exit Delay, and Entry Delay.

## **Zone Types**

Program each of the control panel's 6 zones as any of the following zone types:

- Instant
- Delay
- 24-hour
- Follower
- Silent
- · Perimeter Instant
- · Perimeter Delay

In addition, zone 6 can be programmed for Request-to-Exit (REX).

# **Zone Bypass and Swinger Bypass**

Program each of the 6 zones as either a Bypass zone or a Swinger Bypass zone. A Bypass zone does not cause an alarm when it is faulted; 24-hour zones cannot be bypassed. A Swinger Bypass causes an alarm only the first time it is faulted; all other faults during this armed period are ignored.

# **Solid State Outputs**

The DS6R2 provides two solid state outputs, as follows:

- Program Solid State Output 1 for either Follows Armed State or Follows Zone Alarm.
- Program Solid State Output 2 for either Follows Fire Reset, Follows Alarm Output, or Follows Unlock Code.

#### **Quick Arm**

The system can be armed without entering a special code. This is ideal for situations that require others, such as maintenance personnel, to arm the system. Quick Arm is used for arming only and does not disarm the system.

## **Kev Switch Input**

Key Switch Input can be programmed for Allow Arm Only or Allow Arm Or Disarm, and can respond to either a momentarily or a continuously closed key switch.

<sup>&</sup>lt;sup>1</sup> The individual tenant unit can also act as a standalone system

## **Duress Code**

The Duress Code feature allows you to send a silent alarm to the central monitoring station if you are forced to disarm your security system against your will. When you enter the duress code, the system appears to disarm normally but, in fact, notifies the central monitoring system that you are in danger.

## **Built-in Tamper Switch**

The Built-in Tamper Switch notifies the DS6R2 if the enclosure cover is removed or if the unit is removed from the mounting wall.

# **Certifications and approvals**

Region	Certification	
China	CCC	2009031901000557

# Installation/configuration notes

## **Wiring Considerations**

Use at least 1.0 mm (20 AWG) shielded twisted-pair wire for the RS-485 bus; maximum length: 1200 m (3900 ft).

# Compatibility

Wireless receivers RF3212 and RF3212e

Wireless transmitters All DSRF devices that transmit at 304.00 MHz

or 433.42 MHz

Key fobs: RF3332 and RF3332e

RF3334 and RF3334e

# Parts included

Quant.	Component
1	DS6R2 Series Self-contained Control Panel
1	Literature, Installation Guide
1	Literature, User Guide

# **Technical specifications**

## **Environmental**

Environmental Protection:	DIN IEC 721-3-3, Class 1; For indoor use
Relative Humidity:	0% to 93% non-condensing
Temperature (operating):	-10°C to +50°C (+14°F to +122°F)
Temperature (storage):	-10°C to +55°C (+14°F to +131°F)

## Mechanical

Dimensions:	11.8 cm x 12.4 cm x 3 cm (4.7 in. X 4.9 in. x 1.2 in.)
Weight:	0.5 kg (17 oz)
Tamper:	Built-in cover and wall tamper

## **Electrical**

Operating Voltage:	9 VDC to 15 VDC
Zones:	Normally-open (NO) or normally-closed (NC) zones.
Zone Response Time:	500 ms
Zone EOL Resistor:	10 kΩ
Output Relay:	Normally-open (NO) or normally-closed (NC). Contacts rated for 3 A at 28 VDC
Solid State Outputs:	Two DC current sink outputs. 250 mA current sink maximum per output at 0.1 VDC saturation. The operating voltage cannot exceed 15 VDC.

# **Ordering information**

# **DS6R2 6-zone Self-contained Control Panel CN**

Self-contained, 6-zone control panel for use as a standalone security system or part of a multi-tenant system; for China.

Order number DS6R2-CHI

## Represented by:

# Americas:

Americas:
Bosch Security Systems, Inc.
130 Perinton Parkway
Fairport, New York, 14450, USA
Phone: +1 800 289 0096
Fax: +1 585 223 9180 security.sales@us.bosch.com www.boschsecurity.us

# Europe, Middle East, Africa:

Bosch Security Systems B.V. P.O. Box 80002 P.O. Box 80002 5617 BA Eindhoven, The Netherlands Phone: + 31 40 2577 284 Fax: +31 40 2577 330 emea.securitysystems@bosch.com www.boschsecurity.com

#### Asia-Pacific:

Asia-Pacific:
Robert Bosch (SEA) Pte Ltd, Security
Systems
11 Bishan Street 21
Singapore 573943
Phone: +65 6571 2808
Fax: +65 6571 2699
apr.securitysystems@bosch.com
www.boschsecurity.asia

#### China:

China:
Bosch (Shanghai) Security Systems Ltd.
201 Building, No. 333 Fuquan Road
North IBP
Changning District, Shanghai
200335 China
Phone +86 21 22181111
Fax: +86 21 22182398 www.boschsecurity.com.cn

#### America Latina:

America Latina:
Robert Bosch Ltda Security Systems Division
Via Anhanguera, Km 98
CEP 13065-900
Campinas, Sao Paulo, Brazil
Phone: +55 19 2103 2860
Fax: +55 19 2103 2862
latam.boschsecurity@bosch.com
www.boschsecurity.com