DCN-SWVAML Voice Activated Microphone Logging

www.boschsecurity.com





DCN-SWVAML, Voice Activated Microphone Logging, enables the logging of who speaks while the DCN system is in voice mode. This enables automatic camera control using DCN-SWSACC, or recording speaker-names while the system is in voice-activated mode.

System overview

The DCN-SWVAML is an addition to the DCN-SW software and enables logging of microphone activity during Voice mode. Voice Activated Microphone Logging is developed for wired single CCU systems, based on the DCN-CCU(B)2, and for single delegate units. It is intended for applications where only one speaker is active at a time, for instance courtrooms.

Functions

The following functions are configurable:

- Microphone logging:
 - The logging can be enabled to start the monitoring of microphone activity during voicemode.

- Log microphone activity to third party applications during Voice mode
- Use automatic camera control in Voice mode
- Record speaker information in Voice mode
- See who speaks during Voice mode

- The audio level, at which the microphone is regarded as being on, can be set via audio threshold.
- The time the microphone stays on, after the audio level drops below the threshold, can be set via release time.
- Chairman priority:
 - The priority can be enabled to mute other microphones based on the audio on the chairman unit.
 - The priority chime can be enabled to automatically sound the priority chime when the chairman speaks.
 - The audio level, at which the chairman microphone is regarded as being on, can be set via audio threshold.
 - The time the chairman microphone stays on, after the audio level drops below the threshold, can be set via release time.

Ordering information

DCN-SWVAML Voice Activated Microphone Logging Voice Activated Microphone Logging module. Order number **DCN-SWVAML**

DCN-SWVAML-E Voice Activated Microphone Logging Ecode

Voice Activated Microphone Logging module. Electronic authorization code. Order number **DCN-SWVAML-E**

DCN-SW Conference Software Main Module

A platform on which all other Conference software modules run. Order number **DCN-SW**

DCN-SW-E Conference Software Main Module E-code

A platform on which all other Conference software modules run. Electronic authorization code. Order number **DCN-SW-E**

Represented by:

Americas:

Bosch Security Systems, Inc. 12000 Portland Avenue South Burnsville MN 55337, USA Phone: +1-800-392-3497 Fax: +1-800-955-6831 audiosupport@us.bosch.com www.boschsecurity.com Europe, Middle East, Africa: Bosch Security Systems B.V. P.O. Box 80002

P.O. Box 80002 5617 BA Eindhoven, The Netherlands Phone: + 31 40 2577 284 Fax: +31 40 2577 330 emea.securitysystems@bosch.com www.boschsecurity.com

@ Bosch Security Systems 2013 | Data subject to change without notice 7650298635 | en, V3, 03. Jun 2013

Asia-Pacific: Robert Bosch (SEA) Pte Ltd, Security

Systems 11 Bishan Street 21 Singapore 573943 Phone: +65 6571 2808 Fax: +65 6571 2808 Fax: +65 6571 2699 apr.securitysstems@bosch.com www.boschsecurity.asia

China:

Bosch (Shanghai) Security Systems Ltd. 201 Building, No. 333 Fuquan Road North IBP Changning District, Shanghai 200335 China Phone +86 21 22181111 Fax: +86 21 22182398 www.boschsecurity.com.cn

America Latina:

Robert Bosch. Ltda Security Systems Division Via Anhanguera, Km 98 CEP 13065-900 Campinas, Sao Paulo, Brazil Phone: +55 19 2103 2860 Fax: +55 19 2103 2862 al.security.systems@bosch.com www.boschsecurity.com