

# **INT-TXO Transmitter OMNEO** INTEGRUS



The INT-TXO is the central element in the INTEGRUS system that allows INTEGRUS to interact with the DICENTIS Conference System. The INT-TXO modulates the signals into carrier waves and transmits them to the radiators in the room.

When connected to a DICENTIS system, the Transmitter OMNEO is fully controlled by DICENTIS and does not require any configuration.

# Functions

- The Transmitter OMNEO can be connected to, and controlled by, a DICENTIS system. In this setup, it can also be powered through a DICENTIS cable, including the RSTP functionality
- The INT-TXO can be switched to the slave mode to act as a repeater of another INT-TXO. In this case, the signal is received through the coaxial input and synchronizes with the master INT-TXO. The slave mode is enabled through a switch on the rear of the device

# **Controls and indicators**

- System and radiator status visible at the front of the device
- Two LEDs are located near each Ethernet connector

## Interconnections

- Different power options that do not influence each other:
  - DC wall adapter
  - DICENTIS
  - PoE

- Fully integrated with the DICENTIS Conference System, no configuration required
- Excellent audio quality
- 4 channels out of the box
- Up to 28 licenses can be added to the INT-TXO for a total of 31 languages and 1 floor
- Infrared allows freedom of movement for participants
- One BNC connector for accepting a HF signal from another transmitter. The INT-TXO includes a switch to set the transmitter as a slave to another transmitter with synchronized audio
- Six BNC connectors for output of HF signal to up to 30 radiators
- Power through the DICENTIS system cables
- Two DICENTIS connectors compatible with RJ45 connectors for:
  - Loop through in a DICENTIS system, including RSTP
  - Powering through PoE.

Parts included		
Quantity	Component	
1	INT-TXO Transmitter OMNEO	
1	DC wall adapter	
Technical specifications		

# echnical specifications

# Electrical

Power consumption (W)	10 W
Nominal voltage (VDC)	48 VDC
PoE input	PoE IEEE 802.3af Type 1, Class 3; PoE IEEE 802.3at Type 1, Class 3
Battery type	Lithium

7			
Mechanical			
Rack-mounted; Tabletop			
44.45 mm x 442 mm x 390 mm			
1.75 in x 17.40 in x 15.35 in			
RAL 9017 Traffic black			
Environmental			
5 °C – 45 °C			
41 °F – 113 °F			
5 °C – 45 °C			
41 °F – 113 °F			
-30 °C – 70 °C			
-22 °F – 158 °F			
5% - 95%			

# **Ordering information**

# **INT-TXO Transmitter OMNEO**

Integrus 4-channel transmitter. Order number INT-TXO | F.01U.351.763

# **Software Options**

**INT-L1AL 1 Additional language license** License to add one language channel to INT-TXO. Order number INT-L1AL | F.01U.406.605

# Services

**EWE-INTTXO-IW 12 mths wrty ext Transmitter OMNEO** 12 months warranty extension Order number EWE-INTTXO-IW | F.01U.406.935

#### Represented by:

Europe, Middle East, Africa: Bosch Security Systems B.V. P.O. Box 80002 5600 JB Eindhoven, The Netherlands Phone: + 31 40 2577 284 www.boschsecurity.com/xc/en/contact/ www.boschsecurity.com

Germany: Bosch Sicherheitssysteme GmbH Robert-Bosch-Ring 5 85630 Grasbrunn Tel.: +49 (0)89 6290 0 Fax:+49 (0)89 6290 1020 de.securitysystems@bosch.com www.boschsecurity.com

### North America:

Bosch Security Systems, LLC 130 Perinton Parkway Fairport, New York, 14450, USA Phone: +1 800 289 0096 Fax: +1 585 223 9180 onlinehelp@us.bosch.com www.baschescurity.com www.boschsecurity.com

#### Asia-Pacific:

Asia-Pacific: Robert Bosch (SEA) Pte Ltd, Security Systems 11 Bishan Street 21 Singapore 573943 Phone: +65 6571 2808 Fax: +65 6571 2699 www.boschsecurity.com/xc/en/contact/ www.boschsecurity.com