



BOSCH

IP Matrix 9.60

VJD-8000 | VJD-7513



en

Configuration manual

Table of contents

1	Introduction	4
1.1	About this manual	4
1.2	Conventions in this document	4
1.3	Additional documentation	4
2	System overview	5
2.1	General information	5
2.2	Requirements	5
2.3	Functions	6
2.4	Restrictions	7
3	Installation	8
4	Configuration	9
4.1	Defining a general password	9
4.2	Adding decoders	9
4.3	Adding cameras	10
4.4	Adding camera sequences	11
4.5	Basic keyboard settings	11
5	Troubleshooting	12

1 Introduction

1.1 About this manual

This manual is intended for persons responsible for configuring and managing a CCTV system. This manual describes how to configure the program.

This document assumes that the reader is familiar with both the CCTV system and the other programs that are integrated into the system.

1.2 Conventions in this document

The following symbols and notations are used to draw attention to special situations:



Notice!

This symbol indicates special features and provides tips and information for easier, more convenient use of the software.

Terms that you can find in the program, such as menu options, commands or text in the user interface, are written in **bold**.

1.3 Additional documentation



Notice!

Read and follow the instructions in the hardware documentation

While setting up the hardware for IP Matrix, read and follow the instructions of the hardware documentation. The documentation contains important safety messages. It is mandatory to read and understand the safety messages prior to installation of the hardware.

More information

Find more information, software downloads, and documentation at: www.boschsecurity.com and the respective product page.

2 System overview

2.1 General information

The IP Matrix application turns a Bosch VIDEOJET decoder configuration into a stand-alone, IP-based CCTV surveillance system.

Basic configuration

With a KBD-UXF or KBD-Digital keyboard, and one or two displays connected to the decoder, up to 32 cameras can be controlled without a PC being needed for operation.

Maximum configuration

In a maximum setup with 4 decoders and 8 displays attached, 4 operators can control up to 128 cameras using 4 independently operating keyboards.

Connected displays

Up to 2 displays per monitor can be connected. Each display shows a monitor wall screen. Depending on the layout, the monitor wall screen shows 1 to 30 monitors identified by a unique index number in the group of 4 decoders.

Connected mode

A PC is only required for the setup and installation of the system or for maintenance purposes. The PC must be in the same network as the decoders.

Stand-alone mode

In operational mode the system communicates over the network connections between IP cameras, encoders and decoders, controlled and operated using a KBD-UXF and KBD-Digital keyboard. A network connection to a PC is not needed.

The IP Matrix application can be enhanced by recording devices that allow playback of recordings, controlled using the keyboard, if playback permission is granted.

Embedded into a wider CCTV system, the IP Matrix application can function as a satellite system. The super ordinate system can control the decoders of an IP Matrix like normal decoders. Besides that, the IP Matrix application works completely independent and is independent of PC control.

The IP Matrix application covers many applications where in analog systems the analog CCTV matrix switch Allegiant would be used. Therefore, the IP Matrix application can be seen as the IP-equivalent to an Allegiant matrix switch systems.

2.2 Requirements

Requirements for configuration purposes

Hardware	Personal Computer
CPU	Dual Core, 3.0 GHz or faster
RAM	Minimum 2 GB
Operating system	Windows Server 2008 R2 (64 bit) Windows 7 SP1 (64 bit) Windows 8.1 (64 bit) Windows 10 (64 bit)
Graphic card	Refers to MPEG-ActiveX 6.30 or VideoSDK 6.30
Ethernet card	100 Mbps
Sound card	Recommended

Software	Microsoft .NET 4.7.1
Free memory (installation)	250 MB (Configuration Manager, VideoSDK)

Requirements for installed software

The Configuration Manager 7.0 program or later is required.

Requirements for operational purpose

Make sure the following requirements are fulfilled:

- 1 to 4 ready-to-use Bosch VIDEOJET decoder with firmware 9.60 or later connected to a surveillance network (fully installed and ready for operation)
- 1 to 4 KBD-UXF or KBD-Digital keyboards (fully installed and ready for operation)
- 1 to 8 displays with appropriate interface connections or adapters

Note: Up to 2 displays per decoder can be connected.

- Fixed or moving cameras connected to the surveillance network
- A PC with Bosch Configuration Manager program installed and connected to the surveillance network (only for configuration purposes)



Notice!

Prior to operation, the IP Matrix application must be configured using the Configuration Manager program.

2.3

Functions

IP Matrix application

The IP Matrix application can be used to control IP-based monitoring systems.

An IP-based monitoring system consists of up to 4 decoders, up to 8 displays connected to the decoders, and up to 4 KBD-UXF or KBD-Digital keyboards controlling the monitoring system.

This monitoring system can control up to 128 cameras. A computer is not required.

In normal operation, the system works self-sufficient using the network connections between IP cameras, encoders and decoders. The operation is controlled by the keyboards.

As part of a larger CCTV system, the IP Matrix application can be used as a satellite system.

Camera sequences and AUTODOME presets

The IP Matrix application supports the configuration of up to 32 predefined camera sequences. You can switch these camera sequences instead of individual cameras to monitors.

These camera sequences enable cameras to be switched in a continuous sequence in accordance with a schedule.

Bosch AUTODOME cameras can be controlled as usual by using a KBD-UXF or KBD-Digital keyboard.

Fixed AUTODOME positions can be configured in the system as virtual cameras. For detailed information, refer to the camera's manual.

Configuration

The IP Matrix application can be configured using the Configuration Manager 7.0 program or later.

Attached keyboards

If a keyboard is connected to a decoder for the first time, the keyboard is locked and must be unlocked using a PIN code.

In locked state only the **Lock/Unlock** icon lights up; all other icons or keys are dark

Summary

The IP Matrix application provides the following main functions:

- Pure IP-based CCTV matrix system

- Up to 128 cameras, 8 monitors and 4 KBD-UXF or KBD-Digital keyboards
- No computer required to operate the system
- Automatic camera sequences
- Layout switching, single view and picture-in-picture
- Up to 9 favorite views with layouts and pre-defined camera connections
- Optional: playback of recordings managed by playback permission

2.4 Restrictions

Observe the following restrictions when using a IP Matrix system:

- The decoder dynamically adapts its performance to high loads by skipping frames, which can cause juddering in the video stream.
- Playback is only possible from local recordings, not from recordings managed by VRM.
- A long i-frame distance leads to less exact navigation in playback mode and lower performance in playback backwards mode.

3 Installation

Observe the requirements of the IP Matrix application (see *Requirements*, page 5).

**Notice!**

When installing devices, observe the safety instructions given in the respective manuals.

Installing displays

To install displays:

- ▶ Connect 1 or 2 displays to the display connectors of the VIDEOJET decoder.

**Notice!**

The actual sequence of the displays can be defined during the configuration of the IP Matrix application. When setting up the displays you must not follow a certain sequence.

Installing keyboards

To operate the IP Matrix application, at least 1 keyboard must to be connected to one of the VIDEOJET decoders.

To install keyboards:

- ▶ Connect at least 1 keyboard to one of the VIDEOJET decoders.

**Notice!**

If more than 1 keyboard is connected, all keyboards in the matrix have the same operation rights and can control the whole system.

Only 1 keyboard can be connected to a single decoder. Any additional keyboard must be connected to the next decoder without keyboard.

Finishing hardware installation

To finish the hardware installation:

1. After connecting the hardware components, turn on the devices.
2. On the configuration PC, start the Configuration Manager program.
3. Configure the IP Matrix application.

Refer to

- *Configuration*, page 9

4 Configuration

Before you can use the IP Matrix application, the system needs to be configured.

To configure the system:

1. Define a general password for all cameras.
See *Defining a general password*, page 9
2. Add 1 to 4 decoders, save their IP addresses, then configure the amount of displays connected to the decoders.
See *Adding decoders*, page 9
3. Add cameras to the IP Matrix application.
See *Adding cameras*, page 10
4. Add camera sequences and select the cameras that belong to the sequence.
See *Adding camera sequences*, page 11



Notice!

If you connect AUTODOME cameras to the matrix, you can use the preset positions of the cameras as if the cameras are individual cameras. For detailed information how to define the presets, refer to manual of the respective camera.

4.1 Defining a general password

How to get here: Configuration Manager program > click the **My Devices** tab > click the decoder in the tree structure

All cameras in the IP Matrix application must have a common user password. This password must be entered in the Configuration Manager program.

To define a common password:

1. Start the Configuration Manager program.
2. On the toolbar, click the **My Devices** tab.
3. Click the decoder.
4. In the view pane to the right, click the **Advanced** tab.
5. In the **General password** box, enter the password that should be used for all cameras.
6. Save the password.

The password is saved and can be used to connect to the cameras.

Note: To display the IP Matrix page, click the IP Matrix tab.

4.2 Adding decoders

How to get here: Configuration Manager program > click the **My Devices** tab > click the decoder in the tree structure

At least 1 decoder is required to create an IP Matrix system. In maximum configuration, the IP Matrix system can consist of up to 4 decoders.

To add a decoder to the IP Matrix application:

1. In the view pane to the right, click the **IP Matrix** tab.
2. Click the **Decoders** tab.

The **Decoders** pane is displayed.

Note: If the decoder is not part of the IP Matrix system, the **IP** boxes for the IP addresses appear dimmed.

3. Click **Set this device as master** to use the decoder as master for a new IP Matrix system. The IP address of the new master decoder is entered automatically.

Note: All settings are done through this master decoder. The master controls the other decoders in a multi-decoder matrix.

4. If necessary, up to 3 additional decoders can be added as slaves.
To do this, enter the IP addresses of the decoders in the respective boxes.
5. In the **Displays** box, select the number of displays connected to the decoder.
6. In the **Display 1 start monitor** box, enter the number of the first monitor to be shown on display 1.
7. In the **Max monitor count** box for display 1, enter the maximum amount of monitors to be shown on display 1.
8. In the **Display 2 start monitor** box, enter the number of the first monitor to be shown on display 2.
Note:
 - The value in the **Display 2 start monitor** box must be greater than the value in the **Display 1 start monitor** box plus the value in **Max monitor count** box for display 1.
 - You can deactivate the second display if only one monitor is connected.
9. In the **Max monitor count** box for display 2, enter the maximum amount of monitors to be shown on display 2.
The monitor settings control the sequence of the displays within the matrix.
10. To add up to 3 additional decoders, repeat the above steps accordingly.
11. If needed, click **Show text overlays**.
The monitor indexes and decoder IP addresses are displayed as overlays in each monitor window. This information allows you to identify the individual monitors easily and helps you to renumber monitors consecutively over the monitor wall, independent from the original mounting order of the displays.

4.3 Adding cameras

How to get here: Configuration Manager program > click the **My Devices** tab > click the decoder in the tree structure

To display allocated cameras:

1. In the view pane to the right, click the **IP Matrix** tab.
2. Click the **Cameras** tab.
The **Cameras** pane with the allocated cameras is displayed.
3. If necessary, select the stream and preset for each camera or leave the default value (Stream 1, no preset).

To add a camera:

1. In the view pane to the right, click the **IP Matrix** tab.
2. Click the **Cameras** tab.
The **Cameras** pane with the allocated cameras is displayed.
3. In the **Cameras** pane, click **Edit**.
The **Edit camera list** dialog box is displayed, showing the available and allocated cameras.
4. Drag a camera from the **Available devices** column to the **Allocated devices** column.
Note: You can select multiple cameras and drag them to the **Allocated devices** column.
5. Click **OK**.

To remove a camera:

1. In the view pane to the right, click the **IP Matrix** tab.
2. Click the **Cameras** tab.
The **Cameras** pane with the allocated cameras is displayed.
3. In the **Cameras** pane, click **Edit**.
The **Edit camera list** dialog box is displayed, showing the available and allocated cameras.

4. Drag a camera from the **Allocated devices** column to the **Available devices** column.
Note: You can select multiple cameras and drag them to the **Available devices** column.
5. Click **OK**.

4.4 Adding camera sequences

How to get here: Configuration Manager program > click the **My Devices** tab > click the decoder in the tree structure

You can define a maximum of 32 independent camera sequences. The camera views are displayed in sequence.

To add camera sequences:

1. In the view pane to the right, click the **IP Matrix** tab.
2. Click the **Camera Sequences** tab.
The **Camera Sequences** pane is displayed.
3. Click **Add** to add a new sequence.
4. In the **Duration** box, enter the duration in seconds.
5. Click the **Cameras...** icon to the right.
The **Edit camera list** dialog box is displayed, showing the available and allocated cameras.
6. To add a camera:
Drag a camera from the **Available devices** column to the **Allocated devices** column.
Note: You can select multiple cameras and drag them to the **Allocated devices** column.
7. To remove a camera:
Drag a camera from the **Allocated devices** column to the **Available devices** column.
Note: You can select multiple cameras and drag them to the **Available devices** column.
8. Click **OK**.

4.5 Basic keyboard settings

How to get here: Configuration Manager program > click the **My Devices** tab > click the decoder in the tree structure

If you want to protect accessing the IP Matrix application, you must enter a numeric passcode to unlock the keyboard.

To define a passcode:

1. In the view pane to the right, click the **IP Matrix** tab.
2. Click the **General** tab.
The **Keyboard** pane is displayed.
3. In the **Passcode** box, enter a numeric passcode that will be used to unlock the keyboard.
4. In the **Auto lock** list, select a period.
The keyboard will be locked automatically if there is no keyboard action during that period.
5. To enable playback permission, select the **Playback** check box

5 Troubleshooting

For general appearance check the **Advanced** tab settings of each decoder.

Issue	Solution
Cannot access cameras.	Check the general password. All cameras must use this password as a common user password.
In a multi-decoder setup: Settings in the Configuration Manager program do not affect the IP Matrix application.	Only settings on the master decoder affect the IP Matrix application. Select the master decoder and try again.
The selected monitor is not highlighted.	Check the distance between cameos. Increase the distance if necessary.
No connections after restarting the decoder.	Enable reconnect on restart.
Not all monitors can be populated with video connections.	Check the number of decoders that defines the maximum possible connections on one decoder device. Or Your layout may provide more monitors than allowed by the maximum monitors per display.



Bosch Security Systems B.V.

Torenallee 49
5617 BA Eindhoven
Netherlands

www.boschsecurity.com

© Bosch Security Systems B.V., 2019