

Safety

Danger!

Electricity



Injuries due to electricity are possible.

Switch off all electricity while installing the product.

Do not open or modify this product, except if described in this manual.

Old electrical and electronic appliances

Electrical or electronic devices that are no longer serviceable must be collected separately and sent for environmentally compatible recycling (in accordance with the European Waste Electrical and Electronic Equipment Directive).

To dispose of old electrical or electronic devices, you should use the return and collection systems put in place in the country concerned.

Short information

This zone expander module integrates manual conventional sensor technology (e.g. conventional magnet contacts) into the local security network (LSN).

System overview

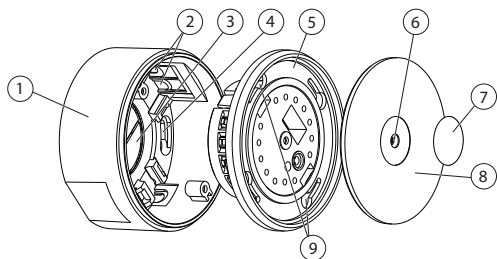


Fig. 1: System overview

| Element | Description |
|---------|--|
| 1 | Surface socket |
| 2 | Cable entry for surface cables and cable ducts |
| 3 | Cable entry for recessed cables |
| 4 | Opening for wood screw |
| 5 | Mount with PCB |
| 6 | Opening for housing cover fastening screw |
| 7 | Adhesive seal |
| 8 | Housing cover |

| | |
|---|------------------------------|
| 9 | Opening for fastening screws |
|---|------------------------------|

Mounting the zone expander module

How to mount the zone expander module

1. Use surface socket as a template and drill the fastening holes (Ø 4mm).
2. Insert S4 dowels.
3. Break out the suitable cable entry.
4. Secure the surface socket using wood screws (3 x 25 or 2.5 x 30).
5. Insert the connecting cable and relieve the strain on the cable by using a cable tie.
6. Connect the PCB.
7. Place the mount with PCB into the surface socket and lock it in position using the two fastening screws.

Closing the zone expander module

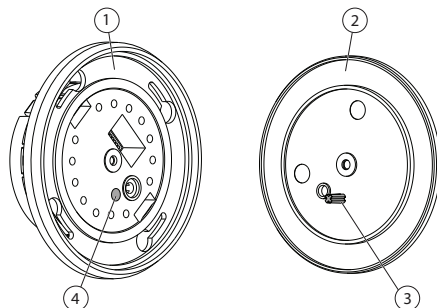


Fig. 2: Closing the zone expander module

| Element | Description |
|---------|----------------------------|
| 1 | Mount with PCB |
| 2 | Housing cover |
| 3 | Insertion post |
| 4 | Opening for insertion post |

How to close the zone expander module

1. To close the zone expander module, put the housing cover onto the mount with PCB while ensuring that the insertion post (element 3 in figure above) on the lower side of the housing cover fits into the designated opening for the insertion post (element 4 in figure above) on the mount with PCB. Do not force the insertion post into any of the other openings.
2. Secure the housing cover with the housing cover fastening screw.

3. Put the adhesive seal onto the housing cover fastening screw.

Connection



Caution!

Incorrect cabling
Incorrect cabling leads to malfunction of the system.



Caution!

Cable length
Exceeding the permitted cable length is not covered by CE declarations and leads to malfunction of the system.

- Do not exceed the total cable length of **500m** for the primary cables, the control cables and the contact cables of EM 55, KD55/1, NKK, NNK 100 2-wire, NVK and IC 400.

Permitted cable length of the primary cables (PL)

- Maximum length of one unshielded cable: 3m
- Maximum length of all shielded cables: 500m

LSN connection

- Voltage supply can be fed-through (otherwise free terminals for 0V/+U).
- Incoming and outgoing LSN can be swapped over.

4-wire and 2-wire connections

Notice!


A mixed operation of a 4-wire connection at one of the primary outputs and a 2-wire connection at the other primary output is not permitted.

Notice!

For a 4-wire connection always use unshielded cables.
For a 2-wire connection always use shielded cables.

4-wire connection (unshielded)


- Use a 4-wire connection with an unshielded cable with a maximum length of 3 m and the internal EOL resistor (e.g. for magnetic contacts).
- With an unshielded cable, do **not** connect contacts with metallic enclosure.

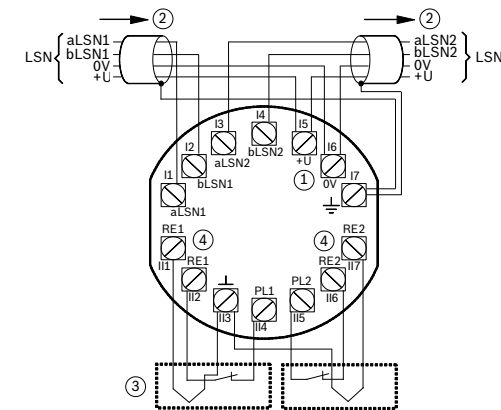

| Element | Description |
|---------|---|
| 1 | Terminal for fed-through voltage supply |
| 2 | LSN connection |
| 3 | 4-wire connections, e.g. magnet contacts (unshielded) |
| 4 | Internal EOL 12.1 kΩ resistors, already onboard |

2-wire connection (shielded)


- Use a 2-wire connection with a shielded cable with a maximum length of 500 m and an external EOL resistor (e.g. for lock contacts).
- Connect shielding only to the zone expander module.
- Use one ferrite bead per shielding.

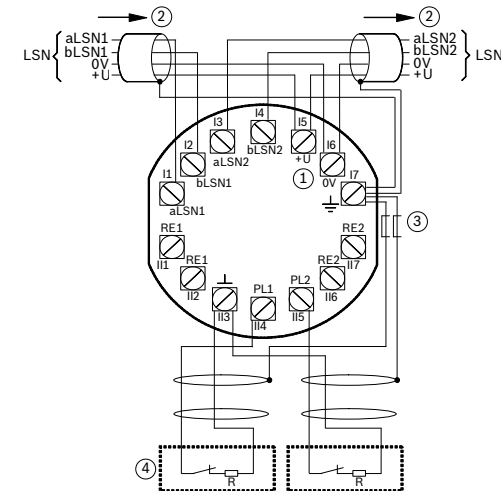

| Element | Description |
|---------|---|
| 1 | Terminal for fed-through voltage supply |

| | |
|---|--|
| 2 | LSN connection |
| 3 | Ferrite bead (not part of the delivery); approved: Wuerth # 74270017 |
| 4 | 2-wire connections, e.g. lock contacts |

DIP switch settings for LSN improved mode

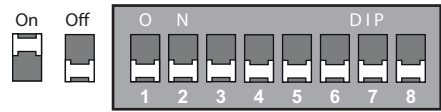

DIP switch settings for LSN classic mode



Technical data

Electrical

| | |
|-----------------------------------|------|
| Minimum operating voltage in VDC | 10 |
| Maximum operating voltage in VDC | 33 |
| Maximum current consumption in mA | 0.6 |
| Number of primary lines | 2 |
| Terminal resistance in KΩ | 12.1 |

Environmental

| | |
|-------------------------------------|------|
| Minimum operating temperature in °C | 0 |
| Maximum operating temperature in °C | 50 |
| Protection class | IP40 |
| Security level | IK04 |
| Environmental class | II |

Mechanical

| | |
|-------------------------|-----------|
| Dimension in cm (Ø x D) | 7.6 x 3.8 |
| Housing material | ABS |
| Color | RAL 9002 |
| Weight in g | 83 |



Expansion module, 2-zone, surface, LSN
ISP-EM55SM-120



en Installation manual

Bosch Security Systems B.V.
Torenallee 49
5617 BA Eindhoven
The Netherlands
www.boschsecurity.com
© Bosch Security Systems B.V., 2019