


User's Guide for the RF3334E Wireless Keyfob

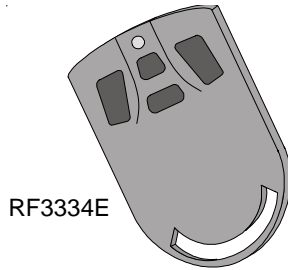

1.0 General Information


The RF3334E is a battery-operated, hand-held four-button RF transmitter. It can be used to send system arm, system disarm, and panic command signals to receiver(s) and repeater(s) in compatible wireless security systems. It also has two option keys whose functions are defined by the user.

2.0 Specifications

- **Dimensions:** 38 mm x 63 mm x 13 mm
- **Operating Temperature:** -20°C to +65°C. Relative humidity ranges from 0% to 95% (non-condensing).
- **Operating Voltage:** 4.4 VDC to 6.6 VDC, nominal 6 VDC supplied by two 3 VDC lithium batteries.
- **Carrier Frequency:** 433.42 MHz \pm 75 kHz
- **Battery Life:** A minimum of 5 years under normal operating conditions with the recommended battery types.
- **Recommended Battery Types:** Duracell DL2025, Eveready CR2025, or Panasonic CR2025.

3.0 Features of the RF3334E


The RF3334E can arm and disarm your alarm system. The keyfob has the ability to send a Panic code to your monitoring company if your security system is programmed to do so. It can also be programmed to control other devices within the protected area. The LED will flash to indicate that a signal has been sent to your alarm system.

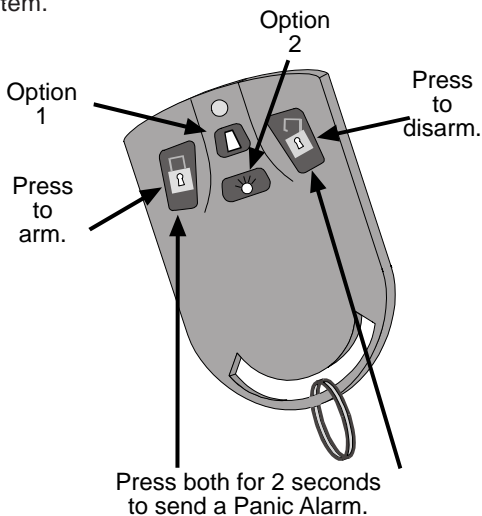


4.0 Battery Replacement

The batteries will need to be replaced approximately every 5 to 6 years. If you notice the range of the keyfob is decreasing or if the LED is not working, it may be time to replace your batteries. Battery life will vary depending on the amount of use. Using the recommended battery types ensures correct operation of the keyfob.

1. Remove the cover using a small screwdriver.

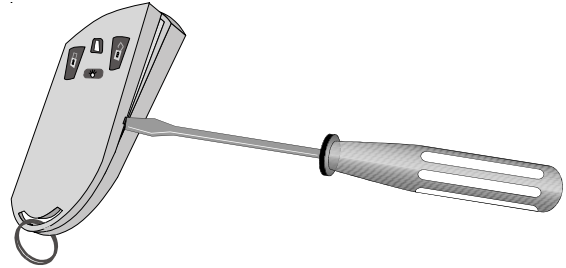

2. Insert the new batteries and observe the polarity.

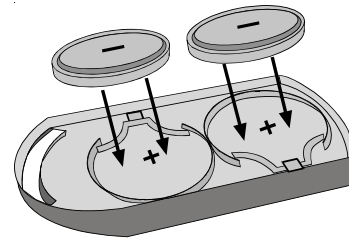

3. Replace the cover.



