


Solution 6000

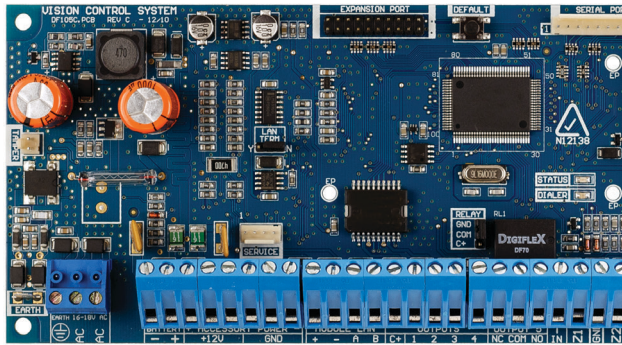

Security Systems

EN

Quick Start Guide
Security System

BOSCH

Copyright Notice

Unless otherwise indicated, this publication is the copyright of Bosch Security Systems Pty Ltd ("Bosch"). All rights are reserved. You may download a single copy of this publication. By downloading the publication you agree that you will: (i) only use the publication for your own reference; (ii) not commercially exploit or charge any person for the use of the publication; and (iii) not modify the publication in any way without the prior written permission of Bosch. Except as specified above or where authorised by the Copyright Act 1968 (Cth), no part of this publication may be reproduced, transmitted, modified or stored in any form or by any means, without the prior written permission of Bosch.

Trademarks

Throughout this document trademark names may have been used. Rather than put a trademark symbol in every occurrence of a trademark name, we state that we are using the names only in an editorial fashion and to the benefit of the trademark owner with no intention of infringement of the trademark.

Notice of Liability

While every effort has been taken to insure the accuracy of this document, neither Bosch Security Systems Pty Ltd nor any of its official representatives shall have any liability to any person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by the information contained in this book. Should you find any error or inconsistency, please notify us accordingly.

Bosch Security Systems Pty Ltd reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

Telepermit Note

The grant of a Telepermit for a device in no way indicates Telecom acceptance of responsibility for the correct operation of that device under all operating conditions.

This equipment shall not be used in any manner that could constitute a nuisance to other Telecom customers.

Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.


The transmit level from this device is set as a fixed level and because of this there may be circumstances where the performance is less than optimal. Before reporting such occurrences as faults, please check the line with a standard telepermitted telephone.

Warnings

1. This product must be installed by a qualified and licensed security installer.
2. This product may not perform as expected if installed incorrectly.
3. Some features of this product, including but not limited to Back to Base reporting, SMS and Email Reporting and Automatic Time and Date Adjustments require a working telephone line to operate and telephone communication service provider charges are applicable.
4. Australian standard AS 2201 requires regular service by qualified and licensed security persons and regular user testing. Please consult your security alarm company for further details.
5. Incorrect programming of parameters can result in operation contrary to what may be desired.
6. Leave the mains adapter plugged in at all times.
7. Leave the telephone line plugged in at all times under normal conditions.
8. The Product Identification Label for this product which is supplied in the resistor pack, must be affixed to the outside of the enclosure during installation.



BOSCH

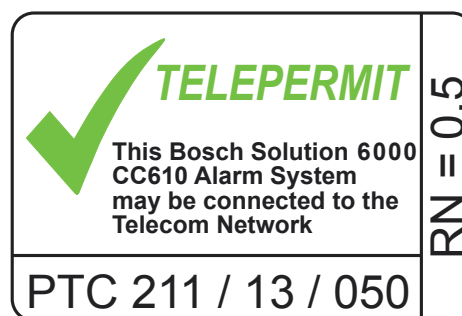

9. This equipment shall not be set up to make automatic calls to the Telecom '111' Emergency Service.

TABLE OF CONTENTS

Copyright Notice	2
Trademarks	2
Notice of Liability.....	2
Telepermit Note	2
FEATURES	4
OVERVIEW	4
ABOUT THE PANEL.....	5
Enclosures	5
Enclosure Fixing Method.....	5
Installing The Tamper Switch	5
Enclosure Module Spaces.....	5
Installing Panels and Modules.....	6
Connecting Power To The Panel.....	8
Connecting The Battery	8
AC Mains Transformer Option.....	8
Panel LED Indicators.....	8
WIRING DIAGRAMS.....	9
EOL Resistor Colours and Values.....	9
LAN Overview	10
LAN Wiring	10
System Earthing.....	11
Terminating the LAN	11
PCB Layout.....	12
Connection Diagram.....	13
Terminal Descriptions	14
Board Connectors.....	14
ABOUT THE KEYPAD	15
Status Icons / LED's.....	16
Keypad Tones	16
Keypad & Readers Setup.....	17
DIP Switch Address Select.....	17
Rotary Switch Address Select.....	17
DTMF Control Functions	18
Programming Overview.....	18
Entering Programming Mode.....	18
Exiting Programming Mode	18
Navigating The Menu.....	18
Command Menu.....	19
Programming Option Bit Menus.....	19
Alpha Text.....	19
Telephone Numbers.....	19
List Options.....	19
Clock Programming.....	20
GETTING STARTED BACK TO BASE.....	20
SERVICE MODE.....	20
DEFAULTING THE SYSTEM.....	20
DOMESTIC TEMPLATE DEFAULTS.....	21
DIRECT LINK PROGRAMMING	21
ZONE ARRAY	21
DOOR ARRAY	21
OUTPUT ARRAY	22
BASIC REPORTING REFERENCE	22
MENU REFERENCE TABLE.....	23
PROGRAM LOCATIONS	26
Access Programming	26
User Default Table	26
Area Programming.....	28
Input Programming	30
Zone Assignments	31
Zone Default Table.....	32
Output Programming	34

Comms Programming	38
Device Programming	45
System Programming	49
Testing The System	53
Installation Details.....	54

FIGURES

Figure 1: PCB and Mounting Clip Installation Diagram	5
Figure 2: Tamper Bracket Installation.....	5
Figure 3: MW720B - Small Enclosure Details	6
Figure 4: PCB Mounting Clip	6
Figure 5: MW720B Configuration Examples	6
Figure 6: MW730B - Large Enclosure Details	7
Figure 7: MW730B Configuration Examples	7
Figure 8: Internal Transformer Connection Diagram.....	8
Figure 9: N/C No EOL Zone	9
Figure 10: N/C Single EOL Zone	9
Figure 11: N/C Split EOL Zone.....	9
Figure 12: N/C Zone With Tamper.....	9
Figure 13: N/O No EOL Zone	9
Figure 14: N/O Single EOL Zone.....	9
Figure 15: N/O Split EOL Zone	9
Figure 16: N/O Zone With Tamper.....	9
Figure 17: EOL Resistor Colour Chart	9
Figure 18: LAN Connection Using 2 Pair Security Cable.....	10
Figure 19: LAN Connection Using Twisted Pair Cable.....	11
Figure 20: Solution 6000 Board Layout	12
Figure 21: Solution 6000 Connection Diagram	13
Figure 22: Keypad Emergency Alarm Trigger's	15
Figure 23: Keypad DIP Switch Address Settings.....	17
Figure 24: Rotary Switch Address Settings	17
Figure 25: Sample Option Bit Menu Display.....	19
Figure 26: Area Text Programming Display.....	19
Figure 27: Telephone Number Programming Display	19
Figure 28: List Option Programming Display	20
Figure 29: Clock Programming Display	20
Figure 30: Custom Installer Banner Sample.....	52

TABLES

Table 1: Expansion Options	5
Table 2: Dialler Indicator LED	8
Table 3: Status Indicator LED.....	8
Table 4: Terminal Block Descriptions.....	14
Table 5: Board Connector Descriptions.....	14
Table 6: Keypad Key Functions	15
Table 7: ICON & LED Indicator Meanings	16
Table 8: Keypad Tones.....	17
Table 9: DIP Switch Address Settings	17
Table 10: Rotary Switch Address Settings.....	17
Table 11: DTMF Remote Control Functions.....	18
Table 12: Keys Used During Programming.....	19
Table 13: Text Keypad Character Set	19
Table 14: Phone Number Character Set	19
Table 15: Domestic Default Settings	21
Table 16: Shortform Point ID Listing.....	22
Table 17: Menu Structure And Layout	25
Table 18: User Default Programming Options.....	26
Table 19: Zone Assignments.....	31
Table 20: Zone Defaults.....	32
Table 21: Output Default Table.....	34
Table 22: Output Event Types	35
Table 23: Address Configuration and Output Assignments	36
Table 24: One-Shot Polarity Example.....	36
Table 25: Macros Script Characters	37
Table 26: Macros Operator Characters.....	38
Table 27: Macros Scene Characters.....	38
Table 28: Macro Scene Operator Characters.....	38

Features

Listed below are the main features of the Solution 6000 Control Panel.

- ◆ Individual Box Tamper Circuit Monitoring
- ◆ Report Via Email (Internet)
- ◆ Telephone Line Busy Tone Detect
- ◆ RAS Intelli-Connect® CLI Caller Line Identification
- ◆ Daylight Savings
- ◆ Senior Watch
- ◆ GSM/GPRS/Ethernet Reporting Options
- ◆ System Maintenance Interval Reminder
- ◆ System Weekly Test Reminder
- ◆ Area Inactivity Interval
- ◆ Up to 16 Access Doors
- ◆ Temporary PIN
- ◆ Dual Reporting
- ◆ Dual Redundant Reporting
- ◆ Alarm Report Abort/Cancel Options
- ◆ 8 Programmable Holiday Calendars
- ◆ 16 Programmable TimeZones
- ◆ 8 On-board Zones (Single EOL) / 16 On-Board Zones (Dual EOL)
- ◆ Expandable To 144 Zones)
- ◆ Fire Alarm Verification
- ◆ 990 PIN Users
- ◆ 4 Supervised High Power Digital Outputs
- ◆ 1 Relay 2 Amp Form (C) Contact (Expandable to 32)
- ◆ Supervised Siren Driver
- ◆ Partitionable To 8 Areas
- ◆ Dialler Reports SIA, Contact ID, SMS and Email Formats
- ◆ Supervised LAN Keypads (Maximum 16 Keypads)
- ◆ Keyswitch Input
- ◆ 2000 History Event Memory
- ◆ EMI / Lightning Transient Protection
- ◆ Fully Menu Text Programmable
- ◆ Programmable Via Solution Link Software (Remote/Direct)
- ◆ Telephone Line Fail Monitor
- ◆ TimeZone Executed Functions
- ◆ 60+ Output Event Types
- ◆ Exit Restart
- ◆ Expansion Module Supervision
- ◆ DTMF Tone Decoder Built In
- ◆ Remote Arming
- ◆ Fingerprint Reader Options

Overview

Zones

The Solution 6000 control panel provides up to 144 separate zones of protection. Zone programming determines the panel's response to open/short and tamper conditions on the zone loop.

Areas

The control panel supports up to 8 separate areas. You can assign all zones to a single area, or you can assign each zone to a combination of different areas.

You can arm and disarm the control panel by area, alternatively, you can arm and disarm several areas at the same time.

Dialler

The control panel has a built-in dialler to send reports to the receiving party (ie. Security company monitoring station, mobile phone etc).

Keypads

You can connect a maximum of 16 fully supervised keypads to the control panel. The available current affects the total number of keypads that you can connect without the need to provide additional power supplies.

History Log

The control panel can store up to 2000 history events from all 8 areas. All events are stored in the log, even if they are programmed not to report via the on-board dialler.

You can view the control panel's history log via keypad, or by connection of a personal computer (direct/remote) using the SolutionLink upload/download software.

Programming

You can program the Solution 6000 either by a keypad or using a personal computer using the Solution Link upload/download software.



About The Panel

Enclosures

The MW720B - Small Enclosure and MW730B - Large Enclosure have been designed to reduce installation time and improve aesthetics on larger installations where often multiple enclosures need to be located in close proximity to each other.

A number of new features have been incorporated including a new style tamper bracket which can be easily installed before or after the enclosure is mounted to the wall, an anti tamper lid which insures the cabinet tamper triggers when the lid is removed, easier access for flexible and rigid conduits, additional 20mm cable entry knockouts and a new board mounting system using removable spring clips.

The MW720B and MW730B enclosures include numerous holes, allowing the PCB mounting clips to be positioned in the most appropriate location for each installation.



For ease, it is recommended that the PCB mounting clips are installed from the rear of the enclosure before mounting it to the wall.

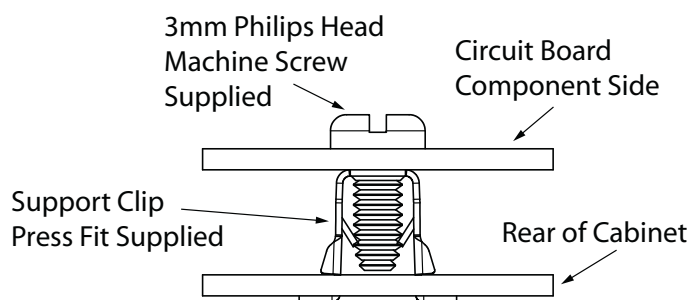


Figure 1: PCB and Mounting Clip Installation Diagram

Enclosure Fixing Method

CM720B - Small Enclosure

Use appropriate fasteners capable of handling a minimum of 6kg to fix the cabinet against a sturdy surface using the mounting holes provided.

CM730B - Large Cabinet

Use appropriate fasteners capable of handling a minimum of 12kg to fix the cabinet against a sturdy surface using the mounting holes provided.

Installing The Tamper Switch

The tamper switch can be located on either the left or right hand side of the cabinet to suit the installation. Before installing the bracket, fit the tamper lead to the switch and then insert it into the bracket.

Once the enclosure has been mounted to the wall, insert the tamper bracket into the rectangular hole in the top

flange of the enclosure and then slide the base of the bracket toward the top until the tamper switch locates in the rear of the enclosure.

Depress the tamper a few times with your finger to ensure smooth operation.



Figure 2: Tamper Bracket Installation

Enclosure Module Spaces

The MW720B enclosure has space for 2 large modules or 4 small modules while the optional MW730B enclosure has space for up to 4 large modules or 8 small ones. The enclosures have been designed so that any combination of large and small units can be neatly mounted together on the wall.

Each module is mounted to the enclosure using 4 or more clip in standoffs. The clips can be inserted from the rear of the enclosure before mounting it to the wall, or from the front of the enclosure after it has been mounted. Both methods should be performed using your finger tips to prevent damage to the standoff. (Standoffs and screws are supplied with each module).

All compatible add on modules will mount on these spaces. See below for list if modules which can be added to the control panel.

Module	Space Occupied
Solution 6000 Control Panel	2 Module Spaces
CM704B Zone Expander	1 Module Space
CM705B Universal Expander	2 Module Spaces
CM710B Output Expander	1 Module Space
CM720B LAN Power Supply	1 Module Space
CM760B Real Time Clock	1 Module Space
CM797B LAN Isolator Module	1 Module Space
CM195 RF Receiver Expander	1 Module Space

Table 1: Expansion Options

Use the above table to help determine which size cabinet you will require for the job.

On some export models, one module space will not be available as the mains transformer mounts in this location.

Installing Panels and Modules

Once the enclosure is secured in place, install the panels and modules onto the mounting clip using the supplied 3mm screws. Do not over tighten the screws.

When fitting panels or large modules, you should use 5 mounting clips, one in each corner of the PCB and one in the middle of the PCB underneath the main terminal blocks. When mounting small modules, only 4 clips are required, 1 in each corner.

Both enclosures are supplied with tamper switches, tamper leads, tamper brackets and a quantity of mounting clips and screws. If required, additional mounting clips and screws may be purchased in bags of 50 clips (10 packs x 5pcs). (P/N: MW890)

Note The supplied mounting clips are designed to use the 3mm machine screws supplied with the enclosure. The use of self tapping screws will damage the clips.

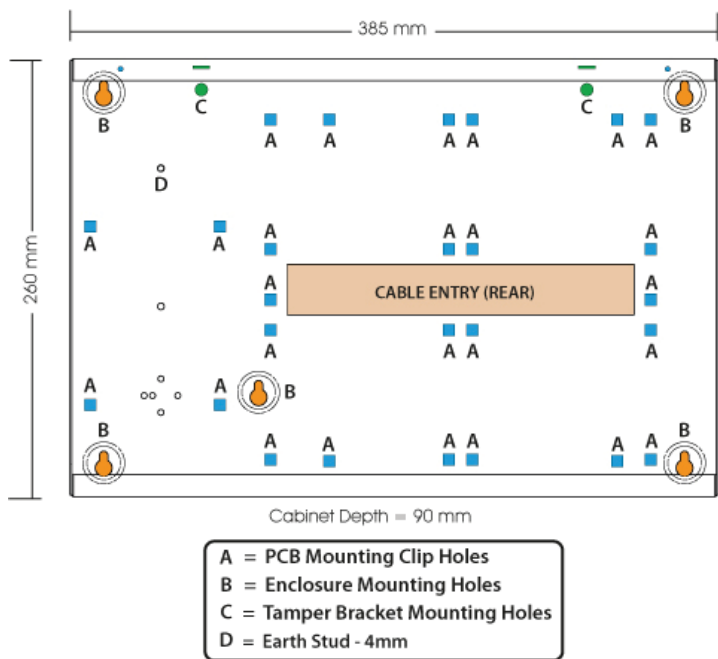


Figure 3: MW720B - Small Enclosure Details



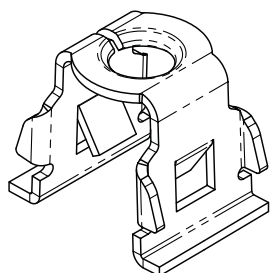


Figure 4: PCB Mounting Clip

The following example shows the MW720B - Small enclosure configured using 4 small modules.

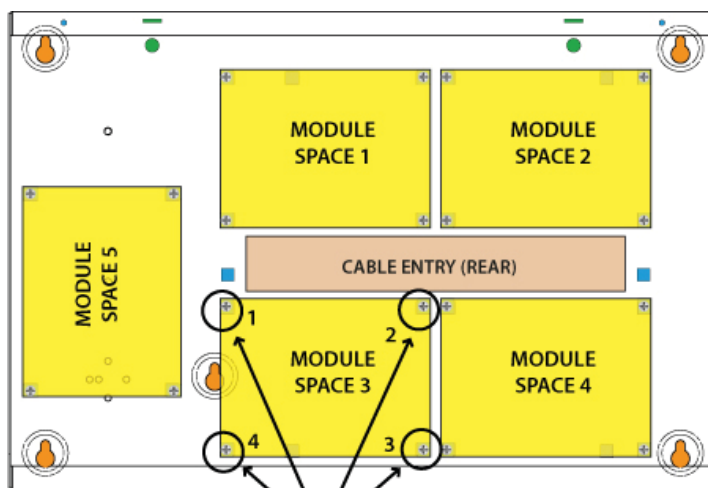

When installing small modules, you should fit 4 mounting clips as shown.

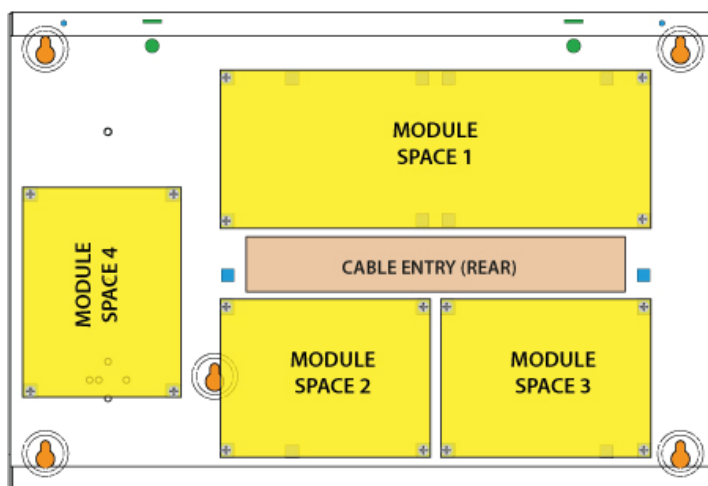

When installing large modules, you should fit 5 mounting clips as shown. Clip 5 provides support under the main terminal block only. No screw is fitted.

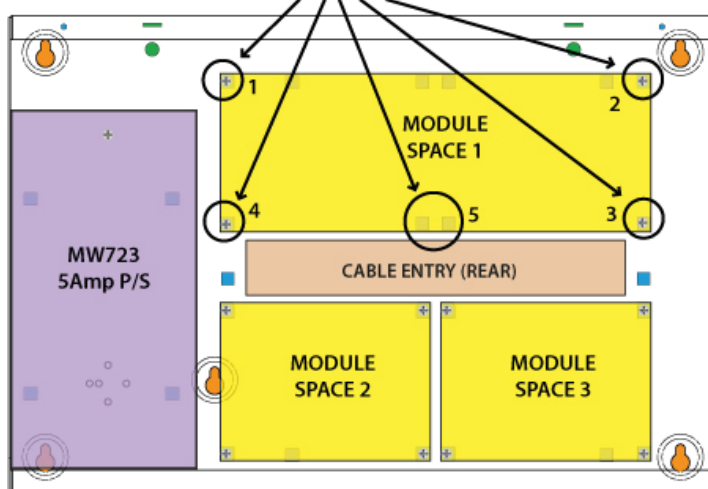


Figure 5: MW720B Configuration Examples


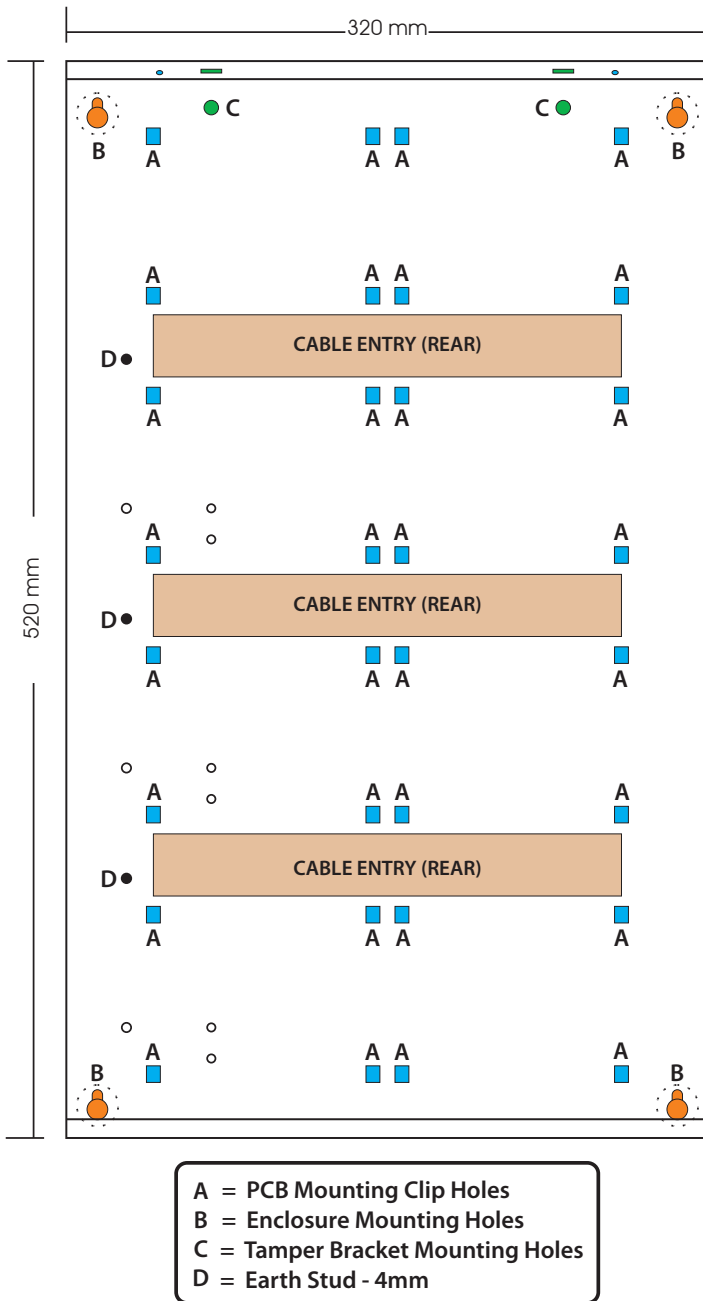


Figure 6: MW730B - Large Enclosure Details

The following examples show the MW710 -Large enclosure configured using 6 small modules and 1 large module.

When installing large modules you should fit 5 mounting clips as shown. Clip 5 provides support under the main terminal block only. No screw is fitted.

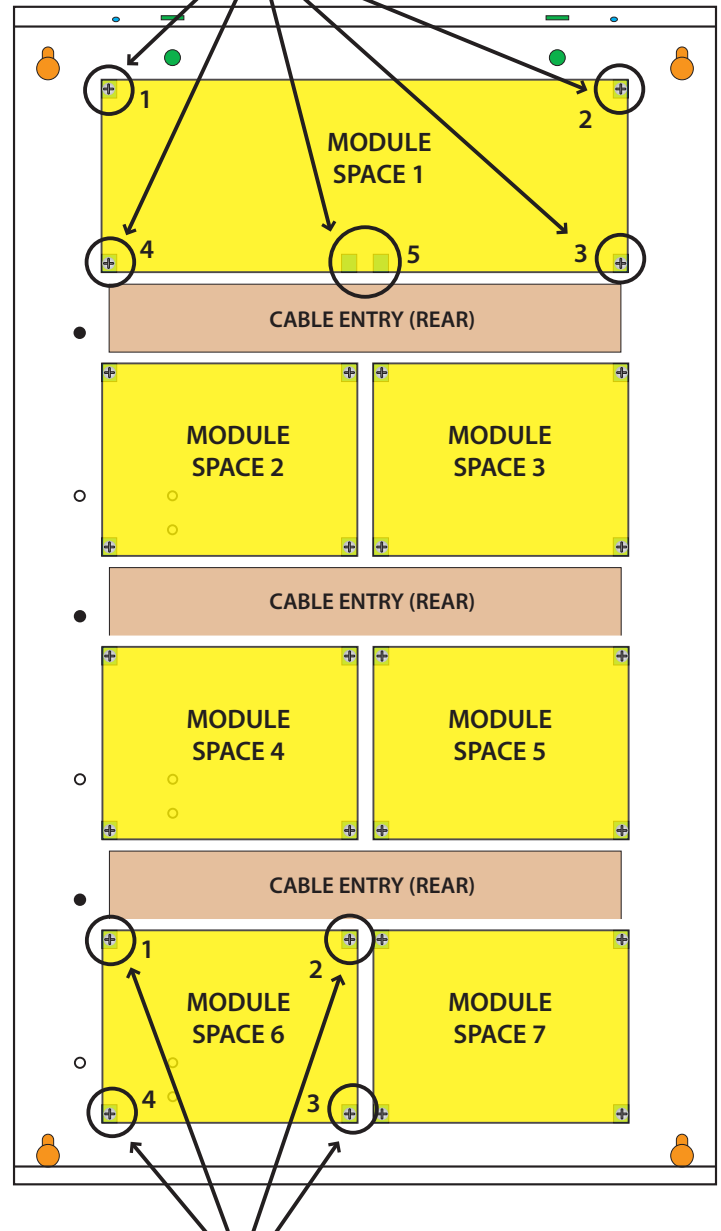

When installing small modules, you should fit 4 mounting clips as shown.

Figure 7: MW730B Configuration Examples

Connecting Power To The Panel

For normal operation, the panel requires both AC and DC power sources. The AC source can be provided either by an external adapter or by an internal transformer depending on the model and country of sale.

When connecting using the AC adapter, feed the cable in to the enclosure and terminate the wires on the removable terminal block supplied before connection it to the PCB.

If using a 3 wire adaptor, then the earth wire should also be terminated onto the terminal block. Always check the orientation of the terminal block with the PCB markings before connecting it to the PCB.

Connecting The Battery

The panel is supplied with a set of battery leads to suit the chosen enclosure. Connect the RED battery lead to the battery (+) terminal and the BLACK battery lead to the battery (-) terminal on the PCB.

Once terminated onto the PCB connect the other end of the leads to the battery paying attention to the polarity.

AC Mains Transformer Option

On models with an internal transformer, a permanent connection shall be made to the mains supply. See Figure 8. This must be completed by a suitably qualified electrician according to the applicable wiring standards and regulations.

Next connect the transformer output wires (red) to the removable terminal block supplied and then connect it to the PCB. Always check the orientation of the terminal block with the PCB markings before connecting.

Note For permanently connected equipment, a readily accessible disconnect device shall be installed in a location near to the equipment.

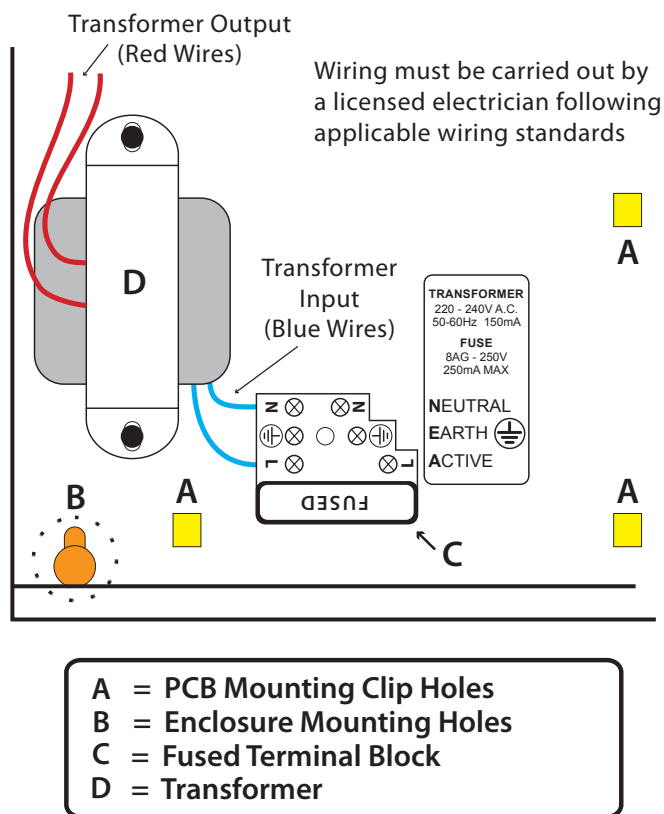


Figure 8: Internal Transformer Connection Diagram

Panel LED Indicators

The control panel PCB has two LED indicators (Dialler and Status LED's) which display the following information.

Condition	Meaning
Off	Offline
On	On Line (Dialling/Answered)
Flashing	Incoming Call

Table 2: Dialler Indicator LED

Condition	Meaning
Off	Error
On	Error
Flash Once Every 2 Seconds	OK
Flash Fast	AC or Battery Trouble

Table 3: Status Indicator LED

Note During factory defaulting the Status and Dialler LED indicators will flash alternatively for approximately 15 seconds.

Wiring Diagrams



Figure 9: N/C No EOL Zone

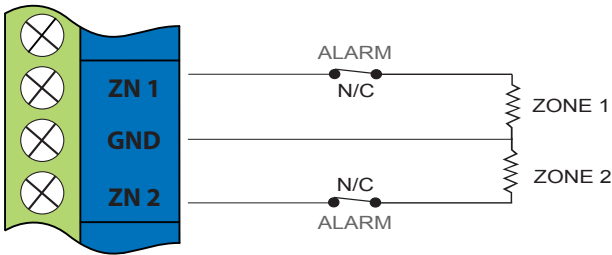


Figure 10: N/C Single EOL Zone

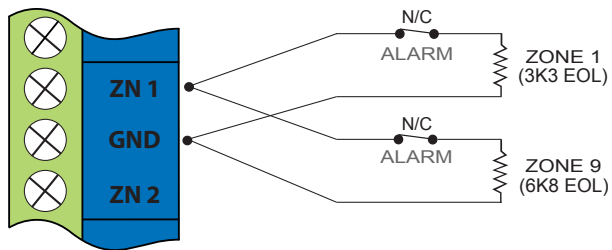


Figure 11: N/C Split EOL Zone

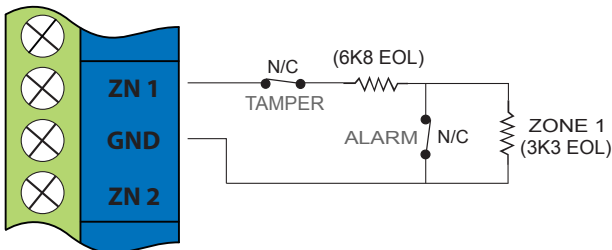


Figure 12: N/C Zone With Tamper



The above diagrams display zone configurations using Normally-Closed Alarm contacts and Normally-Open Alarm Contacts. When using Normally-Open Alarm Contacts you must select Inverted Seal for each zone in MENU 3-1-8. A shorted loop is a tamper condition for all EOL zone configurations.



Figure 13: N/O No EOL Zone

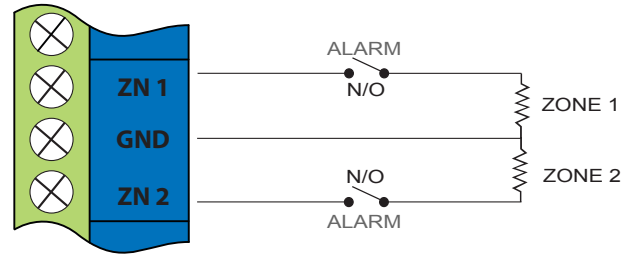


Figure 14: N/O Single EOL Zone

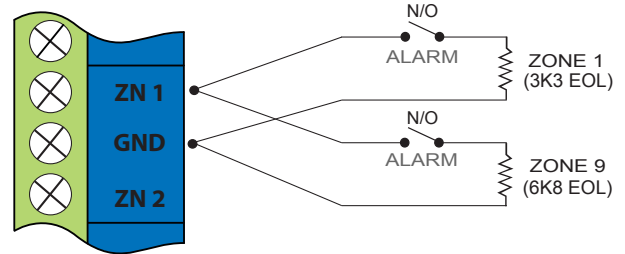


Figure 15: N/O Split EOL Zone

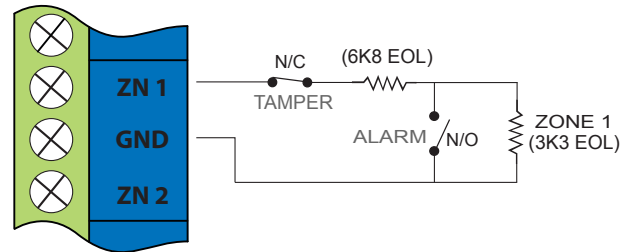


Figure 16: N/O Zone With Tamper

EOL Resistor Colours and Values

Use either the 4 colour, or solid colour resistors supplied.

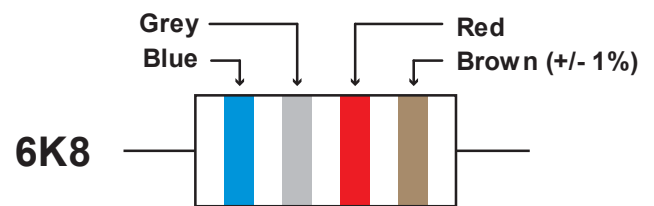
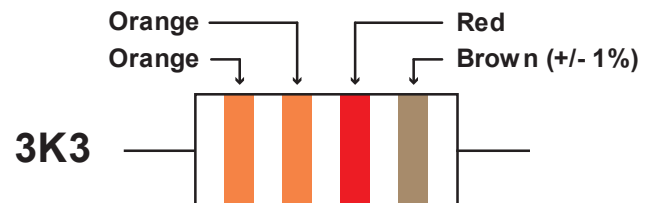


Figure 17: EOL Resistor Colour Chart

LAN Overview

The control panel communicates with other system module devices via the built in RS485 LAN or Local Area Network.

For increased security, the system uses anti-substitution technology and a proprietary data encryption algorithm to communicate with all LAN modules.

When using the recommended cable types the LAN can be up to 1200 metres in length, or even greater when LAN isolators are used.

See the CM797B LAN Isolation Module reference guide for more information on how to use LAN isolators to increase the overall LAN length, improve surge immunity protection and prevent earth loops.



It is recommended that one or more CM797B Isolators be used when connecting the LAN between multiple buildings.

LAN Wiring

Figure 18 and Figure 19 show the two recommended module connection diagrams.

The method shown in Figure 18, is only recommended for use where the total LAN length is 300 metres or less and the system is not installed in a electrically noisy environment. In this case it is possible to use 7/0.20 or 14/0.20 security cable (non twisted) provided that module voltage levels are maintained within specification.

The method shown in Figure 19, offers the greatest immunity to noise interference and voltage surges. This connection method is recommended where the total LAN length is greater than 300 metres. When using twisted pair cable the LAN length can be up to 1200 metres, and this can be extended even further when using LAN isolators.

The LAN can be wired using the daisy chain method as shown, where each module is wired back to the panel on the same cable run or using a star configuration, where individual modules are wired back to the panel on individual wires.

Un-shielded cable can be used successfully in many situations however for the highest reliability and performance in areas prone to frequent electrical storms or high levels of electrical interference, shielded twisted pair cable should be used.

LAN+ and LAN- should not be used to power detectors or other external devices. These devices should be powered from the +12V terminals on the panel or via an external power supply.

When wiring modules with built in power supplies like the control panel and the CM720B Power Supply, do NOT connect the EARTH wire from any 3 wire plug pack to the module's EARTH input terminal, if you have installed a separate communication earth wire.

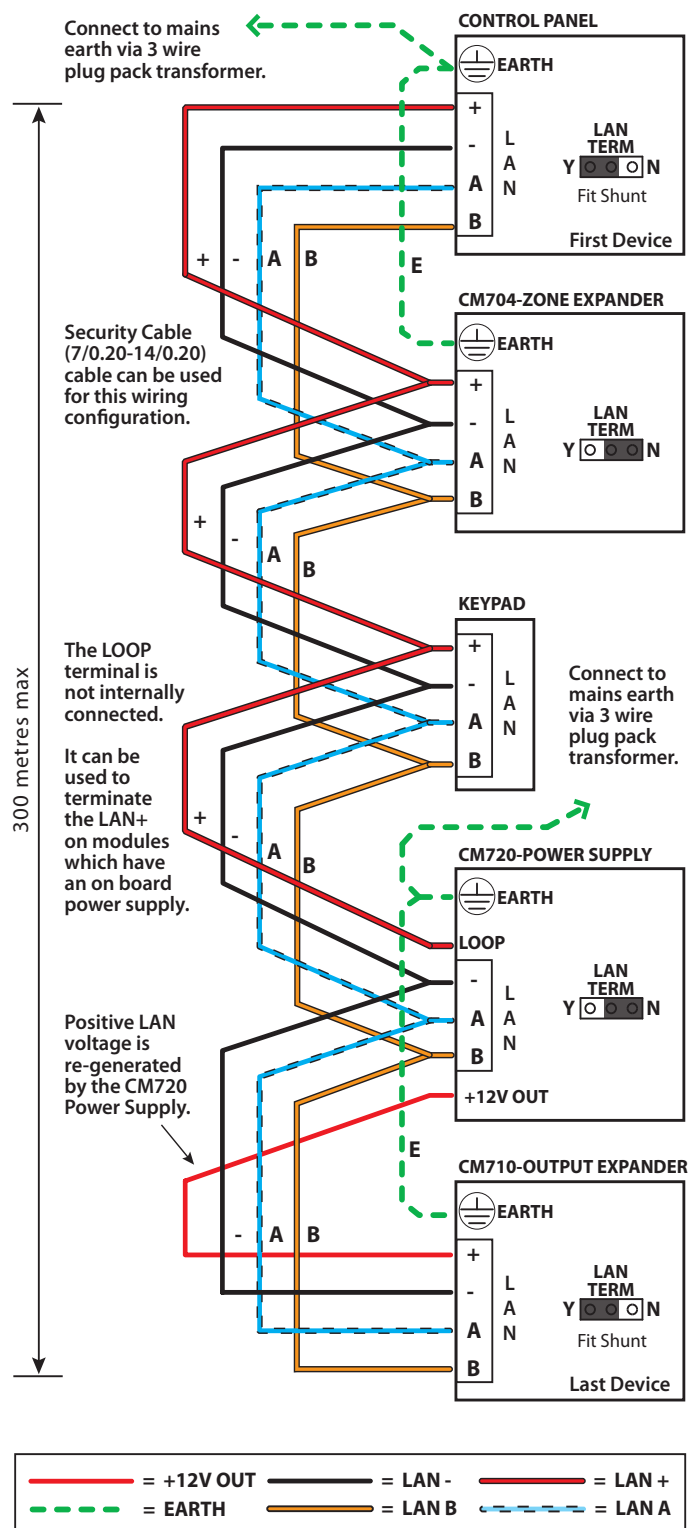


Figure 18: LAN Connection Using 2 Pair Security Cable

The LAN A and LAN B wires are not interchangeable. Make sure that the LAN A wires from all modules connect to LAN A on the panel and LAN B wires from all modules connect to LAN B on the panel.

Do not connect the positives of two power supply sources together. When wiring the LAN to modules that are self powered, or powered from an external source you should terminate the LAN+ into the terminal marked LOOP. This terminal is simply a termination point and is not internally connected.

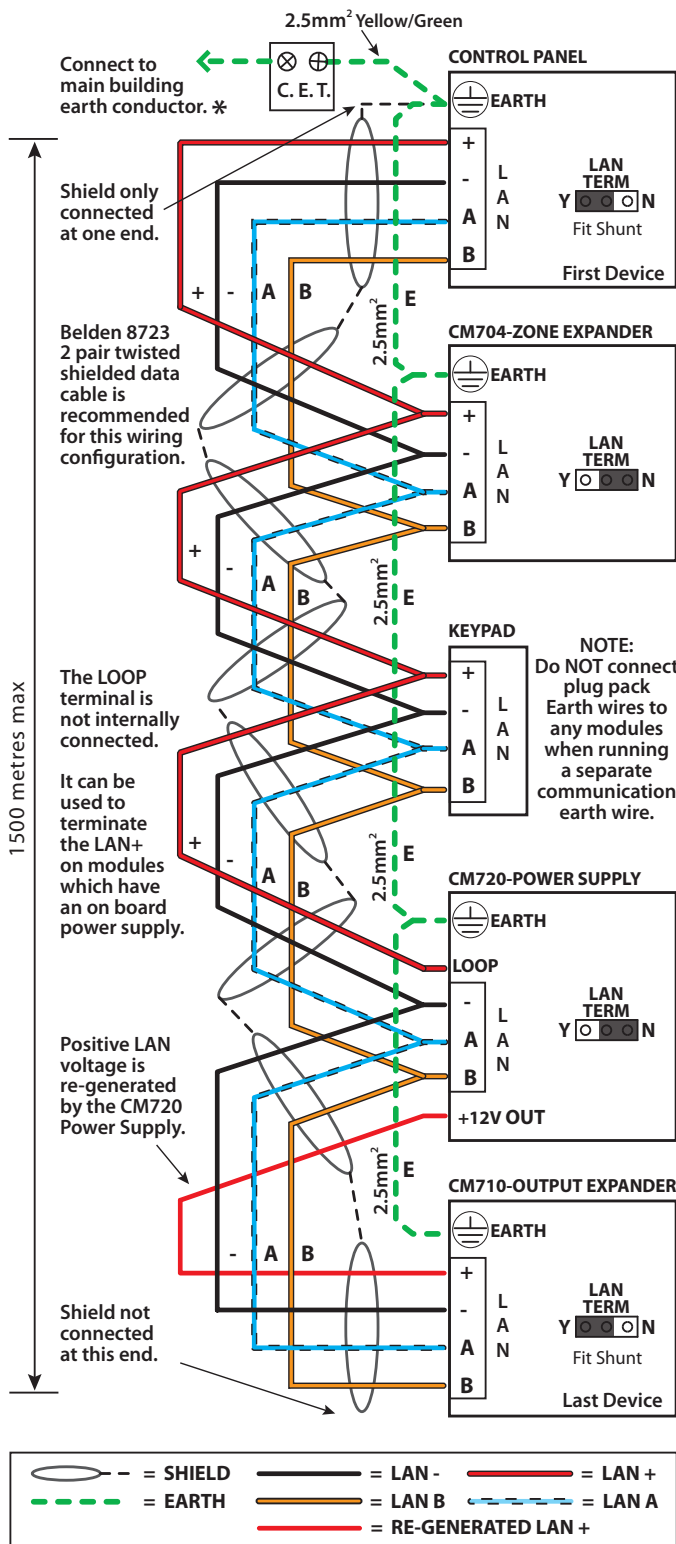


Figure 19: LAN Connection Using Twisted Pair Cable

The LAN- terminals from all modules must be connected together for correct operation.

System Earthing

When running a CET communications Earth as per Figure 19, the communication earth should be connected to the earth terminal on each module and then connected back through the CET to the main building earth conductor.

Do NOT connect the plug pack transformers earth wire to any modules earth terminal.



Note If a separate Communications Earth wire is installed, do NOT connect the EARTH wire from any 3 wire plug pack to any modules EARTH input terminal.

If a separate communications earth is NOT being used, then you should connect the earth wire from the 3 wire plug pack to the panels earth terminal as shown in Figure 19.

When using shielded cable, the shield of each length of cable should only be connected to a protective earth at one end. Do not allow the shield to make contact with negative 0 volts, ground or any other wiring within the system.

All earth wiring should be carried out in accordance with the local wiring regulations in your area.

Terminating the LAN

For reliable operation, the system LAN must be terminated correctly. The control panel and all LAN modules include a LAN TERM pin header and shunt which is used to connect the termination resistor on the module.

When the shunt is installed between the Y pin and the centre pin, the terminator is fitted and when the shunt is between the N pin and the centre pin the terminator is not fitted.

Where all modules are connected to the panel on a single cable run, (Daisy Chained) the terminators should be installed on the first and last modules on the LAN.

If the modules are connected to the panel via multiple cables all running back to the control panel (Star Configuration) then the terminators should be installed on the modules at the end of the two longest cable runs.

There are no LAN terminators on keypads. If a keypad is one of the two furthest devices from the control panel then a 470 ohm 1/2watt resistor can be fitted at the keypad between the LAN A and LAN B terminals.



Note The LAN must be terminated correctly for correct operation.

PCB Layout

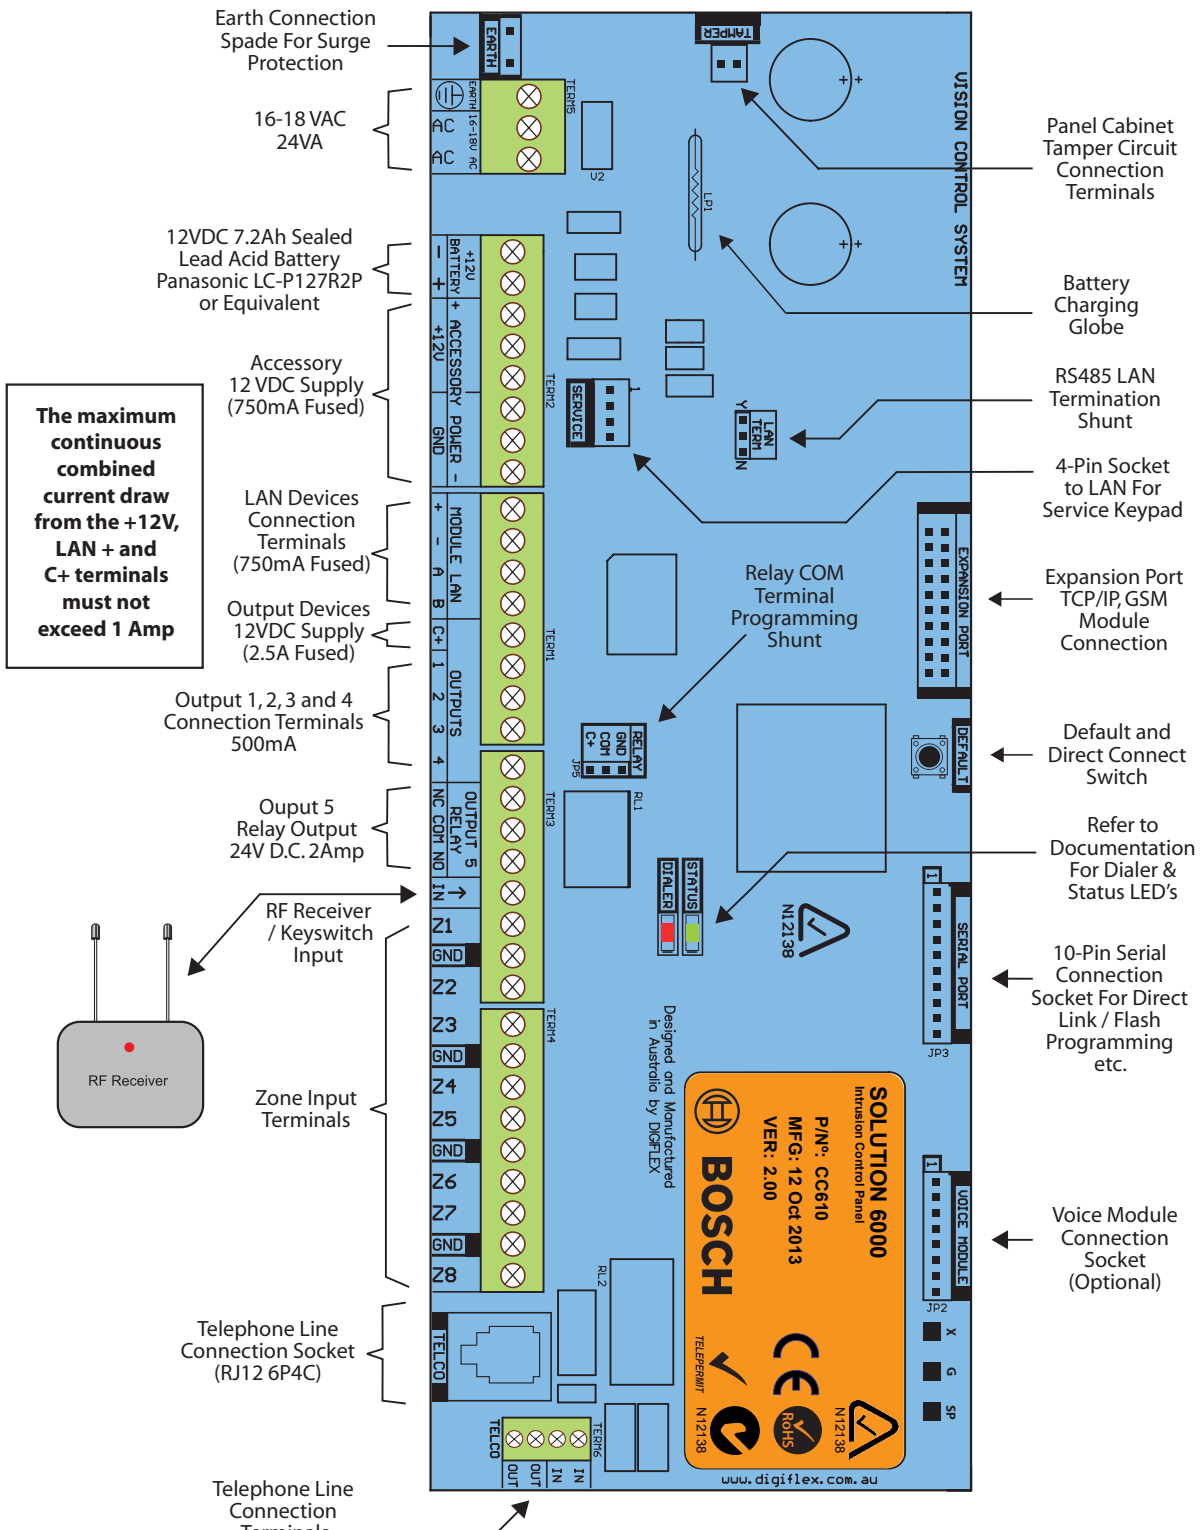


Figure 20: Solution 6000 Board Layout

Connection Diagram

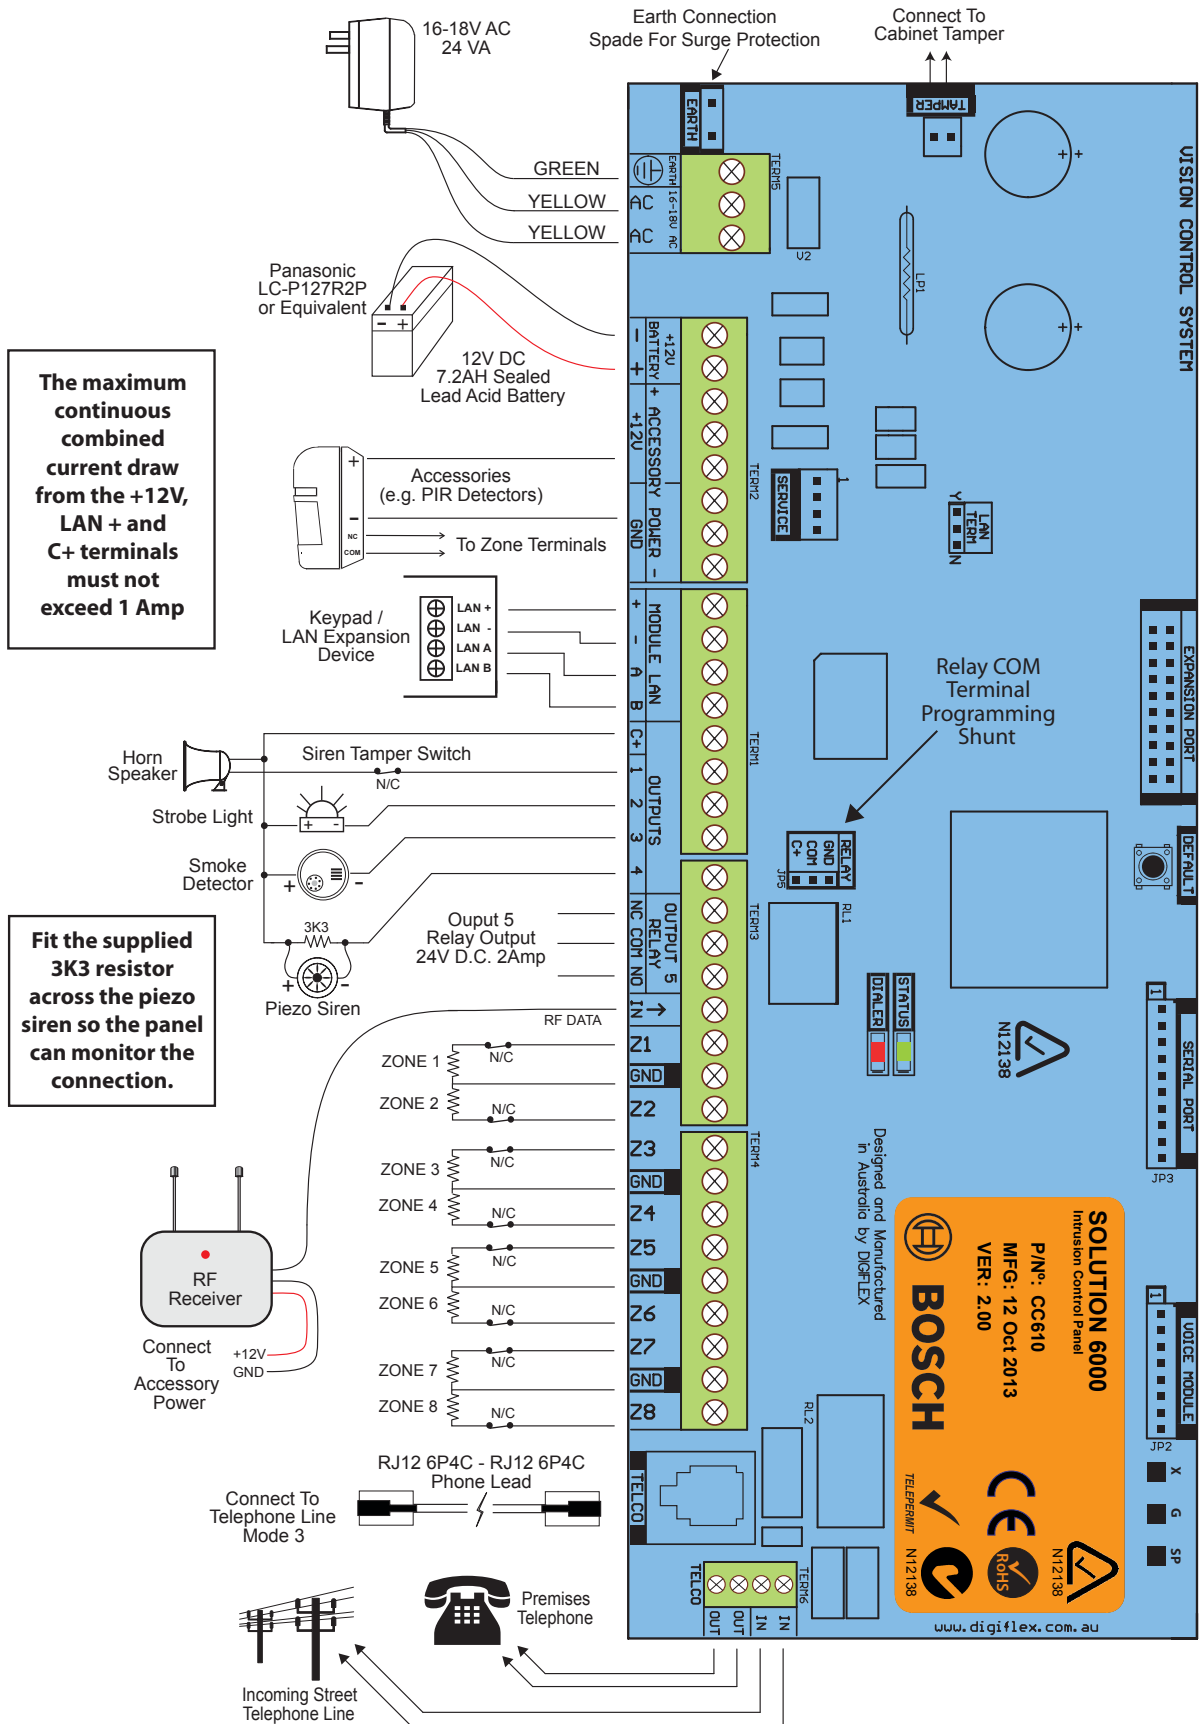


Figure 21: Solution 6000 Connection Diagram

Terminal Descriptions

N°	Name	Description
1	Earth	Earth wire from this terminal is connected to the Mains earth.
2	~ (AC)	Connection of the AC plug pack transformer
3	~ (AC)	
4	BAT (-)	Negative and positive connections to the stand-by battery. 12 VDC / 7AH
5	BAT (+)	
6	+12 V	These terminals are used to power detectors and LAN devices up to 750 mA.
7	+12 V	
8	+12 V	
9	GND	
10	GND	
11	GND	
12	LAN +	These terminals are used to power LAN devices up to 750 mA.
13	LAN -	
14	LAN A	Connect the LAN A data terminal of any LAN device (eg. Keypads, expansion boards) to this terminal. The control panel supports up to 300 m of 24/0.20 (18 AWG) wire on these terminals.
15	LAN B	Connect the LAN B data terminal of any LAN device (eg. Keypads, expansion boards) to this terminal. The control panel supports up to 300 m of 24/0.20 (18 AWG) wire on these terminals.
16	COMM+	Alarm power capable of providing a maximum of 2.5 Amp (+). This terminal is PTC Fuse protected.
17	OUT 1	Programmable output, capable of providing a maximum of 500 mA (-). This terminal is PTC Fuse protected.
18	OUT 2	
19	OUT 3	
20	OUT 4	
21	N/C	2 A @ 24 VDC Relay Output - Form C contact
22	COM	
23	N/O	
24	INPUT	Programmable Input for RF Receivers, Keyswitch and other devices.
25	ZN 1	Zone 1 and 9 sensor loop input (+).
26	GND	Common (-) for Zone 1 and 2 sensor loop.
27	ZN 2	Zone 2 and 10 sensor loop input (+).
28	ZN 3	Zone 3 and 11 sensor loop input (+).
29	GND	Common (-) for Zone 3 and 4 sensor loop.
30	ZN 4	Zone 4 and 12 sensor loop input (+).
31	ZN 5	Zone 5 and 13 sensor loop input (+).
32	GND	Common (-) for Zone 5 and 6 sensor loop.
33	ZN 6	Zone 6 and 14 sensor loop input (+).
34	ZN 7	Zone 7 and 15 sensor loop input (+).

N°	Name	Description
35	GND	Common (-) for Zone 7 and 8 sensor loop.
36	ZN 8	Zone 8 and 16 sensor loop input (+).
37	IN	These terminals are used to connect the telephone line from the street.
38	IN	
39	OUT	These terminals are used to connect the premises telephones.
40	OUT	

Table 4: Terminal Block Descriptions



The maximum combined continuous current draw from the +12V, LAN + and COMM+ terminals must not exceed 1 Amp

Board Connectors

Connector	Description
Service	This socket allow you to connect a service Keypad to the panel during installation.
Tamper	This socket is used to connect the panel enclosure tamper switch.
Default	This push button is used to reset the control panel back to factory default.
Voice Module	This is used to connect the optional Voice Command Module (CM101B).
Serial	This socket is used to connect serial devices to the control system like the direct link programming module.
Telco	This is a RJ12 6P/4C connector that allows you to connect the control panel to the PSTN telephone line.
Relay	The relay select PIN's allow you to easily program the relay common contact to switch either +12v or GND by fitting a plug on link.
Expansion Port	This port is used to connect additional modules to the control panel (eg. TCP/IP Interface Module etc)

Table 5: Board Connector Descriptions

About The Keypad

The keypad has 20 keys that allow you to input instructions and navigate the programming menu's as required. Some keys have a secondary function which is activated by pressing and holding them down for two seconds. Each key is described below.

Key	Description
0 to 9	The numeric keys allow you to enter your user PIN when required.
MENU	Use the [MENU] and the numeric keys to enter commands. The [MENU] key is also used to go back one level when navigating through menus or to exit a programming location without saving changes.
ALL ON ON	The [ON] key allows you to turn an area or output on. To turn all areas on at the same time when the system has been partitioned, press and hold the [ON] key for two seconds.
BYPASS PART	The [PART] key allows you to turn an area Part On. This key can also be used to bypass a zone or multiple zones when you press and hold for two seconds after you enter your PIN.
ALL OFF OFF	The [OFF] key allows you to turn an area or output off. To turn all areas off at the same time when the system had been partitioned, press and hold the [OFF] key for two seconds after you enter your PIN.
OK	The [OK] key allows you to save any changes and exit the command.
TEST MAIL	The [MAIL] key allows you to read stored mail. This key can also be used to initiate a dialler test when you press and hold for two seconds.
←	The [←] key allows you to move the cursor left when programming text or telephone numbers.
→	The [→] key allows you to move the cursor right when programming text or telephone numbers.
↑	The [↑] key allows you to navigate through menus or to toggle characters when programming telephone numbers.

Key	Description
↓	The [↓] key allows you to navigate through menus or to toggle characters when programming telephone numbers. Pressing The [↓] key will display current trouble conditions when the area that the keypad is displaying is disarmed.
→ + ↑ for 2 sec	Press and hold the [→] and [↑] keys together for 2 seconds will initiate a panic emergency alarm to be triggered. If programmed, the sirens will sound and the monitoring station will be notified.
← + → for 2 sec	Press and hold the [←] and [→] keys together for 2 seconds will initiate a fire emergency alarm to be triggered. If programmed, the sirens will sound and the monitoring station will be notified.
↑ + ↓ for 2 sec	Press and hold the [↑] and [↓] keys together for 2 seconds will initiate a medical emergency alarm to be triggered. If programmed, the sirens will sound and the monitoring station will be notified.











Table 6: Keypad Key Functions



Figure 22: Keypad Emergency Alarm Trigger's

Status Icons / LED's

The following table lists the function of each of the ICON symbols and LED indicators on the keypad display.

Icon	Status	Meaning	
	The keypad can be programmed to display area icons (1 to 8) that allow users to easily identify which areas have been turned on or off without the need to toggle between areas (See MENU 6-1-5).		
	On	The area is turned All On or Part On	
	Off	The area is turned Off	
	Flashing Fast	The area has an alarm	
		On	System power is normal
		Flashing	System power is missing
			Flashing
	Off		No fire alarm
On	Fire alarm in memory (Turn the area All On and Off to Clear).		
	Flashing	A burglary alarm is active	
	Off	No burglary alarm	
	On	Burglary alarm in memory (Turn the area All On and Off to clear).	
	On	The existing service or trouble condition has been acknowledged.	
	Off	No service or trouble conditions exist	
	Flashing	A service or trouble condition is present that has not been acknowledged.	
	On	The area is turned Part On.	
	Off	The area is not turned Part On.	
	On	The area is turned off.	
	Off	The area is turned All On or Part On	
	On	The area is turned All On or Part On	
	Off	The area is turned Off	
	On	All messages have been read.	
	Off	Message queue is empty	
	Flash	An unread message is in the queue.	
	On	Area is ready to turn on (All On / Part On)	
	Off	Not ready, Zone Open	
Red LED	On	All On	
	Flashing	Alarm	
Green LED	On	Area is off.	
	Flashing	Area not ready to turn on	



Red & Green LED	Flashing	Installer programming mode is active.
		The WiFi enabled keypad or module has successfully connected to your local WiFi network.
		The WiFi enabled keypad or module is not connected to your local WiFi network.

Table 7: ICON & LED Indicator Meanings

Keypad Tones

All keypads emit several distinct tones and display text to alert you to system events. The volume of the keypad tones can be adjusted in MENU 6-0-7.

Type	Meaning
Fire Alarm Tone	When a fire zone sounds an alarm, the keypad will sound 3 seconds on and 2 seconds off (repeat).
Burglary Alarm Tone	When a burglary zone activates while your system is turned on, your keypad emits a continuous siren tone. It sounds for the time set by your security company.
Trouble Tone	When a system component is not functioning properly, your keypad sounds 4 fast short beeps followed by a 5 second pause (repeat).
Key Press Tone	Pressing any key on the keypad sounds one short beep, indicating that the key press is accepted.
Entry Delay Tone	When you enter the premises through a zone programmed for entry delay, the keypad sound a Hi/Low tone to remind you to turn off the area. If the area is not turned off before the entry delay expires, an alarm condition will sound and a report may be sent to your alarm company.
Exit Delay Tone	After you turn an area All On, the keypad will sound 1 short beep every second. During the last 10 seconds fast short beeps will be heard. If you don't exit before the delay time expires and an exit delay door is faulted, an alarm occurs.
Error Tone	If you enter an incorrect value when programming, the keypad will sound a 2 second tone.
Menu Mode	The keypad will sound a Lo/Hi tone to indicate you have entered MENU Mode and a Hi/Low tone to indicate you have exited MENU mode.
Chime Tone	The keypad sounds fast short beeps to alert you when a zone programmed for chime is faulted or unsealed.

Table 8: Keypad Tones

Keypad & Readers Setup

The control panel can have a maximum of 16 keypads and/or readers connected via the LAN terminals. Each keypad or reader must be set to a unique address before they will operate.

Each keypad or reader needs to be assigned to a home area via MENU 6-1-3. This sets the area the keypad or reader will display and control by default. Keypads and readers can be locked to a home area or allowed to roam or move between areas. At factory default, the home area is factory default to operate Area 1.

Set each keypad or reader address using "Table 9: DIP Switch Address Settings" on page 17 and "Table 10: Rotary Switch Address Settings" on page 17 as a guide.



Only 1 keypad can be assigned to each address. All keypads are supplied from the factory set to address 1. (OFF-OFF-OFF-OFF).

DIP Switch Address Select

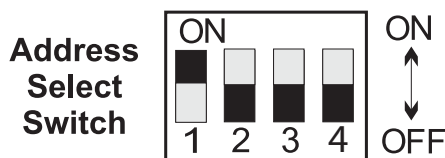


Figure 23: Keypad DIP Switch Address Settings

DIP Switch Address Settings				
Keypad/Reader N°	S1	S2	S3	S4
1	Off	Off	Off	Off
2	On	Off	Off	Off
3	Off	On	Off	Off
4	On	On	Off	Off
5	Off	Off	On	Off
6	On	Off	On	Off
7	Off	On	On	Off
8	On	On	On	Off
9	Off	Off	Off	On
10	On	Off	Off	On
11	Off	On	Off	On
12	On	On	Off	On
13	Off	Off	On	On
14	On	Off	On	On
15	Off	On	On	On
16	On	On	On	On

Table 9: DIP Switch Address Settings

Rotary Switch Address Select

Keypads and readers fitted to the system must be assigned a unique address on the LAN. Some keypads and readers include a rotary address switch for quick selection.

The following table shows how to set the address setting for each keypad and reader, as well as the number of devices the panel can support.

Rotary Switch Address Settings	
Address Number	Keypad/Reader N°
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16

Table 10: Rotary Switch Address Settings



Figure 24: Rotary Switch Address Settings

DTMF Control Functions

Firmware includes comprehensive DTMF control of individual areas and outputs with full user PIN and TIMER GROUP access verification.

Unlike other systems, no additional hardware or modules are required for DTMF control. To configure the desired functions see MENU 5-3-5 DTMF Options.

How to Use DTMF Control

- Once the panel answers the incoming call, if either option 1, 2, 3 or 4 in MENU 5-3-5 is enabled, then the panel will play a short welcome jingle. You now have approximately 5 seconds to enter a valid PIN and log onto the panel.
- Enter PIN followed by the [#] key. If the PIN is valid the system will respond with two short beeps. If the PIN is invalid then a single long beep will be heard.
If a valid PIN is not entered in time, the panel will attempt to establish a modem connection as if connecting to the Solution Link software.
If this happens you will need to hang up for approximately 60 seconds before trying again.
- Once validated, the following commands can be performed. See the table below. If no keys are pressed for 20 seconds then the panel will play the exit jingle before terminating the session and hanging up. Pressing [#][#] at any time while connected will cause the panel to terminate the session.

DTMF Control Functions		
Operation	Command	Tone Response
Quick Arm All Areas	[0] + [#]	High, Medium, Low
Log In OK	[PIN] + [#]	Low, High
Error	Incorrect Entry	Long Beep
Turn Area ON	[1] + [Area N°] + [#] + [1]	Low, High
Turn Area OFF	[1] + [Area N°] + [#] + [2]	High, Low
Turn Output ON	[2] + [Output N°] + [#] + [1]	Low, High
Turn Output OFF	[2] + [Output N°] + [#] + [2]	High, Low
End Session	[#] + [#]	High, Medium, Low

Table 11: DTMF Remote Control Functions

DTMF EXAMPLES

Each example below shows the log on step for clarity. In practise is only necessary to log on once per DTMF control session.

To turn Area 1 ON enter the following

[2] [5] [8] [0] [#] = Log ON

[1] + [1] + [#] + [1] = Arm Area 1

To turn Output 10 ON enter the following

[2] [5] [8] [0] [#] = Log ON

[2] + [1] [0] + [#] + [1] = Turn Output 10 ON

To turn Output 12 OFF enter the following

[2] [5] [8] [0] [#] = Log ON

[2] + [1] [2] + [#] + [2] = Turn Output 12 OFF



If the DTMF Quick Arm option is enabled then it is possible to remotely arm all areas without logging onto the panel. Simply enter [0] + [#] following the welcome jingle.

Make sure that the phone being used to remotely control the panel is set to transmit DTMF tones when keys are pressed during the call. This option is disabled by default on some phones.

Programming Overview

The control panel incorporates a menu text driven interface. This interface is very similar to that found on many mobile phones. Once programming mode is entered you will see a number of menu options in the display and these may vary depending in the user authority level.

Entering Programming Mode

To enter installer program mode enter, PIN + [MENU].

The default Installer PIN is 1234.

The Red and Green LED indicators on the keypad will flash to confirm Installer programming mode is active.

Exiting Programming Mode

Press and hold down [MENU] key for 2 seconds.

Navigating The Menu

Using the up and down arrow keys to navigate, locate the desired menu item using the highlight bar and then press the [OK] key to select.

A new list of menu items will appear. Repeat the above until the desired menu item is located.

To navigate backwards through the menu items press the [MENU] key at any time. Alternatively if you know the direct menu item number press [MENU] + Item Number.

Key	Description
←	Scrolls Cursor Left
→	Scrolls Cursor Right
↑	Scrolls Cursor Up
↓	Scrolls Cursor Down
OK	Enter Menu Options or Saves Changes
MENU	Go Back One Level, Hold Down to Exit Programming Mode
0 to 9	Enter Data Value
ON	Turn On Bit Option
OFF	Turn Off Bit Option, Clear to End of Line

Table 12: Keys Used During Programming

Command Menu

When you first enter programming mode a special menu called the Command Menu will appear at the top of the menu tree. The Command Menu provides a list of the most common system functions like "Turn Chime Mode On", "Move To An Area" or "Turn An Area On". Use the up and down arrow keys to navigate and press [OK] to select the command.

Programming Option Bit Menus

Use the up and down arrow keys to scroll through the 8 different options. To select an option, press the [ON] key – a tick [✓] will be displayed. To deselect an option, press the [OFF] key.

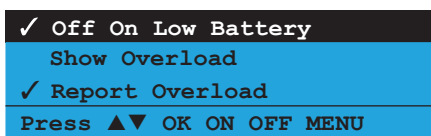


Figure 25: Sample Option Bit Menu Display

To save programming changes, press [OK], else press [MENU] to exit without saving.

Alpha Text

Text descriptions are available for Area Name, Zone Name, User Name, TimeZone Name, Holiday Name Prox Reader Name and Output Name. Each name can have a maximum of 20 characters.

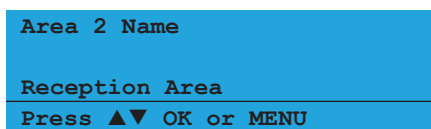


Figure 26: Area Text Programming Display

When programming text, each numeric key represents a different group of characters.

Pressing the same numeric key repeatedly will step you through the available characters assigned to the key. The text key layout is the same as most phones. Refer to the table below for detailed character information.

Key	Characters Assigned To Each Numeric Key									
1	.	,	?	!	-	&	`	1		
2	A	B	C	a	b	c	2			
3	D	E	F	d	e	f	3			
4	G	H	I	g	h	i	4			
5	J	K	L	j	k	l	5			
6	M	N	O	m	n	o	6			
7	P	Q	R	S	p	q	r	s	7	
8	T	U	V	t	u	v	8			
9	W	X	Y	Z	w	x	y	z	9	
0	SPACE	0								
↑	Scroll Up through entire character list									
↓	Scroll Down through entire character list									
←	Move to left one character position									
→	Move to right one character position									
OFF	Clear from cursor position to end of line									

Table 13: Text Keypad Character Set

Once the desired character is displayed press the right arrow key to move to the next character position. To save programming changes, press [OK], else press [MENU] to exit without saving.



The following additional special characters are available by scrolling using the up and down arrow keys. + - @ # \$ " & % * : () / < > =

Telephone Numbers

To program, select primary telephone number under [MENU] 5-1-1 then enter the digits of the telephone number and press the [OK] key to save. Use the up and down arrow keys to program special characters (*, # and Pause).

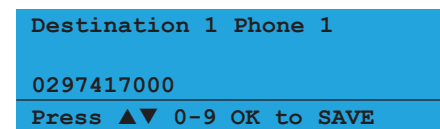


Figure 27: Telephone Number Programming Display

Key	Characters Assigned To Each Numeric Key
0 to 9	Enter the digits 0 to 9
↑ ↓	Scroll Up through entire character list 0 - 9 * # , comma = 2 second pause
← →	Move to left or right one character position
OFF	Clear from cursor position to end of line

Table 14: Phone Number Character Set


To save programming changes, press [OK], else press [MENU] to exit without saving.

List Options

Use the [↑] and [↓] keys to step through the available options. Press [OK] to save or [MENU] to exit without saving.



You can also enter the option number directly followed by [OK].

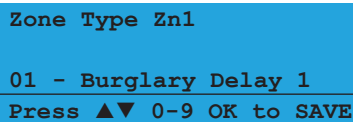

Zone Type Zn1
01 - Burglary Delay 1
Press ▲▼ 0-9 OK to SAVE


Figure 28: List Option Programming Display

Clock Programming

Use the left and right arrow keys to move to the field then use the up and down arrow keys to change. Press [OK] to save or [MENU] to exit without saving.



Scroll through hours to change from am to pm.

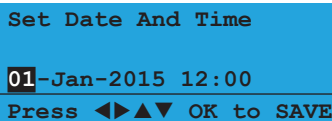

Set Date And Time
01-Jan-2015 12:00
Press ◀▶▲▼ OK to SAVE

Figure 29: Clock Programming Display

Getting Started Back To Base

The following steps are the minimum requirements to get the system reporting back to base. Examples assume the panel is disarmed with no alarms and starting from factory default settings.

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Set date and time.
MENU 7-1-0
3. Change default installer PIN.
MENU 1-5-2
4. Change default master PIN.
MENU 1-1-1
5. Enter (Client) account number for Area 1.
MENU 2-2-0
6. Enter base station primary telephone number.
MENU 5-1-1
7. Enter base station secondary telephone number.
MENU 5-1-2
8. Press and hold down [MENU] to exit.

Service Mode

Service mode when activated disables dialler reporting, prevents all alarms and prevents all users from arming the system.

To Turn Service Mode ON

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Turn service mode on.
MENU 7-0-8
3. Follow display prompts.
4. Hold down [MENU] to exit.



Keypads will display the word Service when service mode is active.

To Turn Service Mode OFF

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Turn service mode off.
MENU 7-0-8
3. Follow display prompts.
4. Hold down [MENU] to exit.



Keypads will display the word Service when service mode is active.

Defaulting The System

Defaulting the system will reset all programming options back to the factory default setting. All programming information will be erased.

To Hardware Default

1. Remove all power to the system - AC and battery.
2. Press and hold the default push button, then apply power to the control panel.
3. Release the default button, The panel will reset and revert to normal operation when default is complete.

To Software Default

1. Enter programming mode.
[1][2][3][4] + [MENU]
2. Select factory default option.
MENU 7-0-4
3. The panel will reset and revert to normal operation when the default is complete.



You can disable factory defaulting using MENU 7-7-4. If factory defaulting has been disabled you **must** know the installer code to perform a factory default otherwise the system will need to be returned to your supplier for defaulting or you can purchase a CM255B Default Unlock Key which will unlock the panel in the field. Charges apply for defaulting if returned to the distributor.

Domestic Template Defaults

The following table list the changes that will occur when you select domestic default using MENU 7-0-3.

Program Option	Domestic Default Value
All Trouble Reports	Disabled
All Bypass Reports	Disabled
All Restore Reports	Disabled
Destination 1 TX Format	Domestic Reporting
Access Route	Log Only
Open / Close Reports	Log Only
Test Route	Log Only
System Route	Log Only

Table 15: Domestic Default Settings

Direct Link Programming

The panel can be programmed via the Solution Link Upload/Download software in either Direct Link or Remote Link modes. For Direct Link you will need a CM900B Direct Link module which connected the panels serial port to the PC.

Once the cable is connected you will need to hold down the default switch on the panel for 5 seconds to initiate the programming session. See Figure 20: for the default switch location. It is also possible to initiate the programming session via MENU 5-0-5 - Start Direct Link.

Zone Array

The feature allows you to view the condition of all zones on the panel in banks of 16 zones at a time. From the installer programming mode press MENU 3-0-1 to access the zone array.

Use the [↑] and [↓] arrow keys to scroll up and down the zone banks and press [OK] or [MENU] when finished.

The following information can be displayed depending on the current zone status.

N= NORMAL
S = SHORTED
A= ALARM
T= TAMPER
- = DISABLED

```
0000000001111111
1234567890123456
NSA-ANAT-----
PRESS ▲▼, OK or MENU
```

In the above example screen,

N = Zone 01 and 06 are Normal (Sealed)
S = Zone 02 is Shorted
A = Zone 03,05,07 are in Alarm (Unsealed)
T = Zone 08 is in Tamper Alarm (Unsealed)
- = Zone 04, 09-16 are Disabled (Unused)

Door Array

This feature allows you to view door status in groups of 16. From the installer programming mode press MENU 4-0-4 to access the door array.

Press [OK] or [MENU] when finished.

The following information can be displayed depending on the current door status.

L = Door Locked
U = Door Unlocked
O = Override
- = Disabled or Not Available

```
0000000001111111
1234567890123456
LLLLL---UUUUO---
Press ▲▼ OK or MENU
```

In the above example screen,
L = Doors 01 to 05 are Locked
O = Door 13 has a Override condition
U = Doors 09 to 12 area Unlocked
- = Doors 06 to 08 and Doors 14 to 16 are Disabled or Not Available

Output Array


This feature allows you to view output status in groups of 16. From the installer programming mode press MENU 4-0-2 to access the output array.

Use the up and down arrow keys to scroll up and down the output banks and press [OK] or [MENU] when finished.

The following information can be displayed depending on the current zone status.

- N = NORMAL - Off Condition
- T = TRIGGERED - On Condition
- F = FAULT - Overload Condition
- = DISABLED

1. Enter [MENU] + [4] + [0] + [2] and use the up and down arrows to select the output group to view.
2. Use the [↑] and [↓] down arrows at any time to move to a new group. The keypad will display the following output array information for outputs 1 to 16.

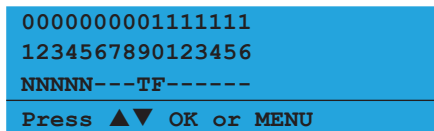

In the above example screen,

- N = Outputs 01 to 05 are Normal (Off)
- F = Output 10 has a Fault (Overload)
- T = Output 09 is Triggered (On)
- = Outputs 05 to 08 and Outputs 11 to 16 are Disabled or Not Available

Basic Reporting Reference

A complete reporting template is available on the Solution Link CD or from your nearest Bosch security products outlet. Your base station will need to create a specific reporting template for this and other new model Solution panels.

Point ID Table	Module Description
Ur999	Installer
Ur998	Remote User
Ur997	TimeZone
Ur996	Guard Tour
Ur001 - 995	Users
Ur000	Quick Arm
Zn001 - 264	Zones General
Zn001 - 064	Doors 1 - 64
Zn701 - 708	Door Controller 1 - 8
Zn711 - 718	Door Controller 9 - 16
Zn761 - 768	Lift Controller 1 - 8
Zn771 - 778	Lift Controller 9 - 16
Zn781 - 788	Input Expander 1 - 8
Zn791 - 798	Input Expander 9 - 16

Zn801 - 808	Universal Expander 1 - 8
Zn811 - 818	Universal Expander 9 - 16
Zn821 - 828	RF Receiver 1 - 8
Zn831 - 838	LAN Power Supply 1 - 8
Zn841 - 848	Serial Expander 1 - 8
Zn851 - 858	Output Expander 1 - 8
Zn860	GSM Module
Zn861	GSM Input 1
Zn862	GSM Input 2
Zn863	GSM Input 3
Zn864	GSM Input 4
Zn870	Ethernet Module
Zn871	Real Time Clock Module
Zn872	Voice Module
Zn873	Service Keypad
Zn881 - 888	Consoles 1 - 8
Zn891 - 898	Control Panel 1 - 8
Zn911 - 918	LAN Isolator 1 - 8
Zn921 - 928	LAN Isolator 9 - 16
Zn901 - 908	Destination Route 1 - 8
Zn971 - 978	Consoles 9 - 16
Zn901 - 908	Destination Route 1 - 8
Zn911 - 918	LAN Isolator 1 - 8
Zn921 - 928	LAN Isolator 9 - 16
Zn931 - 938	LAN Power Supply 9 - 16
Zn951 - 958	Output Expander 9 - 16
Zn971 - 978	Consoles 9 - 16

Table 16: Shortform Point ID Listing

Menu Reference Table

The Solution Controller includes a simple text menu system which makes all levels of programming extremely easy. Once a valid PIN has been entered followed by the MENU key the system will automatically determine which menus and option the user has access to and only those items will be displayed.

There are four basic grouping levels used;

1. A = All (No PIN Required)
2. U = User PIN Has Access
3. M = Master PIN Has Access
4. I = Installer PIN Has Access

The following table lists all programming menus and the authority level required to access them.

0	Commands	1	Access	2	Areas	
UMI	2-0-1	Turn Area On/Off	1-0	Commands	2-0	Commands
UMI	2-0-2	Turn All Areas On	MI 1-0-0	Erase User	AUMI 2-0-0	Area Status
UMI	2-0-3	Turn All Areas Off			UMI 2-0-1	Turn Area On/Off
UMI	2-0-4	Move To Area	1-1	PIN Codes	UMI 2-0-2	Turn All Areas On
AUMI	2-0-5	Chime On/Off	UMI 1-1-0	Change Own PIN	UMI 2-0-3	Turn All Areas Off
UMI	1-1-0	Change Own PIN	MI 1-1-1	Change Other PIN	UMI 2-0-4	Move To Area
AUMI	3-0-0	Zone Status	MI 1-1-2	Add PIN	AUMI 2-0-5	Chime On/Off
AUMI	4-0-0	Output Status	MI 1-1-3	Delete PIN	MI 2-0-6	Chime Mode
UMI	4-0-1	Turn Output On/Off	I 1-1-4	View PIN		
MI	7-1-0	Set Date And Time			2-1	Area Properties
UMI	3-0-5	Smoke Sensor Reset	1-2	Token	MI 2-1-0	Area Name
UMI	3-9-0	Walk Test All Zones	MI 1-2-0	Add Token	I 2-1-1	General Options
MI	4-9-0	External Siren Test	MI 1-2-1	Delete Token	I 2-1-2	Input Options
MI	4-9-1	Internal Siren Test	MI 1-2-2	Token Status	I 2-1-3	Output Options
MI	4-9-2	Strobe Test	MI 1-2-3	Edit Token	I 2-1-4	Reporting Options
UMI	5-0-1	Call/Answer RAS			I 2-1-5	Strobe Trigger
UMI	7-9-1	Battery Test	1-3	RF Keyfob	MI 2-1-6	Part Mode 1 Name
UMI	5-9-0	Test Dialler	MI 1-3-0	Add Keyfob	MI 2-1-7	Part Mode 2 Name
I	7-0-8	Service Mode	MI 1-3-1	Delete Keyfob	MI 2-1-8	Auto Arming
UMI		About	I 1-3-2	Test Keyfob		
			1-4	User Properties	2-2	Reporting
			MI 1-4-0	User Name	I 2-2-0	Account Dest 1
			MI 1-4-1	Area Assignment	I 2-2-1	Account Dest 2
			MI 1-4-2	User Options	I 2-2-2	Open Close Route
			MI 1-4-4	TimeZone Access		
			MI 1-4-5	Door Assignment	2-8	Timers
			MI 1-4-6	User Expire Date	MI 2-8-0	Exit Time
					MI 2-8-1	Entry Time 1
					MI 2-8-2	Entry Time 2
			1-5	Global Properties	MI 2-8-3	Part Entry Time
			I 1-5-0	PIN Length	I 2-8-4	Auto Arm Pre Alert
			I 1-5-1	PIN Retry Count	I 2-8-6	Senior Watch Time
			I 1-5-2	Installer PIN		
			1-6	Reporting	2-9	Area Testing
			I 1-6-0	Access Route	I 2-9-0	Area Watch
			I 1-6-1	Access Options	I 2-9-1	User Test Interval
					I 2-9-2	Service Interval
					I 2-9-3	Test Options
			1-8	Fingerprint		
			MI 1-8-0	Add Fingerprint		
			MI 1-8-1	Delete Fingerprint		
			MI 1-8-2	Fingerprint Status		

3 Inputs			4 Outputs			5 Comms		
	3-0	Commands		4-0	Commands		5-0	Commands
AUMI	3-0-0	Zone Status	AUMI	4-0-0	Output Status	UMI	5-0-1	Call /Answer RAS
MI	3-0-1	Zone Array	UMI	4-0-1	Turn Output On/Off	MI	5-0-2	Call Forward On/Off
UMI	3-0-2	Bypass Zones	MI	4-0-2	Output Array	MI	5-0-3	Check Web Email
MI	3-0-3	Set Chime Zones	MI	4-0-3	Door Status	MI	5-0-4	Email System Log
MI	3-0-4	Set Part 2 Zones	MI	4-0-4	Door Array	MI	5-0-5	Start Direct Link
UMI	3-0-5	Smoke Sensor Reset	MI	4-0-5	Door Control	MI	5-0-6	Voice Setup
			MI	4-0-6	Marco Array	MI	5-0-8	Register Customer
	3-1	Zone Properties		4-1	Properties	I	5-0-9	Register Installer
MI	3-1-0	Zone Name	MI	4-1-0	Output Name		5-1	Telephone Numbers
I	3-1-1	Zone Type	I	4-1-1	Event Type	I	5-1-0	Number Prefix
I	3-1-2	Area Assignment	I	4-1-2	Event Assignment	MI	5-1-1	Destination 1
I	3-1-3	Pulse Count	I	4-1-3	Output Polarity	MI	5-1-2	Destination 2
I	3-1-4	Pulse Count Time	I	4-1-4	Time Parameter	MI	5-1-6	Call Forward On
I	3-1-5	Door Assignment	I	4-1-5	Output Options	MI	5-1-7	Call Forward Off
I	3-1-6	Report Route		4-2	Door Properties		5-2	Properties
I	3-1-7	Report Options	MI	4-2-0	Door Name	I	5-2-0	Call Attempt Count
I	3-1-8	Zone Options	I	4-2-2	Unlock TimeZone	I	5-2-1	Dialler Options
	3-3	RF Zone	I	4-2-3	Door Options	I	5-2-2	Phone Line Options
I	3-3-0	Add RF Device		4-3	RF Output	I	5-2-3	Country
I	3-3-1	Delete RF Device	I	4-3-0	Add RF Output	I	5-2-7	Set SMS Password
I	3-3-2	Test RF Device	I	4-3-1	Delete RF Output		5-3	Remote Access
I	3-3-3	RF Zone Properties	I	4-3-2	Test RF Output	I	5-3-0	Call Back Number
I	3-3-3-0	Gross Attack		4-8	Macros	I	5-3-1	RAS Security PIN
I	3-3-3-1	Minor Attack	I	4-8-0	Name	I	5-3-2	Log Threshold
I	3-3-3-3	Zone Options	I	4-8-1	Macro Rule	I	5-3-3	Ring Count
	3-4	Global Input Options	I	4-8-2	Scene	I	5-3-4	RAS Options
I	3-4-0	EOL Value		4-9	Output Testing	I	5-3-5	DTMF Options
I	3-4-1	Keyswitch Options	MI	4-9-0	External Siren Test	I	5-3-6	Voice Access Code
I	3-4-2	Input Options	MI	4-9-1	Internal Siren Test	I	5-3-7	CLI Numbers
	3-5	PGM Input	MI	4-9-2	Strobe Test	I	5-3-8	User RAS PIN
I	3-5-0	Input Type	MI	4-9-3	Fire Siren Test		5-4	Reporting
	3-6	Tamper Inputs				I	5-4-0	TX Format Dest 1
I	3-6-0	Tamper Options				I	5-4-1	TX Format Dest 2
	3-9	Input Testing				I	5-4-2	Test Route
UMI	3-9-0	Walk Test All Zones				I	5-4-3	System Route
UMI	3-9-1	Walk Test A Zone				I	5-4-4	Emergency Route
I	3-9-2	Sensor Watch Time				I	5-4-5	Swinger Dialler
						I	5-4-6	Burg Report Delay
						I	5-4-7	Fire Report Delay
							5-5	MyAlarm
						I	5-5-0	IP Address
						I	5-5-1	IP Port
						I	5-5-2	MyAlarm Options
						I	5-5-7	Gateway Numbers
						MI	5-5-8	Email Address
						MI	5-5-9	Email Options

5-6		IP Reporting	6	Devices	7	System		
I	5-6-0	Receiver IP	UMI	6-0	Commands	7-0	Commands	
I	5-6-1	Receiver Port	I	6-0-0	Device Status	UMI	7-0-0	Panel Status
I	5-6-2	Poll Rate	I	6-0-1	LAN Secure	UMI	7-0-1	System Trouble
I	5-6-3	ACK Wait Time	I	6-0-2	LAN Scan	UMI	7-0-2	History Log
I	5-6-4	IP Format	I	6-0-3	LAN Watch	I	7-0-3	Domestic Default
I	5-6-5	Retry Count	MI	6-0-7	Keypad Volume	I	7-0-4	Factory Default
I	5-6-6	Encryption Key	MI	6-0-8	Keypad Contrast	I	7-0-5	Template Default
I	5-6-7	Conettix NNC	MI	6-0-9	Keypad Backlight	MI	7-0-6	TimeZone Array
I	5-6-8	SIA IP Prefix		6-1	Keypads & Readers	I	7-0-8	Service Mode
I	5-6-9	User Name/Password	MI	6-1-0	Name		7-1	Clock
I	5-6-1-0	Reporting Options	I	6-1-2	Area Options	MI	7-1-0	Set Date And Time
	5-7	IP Remote Access	I	6-1-3	Home Area	I	7-1-1	Summertime On
MI	5-7-0	IP Address	I	6-1-4	General Options	I	7-1-2	Summertime Off
MI	5-7-1	IP Port	I	6-1-5	Indicator Options	I	7-1-3	Locale
I	5-7-2	IP RAS Options	I	6-1-6	Emergency Keys		7-3	Power
I	5-7-3	RAS Lockout Time	I	6-1-7	Door Assignment	I	7-3-0	AC Options
I	5-7-5	IPRS Address	I	6-1-8	Lockout Time	I	7-3-1	Battery Options
I	5-7-6	IPRS Port	MI	6-1-9	WiFi Settings	I	7-3-2	Fuse Options
	5-9	Comms Test		6-2	RF Devices		7-4	Siren
UMI	5-9-0	Send Test Report	I	6-2-0	Receiver Options	I	7-4-0	Tone
I	5-9-1	Test Report Time	I	6-2-1	Supervision Time	I	7-4-1	Speed
I	5-9-2	Test Report Period	I	6-2-2	RF Device Options	MI	7-4-2	Volume
I	5-9-3	Test Report Options	I	6-2-3	Add RF Keypad	I	7-4-3	Siren Swinger
I	5-9-4	Test Route	I	6-2-4	Delete RF Keypad		7-5	TimeZones
I	5-9-5	Dial Number Test	I	6-2-5	View RF Device ID	MI	7-5-0	Name
			I	6-2-6	Smart Keyfob Func	MI	7-5-1	Time
			I	6-2-9	RF Site Key	MI	7-5-2	Day
				6-3	Serial Device	MI	7-5-3	TimeZone Options
			I	6-3-0	Device Type		7-6	Holidays
			I	6-3-1	Baud Rate	MI	7-6-0	Holiday Name
			I	6-3-2	Flow Control	MI	7-6-1	Start Stop Dates
			MI	6-5	GSM/GPRS		7-7	System Options
			I	6-5-0	GSM/GPRS Status	I	7-7-0	General Options
			MI	6-5-1	GSM/GPRS Options	I	7-7-1	Area Options
			MI	6-5-5	CLI Triggers	I	7-7-2	Keypad Idle Screen
			I	6-5-6	SMS Control	MI	7-7-3	Keypad Hi/Lo Temp
			I	6-5-7	APN Server Name	I	7-7-4	Installer Options
			I	6-5-8	APN Username	I	7-7-5	Language
			I	6-5-9	APN Password	MI	7-7-7	Site Name
				6-6	Ethernet Module	I	7-7-8	Custom Text Line 1
			I	6-6-0	Module IP Address	I	7-7-9	Custom Text Line 2
			I	6-6-1	Subnet Mask		7-9	System Testing
			I	6-6-2	Default Gateway	UMI	7-9-0	Walk Test All Zones
			I	6-6-3	Module MAC Address	UMI	7-9-1	Battery Test
			I	6-6-9	Ethernet Options			

Table 17: Menu Structure And Layout

Program Locations

The following section lists all of the programming locations available in the Solution 6000. The default values for each parameter are shown in grey.

In order to keep the size of this guide down to a minimum we have shown only one example for some parameters and then listed the default values for the other similar parameters. For example the user default table below shows the default values for users 1 to 990. Similar tables are used to show zone defaults etc.

Access Programming

Access > Commands >

Erase User MENU 1-0-0

Access > PIN Codes >

Change Own PIN MENU 1-1-0

Change Other PIN MENU 1-1-1

Add PIN MENU 1-1-2

Delete PIN MENU 1-1-3

View PIN MENU 1-1-4

Access > Token >

Add Token MENU 1-2-0

Delete Token MENU 1-2-1

Token Status MENU 1-2-2

Edit Token MENU 1-2-3

User Default Table

Parameter	User 1	User 2 - 990
User PIN	2580	
Name	User 1 Name	User 2 - 990
Area Assignment	1	1
User Options		
Master User	Y	
Reserved		
Arm Only		
Can Bypass	Y	Y
Auto Bypass	Y	Y
Always Report Op/CI	Y	Y
Reserved		
Log Credential		
TimeZone	01	01
Door Assignment		

Table 18: User Default Programming Options

Access > RF Keyfob >

Add Keyfob MENU 1-3-0

Delete Keyfob MENU 1-3-1

Test Keyfob MENU 1-3-2

Access > User Properties >

User Name MENU 1-4-0

U	s	e	r	1	N	a	m	e								
---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--	--

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Access > User Properties >

Area Assignment MENU 1-4-1

1	Security System	Y
2	Area 2 Name	N
3	Area 3 Name	N
4	Area 4 Name	N
5	Area 5 Name	N
6	Area 6 Name	N
7	Area 7 Name	N
8	Area 8 Name	N

Use the [↑] and [↓] keys to scroll the list of options. Select the option required, then press [ON] or [OFF] to enable or disable. A [✓] will display to indicate option set. Press [OK] to save when finished.

Access > User Properties >

User Options MENU 1-4-2

1	Master User	Y
2	Reserved	N
3	Arm Only	N
4	Can Bypass	Y
5	Auto Bypass Allowed	Y
6	Always Report Op/CI	Y
7	Reserved	N
8	Log Credential	N

Access > User Properties >

TimeZone Access**MENU 1-4-4**

0 1

- 00 - Disabled
- 01 - 24 Hour TimeZone
- 02 - TimeZone 2 Name
- 03 - TimeZone 3 Name
- 04 - TimeZone 4 Name
- 05 - TimeZone 5 Name
- 06 - TimeZone 6 Name
- 07 - TimeZone 7 Name
- 08 - TimeZone 8 Name
- 09 - TimeZone 9 Name
- 10 - TimeZone 10 Name
- 11 - TimeZone 11 Name
- 12 - TimeZone 12 Name
- 13 - TimeZone 13 Name
- 14 - TimeZone 14 Name
- 15 - TimeZone 15 Name
- 16 - TimeZone 16 Name

Enter 0 - 16 + [OK] to assign the user to a TimeZone – Can only be assigned to one TimeZone.



All users are assigned to TimeZone 1 by default. This means they have 24 hour access to the system. To restrict access. To restrict access to users, refer to TimeZones.

Access > User Properties >

Door Assignment**MENU 1-4-5**

1	Door 1 Name	N
2	Door 2 Name	N
3	Door 3 Name	N
4	Door 4 Name	N
5	Door 5 Name	N
6	Door 6 Name	N
7	Door 7 Name	N
8	Door 8 Name	N
9	Door 9 Name	N
10	Door 10 Name	N
11	Door 11 Name	N
12	Door 12 Name	N
13	Door 13 Name	N
14	Door 14 Name	N
15	Door 15 Name	N
16	Door 16 Name	N

Multiple doors can be assigned to each user. Press 1 – 16, then press [ON] or [OFF] to toggle door on/off, then press [OK] to save.

Access > User Properties >

User Expire Date**MENU 1-4-6**

Access > Global Properties >

PIN Length**MENU 1-5-0**

(***) System Wide Parameter (***)

0 4

- 00 - Variable
- 01 - 1 Digit
- 02 - 2 Digits
- 03 - 3 Digits
- 04 - 4 Digits
- 05 - 5 Digits
- 06 - 6 Digits
- 07 - 7 Digits
- 08 - 8 Digits

Enter 00 - 08 + [OK] to program the PIN length.

Access > Global Properties >

PIN Retry Count**MENU 1-5-1**

(***) System Wide Parameter (***)

0 6

Use [↑] and [↓] keys or enter 00 – 15 + [OK] to program the PIN retry count (00 = Unlimited).

Access > Global Properties >

Installer PIN**MENU 1-5-2**

1 2 3 4 A A A A

(***) System Wide Parameter (***)

Use [0] – [9] keys to program the installer PIN + [OK] to save. Installer PIN can be up to 8 digits long.

Access > Reporting >

Access Route**MENU 1-6-0**

- 00 - Log Events Only
- 01 - Dest 1 + Log
- 02 - Dest 2 + Log
- 03 - Dest 1 & 2 + Log
- 04 - Dest 2 If 1 Fails

0 0

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (***) System Wide Parameter (***)).

Access > Reporting >

Access Options**MENU 1-6-1**

1	Access Granted	Y
2	Access Denied	Y
3	Egress Granted	Y
4	Egress Denied	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Access > Fingerprint >

Add Fingerprint MENU 1-8-0

Access > Fingerprint >

Delete Fingerprint MENU 1-8-1

Access > Fingerprint >

Fingerprint Status MENU 1-8-2

Area Programming

By default the control panel is configured for one area. Examples given in this document are for Area 1 only. If the system is configured for more than one area then you will be prompted on the keypad to select the area you want to work on.

Areas > Commands >

Area Status MENU 2-0-0

Turn Area On/Off MENU 2-0-1

Turn All Areas On MENU 2-0-2

Turn All Areas Off MENU 2-0-3

Move To Area MENU 2-0-4

Chime On/Off MENU 2-0-5

Chime Mode MENU 2-0-6

Areas > Area Properties >

Area Name MENU 2-1-0

S e c u r i t y S y s t e m

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Areas > Properties >

General Options MENU 2-1-1

1	Exit Time Restart	N
2	Reset Alarm Memory	N
3	Duress Allowed	Y
4	Fault ACK Required	N
5	One Key Arming	Y
6	One Key Part On	Y
7	Link To Common Area	N
8	One Key Part Off	N

Areas > Properties >

Input Options MENU 2-1-2

1	Non Sequential	Y
2	Pulse Count H/Over	Y
3	Senior Watch	N
4	Reset Smoke On Arming	Y
5	Senior Watch In Minutes	N
6	Reserved	N
7	Reserved	N
8	Auto Arm In Part 1	N

Areas > Properties >

Output Options MENU 2-1-3

1	SPK Beeps Keyfob	Y
2	SPK Beeps Key/Sw	Y
3	SPK Strobe In Part On	Y
4	Alarm On PIN Retry	Y
5	Alarm Exit Error	N
6	Alarm Key/Sw Tamper	Y
7	Reserved	N
8	Reserved	N

Areas > Properties >

Reporting Options MENU 2-1-4

1	Report PIN Retry	Y
2	Report Exit Error	Y
3	Smart Lockout	N
4	Reserved	N
5	Cancel Report	Y
6	Reserved	N
7	Op/CI In Part On	N
8	Op/CI After Alarm	N

Areas > Properties >

Strobe Trigger MENU 2-1-5

1	Audible Burglary	Y
2	Silent Burglary	N
3	Fire Alarm	Y
4	Keyfob On/Off	N
5	Keypad On/Off	N
6	Reserved	N
7	24Hr Alarm	Y
8	Reserved	N

Areas > Area Properties >

Part Mode 1 Name MENU 2-1-6

P a r t 1 A r e a 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Areas > Area Properties >

Part Mode 2 Name MENU 2-1-7

P a r t 2 A r e a 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Areas > Area Properties >

Auto Arming MENU 2-1-8

0 0

- | | |
|-----------------------|-----------------------|
| 00 - Disabled | 09 - TimeZone 9 Name |
| 01 - 24 Hour TimeZone | 10 - TimeZone 10 Name |
| 02 - TimeZone 2 Name | 11 - TimeZone 11 Name |
| 03 - TimeZone 3 Name | 12 - TimeZone 12 Name |
| 04 - TimeZone 4 Name | 13 - TimeZone 13 Name |
| 05 - TimeZone 5 Name | 14 - TimeZone 14 Name |
| 06 - TimeZone 6 Name | 15 - TimeZone 15 Name |
| 07 - TimeZone 7 Name | 16 - TimeZone 16 Name |
| 08 - TimeZone 8 Name | |

Enter 0 - 16 + [OK] to assign the area to a TimeZone – Can only be assigned to one TimeZone (0 = Disabled). To set the start/stop and days of the week that the area will automatically arm, refer to TimeZone menu's.

Areas > Reporting >

Account Dest 1 MENU 2-2-0

0 0 0 0 0 0 0 0 0 0 0

Program the area account number for Destination 1 here (Enter digits 0 – 9 + [OK] to save).

Areas > Reporting >

Account Dest 2 MENU 2-2-1

0 0 0 0 0 0 0 0 0 0 0

Program the area account number for Destination 1 here (Enter digits 0 – 9 + [OK] to save).

Areas > Reporting >

Open Close Route MENU 2-2-2

- | | |
|------------------------|-----|
| 00 - Log Events Only | 0 1 |
| 01 - Dest 1 + Log | |
| 02 - Dest 2 + Log | |
| 03 - Dest 1 & 2 + Log | |
| 04 - Dest 2 If 1 Fails | |

Use [↑] and [↓] keys or enter 0 - 4 + [OK] to program which destination 'Open' and 'Close' reports are sent to.

Areas > Timers >

Exit Time MENU 2-8-0

0 6 0

Seconds

Enter 000 – 255 + [OK] to program the exit time in seconds.

Areas > Timers >

Entry Time 1 MENU 2-8-1

0 2 0

Seconds

Enter 000 - 255 + [OK] to program the entry time in seconds.

Areas > Timers >

Entry Time 2 MENU 2-8-2

0 4 0

Seconds

Enter 000 - 255 + [OK] to program the entry time in seconds.

Areas > Timers >

Part Entry Time MENU 2-8-3

0 6 0

Seconds

Enter 000 - 255 + [OK] to program the part entry time in seconds.

Areas > Timers >

Auto Arm Pre Alert MENU 2-8-4

(*** System Wide Parameter ***)

0	1	0
---	---	---

Minutes

Enter 000 – 255 + [OK] to program the pre-alert time in minutes (0 = No Pre-Alert).

Areas > Timers >

Senior Watch Time MENU 2-8-6

(*** System Wide Parameter ***)

0	0	0
---	---	---

Hours

Enter 000 – 255 + [OK] to program the senior watch interval in hours.

Areas > Area Testing >

Area Watch MENU 2-9-0

(*** System Wide Parameter ***)

0	1	2
---	---	---

Weeks

Enter 000 – 255 + [OK] to program the number of weeks before registering an inactivity event.

Areas > Area Testing >

User Test Interval MENU 2-9-1

(*** System Wide Parameter ***)

0	0	0
---	---	---

Days

Enter 000 – 255 + [OK] to program the number of days before a user test is requested.

Areas > Area Testing >

Service Interval MENU 2-9-2

(*** System Wide Parameter ***)

0	0	0
---	---	---

Weeks

Enter 000 – 255 + [OK] to program the number of weeks required between installer services.

Areas > Area Testing >

Test Options MENU 2-9-3

1	User Test Required	Y
2	Reserved	N
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Walk Test Report	Y
7	Walk Test 24Hr	N
8	Walk Test Fire	N

Input Programming

Inputs > Commands >

Zone Status MENU 3-0-0

Zone Array MENU 3-0-1

Bypass Zones MENU 3-0-2

Set Chime Zones MENU 3-0-3

Set Part 2 Zones MENU 3-0-4

Smoke Sensor Reset MENU 3-0-5

Inputs > Zone Properties >

Zone Name MENU 3-1-0

Z	o	n	e	1	N	a	m	e											
---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--	--	--	--	--

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Inputs > Zone Properties >

Zone Type MENU 3-1-1

0	1
---	---

- | | |
|------------------------|------------------------|
| 00 - Not Used | 08 - Hold Up 24Hr |
| 01 - Burglary Delay 1 | 09 - Medical 24Hr |
| 02 - Burglary Delay 2 | 10 - Panic 24Hr |
| 03 - Burglary Instant | 11 - Fire 24Hr |
| 04 - Burg Inst No Exit | 12 - Not Used |
| 05 - Burg Handover | 13 - Keyswitch Zone |
| 06 - Burglary 24Hr | 14 - Display Only |
| 07 - Tamper 24Hr | 15 - Non Burglary 24Hr |

Use [↑] and [↓] keys or enter 0 – 15 + [OK] to program the zone type.

Inputs > Zone Properties >

Area Assignment MENU 3-1-2

0	1
---	---

- | | |
|----------------------|------------------|
| 00 - No Area | 05 - Area 5 Name |
| 01 - Security System | 06 - Area 6 Name |
| 02 - Area 2 Name | 07 - Area 7 Name |
| 03 - Area 3 Name | 08 - Area 8 Name |
| 04 - Area 4 Name | |

Use [↑] and [↓] keys or enter 0 - 8 then press [OK] to program.

Zone Assignments

Zone Assignment Table

Module Number	Address Setting					Zone Numbers (Single EOL)	Zone Numbers (Alarm+Tamper EOL)	Zone Numbers (Split EOL)	Single or Alarm + Tamper EOL With CM705B + CM707B Module
	SW1	SW2	SW3	SW4	SW5				
Control Panel						1 to 8	1 to 8	1 to 16	1 to 8
1 =	OFF	OFF	OFF	OFF	OFF	17 to 24	17 to 24	17 to 32	17 to 24 25 to 32 on the CM707B
2 =	ON	OFF	OFF	OFF	OFF	33 to 40	33 to 40	33 to 48	33 to 40 41 to 48 on the CM707B
3 =	OFF	ON	OFF	OFF	OFF	49 to 56	49 to 56	49 to 64	49 to 56 57 to 64 on the CM707B
4 =	ON	ON	OFF	OFF	OFF	65 to 72	65 to 72	65 to 80	65 to 72 73 to 80 on the CM707B
5 =	OFF	OFF	ON	OFF	OFF	81 to 88	81 to 88	81 to 96	81 to 88 89 to 96 on the CM707B
6 =	ON	OFF	ON	OFF	OFF	97 to 104	97 to 104	97 to 112	97 to 104 105 to 112 on the CM707B
7 =	OFF	ON	ON	OFF	OFF	113 to 120	113 to 120	113 to 128	113 to 120 121 to 128 on the CM707B
8 =	ON	ON	ON	OFF	OFF	129 to 136	129 to 136	129 to 144	129 to 136 137 to 144 on the CM707B

Table 19: Zone Assignments

Inputs > Zone Properties >

Pulse Count MENU 3-1-3

Pulses

00 - No Pulse Count	08 - 8 Inertia Pulses
01 - 1 Pulse	09 - 9 Inertia Pulses
02 - 2 Pulses	10 - 10 Inertia Pulses
03 - 3 Pulses	11 - 11 Inertia Pulses
04 - 4 Pulses	12 - 12 Inertia Pulses
05 - 5 Pulses	13 - Door Open Too Long
06 - 6 Inertia Pulses	14 - PreDelay
07 - 7 Inertia Pulses	15 - Reserved

Enter 0 – 15 + [OK] to program the number of pulses the zone must register within the zone pulse count time.

Inputs > Zone Properties >

Pulse Count Time MENU 3-1-4

Seconds

Enter value between 000 – 255 then select multiplier of seconds, minutes or hours. Press [OK] to save. Use the [←] and [→] keys to toggle between value and multiplier settings.

Inputs > Zone Properties >

Door Assignment MENU 3-1-5

00 - Disabled	09 - Door 9 Name
01 - Door 1 Name	10 - Door 10 Name
02 - Door 2 Name	11 - Door 11 Name
03 - Door 3 Name	12 - Door 12 Name
04 - Door 4 Name	13 - Door 13 Name
05 - Door 5 Name	14 - Door 14 Name
06 - Door 6 Name	15 - Door 15 Name
07 - Door 7 Name	16 - Door 16 Name
08 - Door 8 Name	

A single door can be assigned to each zone. Use the [↑] and [↓] keys to highlight door name, then press [OK] to save.

Inputs > Zone Properties >

Report Route MENU 3-1-6

00 - Log Events Only
01 - Dest 1 + Log
02 - Dest 2 + Log
03 - Dest 1 & 2 + Log
04 - Dest 2 If 1 Fails

Use [↑] and [↓] keys or enter 0 - 4 + [OK] to set the destination zone reports are sent to.

Zone Default Table

The table below list the default values for all zone parameters in the Solution 6000. By default, zones 5 to 16 are set as Instant zones and zones 17 to 144 are set as Not Used. Zones marked as Not Used do not require EOL resistors to be fitted.

Programming	Zone 1	Zone 2	Zone 3	Zone 4	Zones 5 - 16	Zones 17 - 144
Zone Name	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5 to 16	Zone 17 to 144
Zone Type	1 = Delay 1	5 = Handover	5 = Handover	5 = Handover	3 = Instant	0 = Not Used
Area Assignment	1	1	1	1	1	1
Pulse Count	0	0	0	0	0	0
Pulse Count Time	120	120	120	120	120	120
Door Assignment	0	0	0	0	0	0
Report Route	2	2	2	2	2	2
Reporting Options						
Lockout Dialler	Y	Y	Y	Y	Y	Y
Report Alarm	Y	Y	Y	Y	Y	Y
Report Troubles	Y	Y	Y	Y	Y	Y
Report Bypass	Y	Y	Y	Y	Y	Y
Report Restores	Y	Y	Y	Y	Y	Y
Delay Reporting	N	N	N	N	N	N
Zone Options						
Lockout Siren	Y	Y	Y	Y	Y	Y
Silent Alarm	N	N	N	N	N	N
Inverted Seal	N	N	N	N	N	N
Bypass Allowed	Y	Y	Y	Y	Y	Y
Sensor Watch	N	N	N	N	N	N
Armed In Part On	Y	Y	Y	Y	Y	Y
No EOL Required	N	N	N	N	N	N
Test On Exit	Y	Y	Y	Y	Y	Y

Table 20: Zone Defaults

Inputs > Zone Properties >

Report Options**MENU 3-1-7**

1	Lockout Dialler	Y
2	Report Alarm	Y
3	Report Troubles	Y
4	Report Bypass	Y
5	Reserved	N
6	Reserved	N
7	Report Restores	Y
8	Delay Reporting	N

Inputs > Zone Properties >

Zone Options**MENU 3-1-8**

1	Lockout Siren	Y
2	Silent Alarm	N
3	Inverted Seal	N
4	Bypass Allowed	Y
5	Sensor Watch	N
6	Armed In Part On	Y
7	No EOL Required	N
8	Test On Exit	Y

Inputs > RF Zone >

Add RF Device**MENU 3-3-0****Delete RF Device****MENU 3-3-1****Test RF Device****MENU 3-3-2****Gross Attack****MENU 3-3-3-0****Minor Attack****MENU 3-3-3-1**

Inputs > RF Zone >

Zone Options**MENU 3-3-3-3**

1	Enable Rear Tamper	N
2	Enable Case Tamper	N
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Inputs > Global Input Options >

EOL Value**MENU 3-4-0**

(***) System Wide Parameter (***)

0 5

00 - No EOL	08 - 6k8 Ohm
01 - 1k0 Ohm	09 - 8k1 Ohm
02 - 1k5 Ohm	10 - 10k Ohm
03 - 2k2 Ohm	11 - 6K8 Alarm + 2k2 Tamp
04 - 2k7 Ohm	12 - 10k Alarm + 10k Tamp
05 - 3k3 Ohm	13 - 22k Ohm
06 - 4k7 Ohm	14 - 3k3 Alarm + 6k8 Tamp
07 - 5k6 Ohm	15 - Split EOL 3k3 //6k8

Use [↑] and [↓] keys or enter 0 - 15, then press [OK] to program globally the EOL resistor for all zones.

Inputs > Global Input Options >

Keyswitch Options**MENU 3-4-1**

(***) System Wide Parameter (***)

0 0

00 - Latching All On/Off	05 - Pulse All On/Off
01 - Latching All On	06 - Pulse All On
02 - Latch Part On/Off	07 - Pulse Part On/Off
03 - Latching Part On	08 - Pulse Part On
04 - Latching Off	09 - Pulse Part Off

Use [↑] and [↓] keys or enter 0 - 9, then press [OK] to program how the keyswitch will operate.

Inputs > Global Input Options >

Input Options**MENU 3-4-2**

1	Tamper On Short	N
2	Reserved	N
3	Response Time 500msec	N
4	Keyswitch No Exit Time	N
5	Keyswitch Open Close	Y
6	Alarm On Tamper	N
7	Reserved	N
8	Reserved	N

(***) System Wide Parameter (***)

Inputs > PGM Input >

Keyswitch Options**MENU 3-5-0**

0 0

00 - Disabled	03 - Simple RF On/Off
01 - Latching On/Off	04 - Bosch Serial Rcvr
02 - Pulse On/Off	05 - Crow Serial Rcvr (TBA)

Enter 0 - 8 + [OK] to select the interface method used for the given RF receiver.

Inputs > Tamper Inputs >

Tamper Options**MENU 3-6-0**

1	Display Panel Tpr	Y
2	Report Panel Tpr	Y
3	Audible Panel Tpr	Y
4	Display Expander Tpr	Y
5	Report Expander Tpr	Y
6	Audible Expander Tpr	Y
7	Reserved	N
8	Reserved	N

Inputs > Input Testing >

Walk Test All Zones**MENU 3-9-0**

Inputs > Input Testing >

Walk Test A Zones**MENU 3-9-1**

Inputs > Input Testing >

Sensor Watch Time**MENU 3-9-2**

(***) System Wide Parameter (***)

0 3 0

Days

Enter 0 - 255 + [OK] to program the sensor watch time in days (0 = Disabled).

Output Programming

Outputs > Commands >	
Output Status	MENU 4-0-0
Turn Output On/Off	MENU 4-0-1
Output Array	MENU 4-0-2
Door Status	MENU 4-0-3
Door Array	MENU 4-0-4
Door Control	MENU 4-0-5
Macro Array	MENU 4-0-6

Outputs > Properties >

Output Name	MENU 4-1-0
O u t p u t 1 N a m e	

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Outputs > Properties >

Event Type	MENU 4-1-1
0 0 0	

Use [↑] and [↓] keys or enter desired event type 0 – 255 + [OK]. See output event type table for available options.

Output Default Table

The table below list the default values for all Output parameters in the control panel. Outputs 1 to 4 are high current digital outputs and Output 5 is the onboard relay output. Outputs 9 to 40 are only available if the optional modules are fitted. Options marked N/A = Not Applicable.

Programming Option	Output 1	Output 2	Output 3	Output 4	Output 5	Output 9 - 40
Output Name	External Siren	Strobe Light	Smoke Sensor PWR	Internal Siren	On Board Relay	Output x Name
Event Type	36 (External Siren)	48 (Strobe)	49 (Smoke Sensor GND)	37 (Internal Siren)	54 (Keyfob Function 2)	00 (Not Used)
Event Assignment	0	0	0	0	0	0
Output Polarity	14 Speaker Output	6 1 Shot Low + Reset	11 Low 1 Shot Open	6 1 Shot Low + Reset	4 Open 1 Shot Low	0 Open To Low
Time Parameter						
N° Of Hours	000	008	000	000	000	000
N° Of Minutes	005	000	000	005	000	000
N° Of Seconds	000	000	010	000	002	000
N° Of 1/10 Seconds	000	000	000	000	000	000
Output Options						
Off On Low Battery	Y	Y	N	Y	N	N
Guest Control	N	N	N	N	N	N
Reserved	N	N	N	N	N	N
Monitor Overload	Y	Y	Y	Y	N	N
Monitor Device Fail	Y	Y	N	Y	N	N
Alarm On Device Fail	N	N	N	N	N	N
Block If All On	N	N	N	N	N	N
Show Status On Keypad	N	N	N	N	N	N

Table 21: Output Default Table

Output Event Types

00 - Disabled	P	26 - Entry Timing	A	52 - Exit Error	A
01 - Battery Trouble	P	27 - Exit Timing	A	53 - Keyfob Function 1	A
02 - AC Trouble	P	28 - End Of Exit Time	A	54 - Keyfob Function 2	A
03 - Telco Line Fail	P	29 - Chime On	A	55 - Output In PreDelay	Op
04 - Comm Fail	Rr	30 - Chime Zone Trigger	A	56 - Follow PIN Code	Ur
05 - 3rd Dial Attempt	Rr	31 - Auto Arm Pre Alert	A	57 - Part Entry Time	A
06 - Dest Reporting	Rr	32 - Ready To Arm All On	A	58 - TimeZones	Tz
07 - Disabled		33 - Ready To Part Arm	A	59 - Temperature Hi/Lo	Kp
08 - Dest Kiss Off	Rr	34 - Ready To Part 2 Arm	A	60 - Door	Dr
09 - User Keyfob Func 1	Ur	35 - Close Sent OK	A	69 - User Control	Ur
10 - User Keyfob Func 2	Ur	36 - External Audible	A	61 - Door Open Too Long	Dr
11 - Dialler Disabled	P	37 - Internal Audible	A	62 - Door Bell	A
12 - Output Device Missing	P	38 - Any Zone Alarm	A	63 - Zone Bypass	Zn
13 - Output Trouble	Op	39 - Fire Alarm	A	69 - User Control	Ur
14 - Panel On Line	P	40 - Burglary Alarm	A	70 - User Panic	Ur
15 - Incoming Call	P	41 - Silent Alarm	A	71 - CLI Trigger	CLI
16 - System Trouble	P	42 - Duress Alarm	A	72 - GSM Signal Lost	P
17 - Box Tamper	Zn	43 - Keypad Medical	A	73 - GPRS Failure	P
18 - Zone Trouble	Zn	44 - Keypad Fire	A	74 - Ethernet Fail	P
19 - Zone Mirror	Zn	45 - Keypad Panic	A	75 - Macro	Ma
20 - Zone Alarm	A	46 - Device Tamper	A		
21 - Area Disarmed	A	47 - Access Denied	A		
22 - Area Part Or All On	A	48 - Strobe	A		
23 - Area All On	A	49 - Smoke Sensor GND	A		
24 - Area Part On	A	50 - Sensor Watch	A		
25 - Area Part 2 On	A	51 - Senior Watch	A		

Legend:

(Ma) = Macro	(CLI) = CLI Trigger Table	(A) = Area Event Assignment
(P) = Panel Event Assignment	(Op) = Output Event Assignment	(Zn) = Zone Event Assignment
(Ur) = User Event Assignment	(Tz) = TimeZone Event Assignment	(Dr) = Door Group Event Assignment
(Kp) = Keypad	(Rr) = Reporting Destination	

Table 22: Output Event Types

Output Assignments

Output Assignments						
Module Number	Address Setting					Output Number
	SW1	SW2	SW3	SW4	SW5	
Control Panel						1 to 5
Virtual Outputs						6 to 8
1 =	OFF	OFF	OFF	OFF	OFF	9 to 12
2 =	ON	OFF	OFF	OFF	OFF	13 to 16
3 =	OFF	ON	OFF	OFF	OFF	17 to 20
4 =	ON	ON	OFF	OFF	OFF	21 to 24
5 =	OFF	OFF	ON	OFF	OFF	25 to 28
6 =	ON	OFF	ON	OFF	OFF	29 to 32
7 =	OFF	ON	ON	OFF	OFF	33 to 36
8 =	ON	ON	ON	OFF	OFF	37 to 40

Table 23: Address Configuration and Output Assignments

Outputs > Properties >	
Event Assignment	MENU 4-1-2
	0 0 0

- (A) = **Area Assignment**
Assign to Area 1 to 8 (0 = Any Area)
- (P) = **Control Panel**
- (Op) = **Output Assignment**
Assign to Output 1 to 40 (0 = Any Output)
- (Zn) = **Zone Assignment**
Assign to Zone 1 to 144 (0 = Any Zone)
- (Ur) = **User Assignment**
Assign to User 1 to 255 (0 = Any User)
- (Tz) = **TimeZone Assignment**
Assign to TimeZone 1 to 16 (0 = Any TimeZone)
- (Dr) = **Door Assignment**
Assign to Door Assignment 1 to 16 (0 = Any Door)
- (Kp) = **Keypad Assignment**
Assign to Keypad/LAN Reader 1 to 16 (0 = Any Keypad/LAN Reader)
- (Rr) = **Reporting Destination**
Assign to Destination 1 or 2 (0 = Destination 1 and/or Destination 2)
- (Ma) = **Macro Group Assignment**
Assign to Macro Group (0 = Any Macro Group)
- (CLI) = **CLI Trigger Table**
Assign to CLI Trigger Table 1 or 2 (0 = Both Tables)

Use [↑] and [↓] keys to program which Area, User, Zone, Keypad or Door Assignment etc you want the output to follow then press [OK].

Outputs > Properties >	
Output Polarity	MENU 4-1-3
	0 0

- 00 - Open To Low
- 01 - Open To Low + Pre
- 02 - Open Latching Low
- 03 - Open Pulsing Low
- 04 - Open 1 Shot Low
- 05 - 1 Shot Low+Retrigger
- 06 - 1 Shot Low + Reset
- 07 - Low To Open
- 08 - Low To Open + Pre
- 09 - Low Latching Open
- 10 - Low Pulsing Open
- 11 - Low 1 Shot Open
- 12 - 1 Shot Open+Retrigger
- 13 - 1 Shot Open + Reset
- 14 - Speaker Output
- 15 - Toggle

Enter 0 – 15 + [OK] to program the output polarity type. Each output can only have one polarity type programmed.

Outputs > Properties >	
Time Parameter	MENU 4-1-4
0 0 0	0 0 0
Hour	Minute
0 0 0	0 0 0
Seconds	10 th Sec

The time base parameter is only applicable for output types that are programmed as one shot or pulsing. Program 0 to 255 for each of the units (Hour, Minute, Seconds and 10th of a second) for the time parameter. Add the units together to give the total one shot time or pulsing on/off time.

One Shot Mode

The time base is the length of time that the output will operate.

For example, you may want a strobe output to operate for 1 hour, Either of the examples below will achieve the 1 hour time.

Total Time	Hour	Minute	Seconds	10th Sec
60 Minutes	001	000	000	000
60 Minutes	000	060	000	000

Table 24: One-Shot Polarity Example

Pulsing Mode

The time base is the unit of time that the output will pulse on and off. If the time base is programmed for 60 seconds, the output will pulse on for 60 seconds and then off for 60 seconds (repeat) until the output is reset.

Outputs > Properties >

Output Options**MENU 4-1-5**

1	Off On Low Battery	Y
2	Guest Control	N
3	Reserved	N
4	Monitor Overload	Y
5	Monitor Device Fail	Y
6	Alarm On Device Fail	N
7	Block If All On	N
8	Show Status On Keypad	N

Outputs > Door Properties >

Door Name**MENU 4-2-0**

D o o r 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Outputs > Door Properties >

Unlock TimeZone**MENU 4-2-2**

0 0

00 - Disabled	
01 - 24 Hour TimeZone	09 - TimeZone 9 Name
02 - TimeZone 2 Name	10 - TimeZone 10 Name
03 - TimeZone 3 Name	11 - TimeZone 11 Name
04 - TimeZone 4 Name	12 - TimeZone 12 Name
05 - TimeZone 5 Name	13 - TimeZone 13 Name
06 - TimeZone 6 Name	14 - TimeZone 14 Name
07 - TimeZone 7 Name	15 - TimeZone 15 Name
08 - TimeZone 8 Name	16 - TimeZone 16 Name

A single TimeZone can be assigned to each door. Use the [↑] and [↓] keys to highlight door name, then press [OK] to select. Enter 0 - 16 + [OK] to assign the door to a TimeZone – can only be Assigned to one TimeZone (0 = Disabled).

Outputs > Door Properties >

Door Options**MENU 4-2-3**

1	Hold Off If Area Armed	Y
2	Hold Off Auto Unlock	N
3	Reserved	N
4	Report Door Forced	N
5	Alarm On Door Forced	N
6	Report DOTL	N
7	Alarm On DOTL	N
8	Lift Door	N

Outputs > RF Output >

Add RF Device**MENU 4-3-0****Delete RF Device****MENU 4-3-1****Test RF Device****MENU 4-3-2**

Outputs > Macros >

Name**MENU 4-8-0**

M a c r o s 1 N a m e

This menu allows you to program the name for each macro. A maximum of 8 different macros can be configured. Macro names can be up to 20 characters long.

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Outputs > Macros >

Macro Rule**MENU 4-8-1**

This menu allows you to program the script for each macro. A maximum of 8 different macros can be configured. Macro scripts can be up to 20 characters long.

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Only the following characters are supported when constructing macro scripts.

Script Character	Character Represents
O	Output
A	Area All On
P	Area Part 1 On
Q	Area Part 2 On
M	Macro
T	TimeZone
H	Holiday
Z	Zone
D	Door
F	RF Keyfob Key
K	Keypad Arrow Key
	(Keypad keys incl. U/D/L/R)

Table 25: Macros Script Characters

The following macro script operators are available.

Operator Character	Operator Meaning
&	And
	Or
!	Inverted Function

Table 26: Macros Operator Characters

Outputs > Macros >

Scene	MENU 4-8-2

This menu allows you to program the scene for each macro. A maximum of 8 different scenes can be configured. Macro scenes can be up to 16 characters long.

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Only the following characters are supported when constructing macro scenes.

Script Character	Character Represents
O	Output
D	Door
A	Area
P	Part 1
Q	Part 2
Z	Zone Bypass
M	Macro
C	Countdown

Table 27: Macros Scene Characters

The following macro scene operators are available.

Operator Character	Operator Meaning
&	And
	Or
!	Inverted Function

Table 28: Macro Scene Operator Characters

Outputs > Output Testing >

External Siren Test	MENU 4-9-0
Internal Siren Test	MENU 4-9-1
Strobe Test	MENU 4-9-2
Fire Siren Test	MENU 4-9-3

Comms Programming

Comms > Commands >

Reserved	MENU 5-0-0
Call/Answer RAS	MENU 5-0-1
Call Forward On/Off	MENU 5-0-2
Check Web Email	MENU 5-0-3
Email System Log	MENU 5-0-4
Start Direct Link	MENU 5-0-5

Comms > Commands >

Voice Setup	MENU 5-0-6
-------------	------------

This menu allows an installer or master user to record their personal messages that will be reported when using an optional Voice Module (CM101B). The optional voice module is required.

Comms > Commands >

Register Customer	MENU 5-0-8
-------------------	------------

This menu is used to enter the customer registration number into the control panel. This unique 11 digit number is generated by the system owner when they create an account on MyAlarm web site.

This is required for panels using the MyAlarm iFob Control App. See the MyAlarm website for more information at www.myalarm.com.au

Comms > Commands >

Register Installer	MENU 5-0-9
--------------------	------------

This menu is used to enter the installer registration number into the control panel. This unique 11 digit number is generated by the installer when they create an installer account on the MyAlarm web site.

This number should be entered into all panels installed by the installer allowing them to view all of their panels via the MyAlarm web site.

Comms > Telephone Numbers >
Number Prefix MENU 5-1-0

1	Digits								32

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >
Destination 1 MENU 5-1-1

Phone 1

1	Digits								32

Phone 2

1	Digits								32

Phone 3

1	Digits								32

Phone 4

1	Digits								32

Phone 5

1	Digits								32

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >
Destination 2 MENU 5-1-2

Phone 1

1	Digits								32

Phone 2

1	Digits								32

Phone 3

1	Digits								32

Phone 4

1	Digits								32

Phone 5

1	Digits								32

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >
Call Forward On MENU 5-1-6

1	Digits								32
*	6	1	,	*	2	0	#		

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Telephone Numbers >
Call Forward Off MENU 5-1-7

1	Digits								32
#	6	1	#						

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Properties >
Call Attempt Count MENU 5-2-0

0	6
---	---

Enter 0 - 10 then press [OK] to program the maximum call retry attempts per destination

Comms > Properties >
Dialler Options MENU 5-2-1

1	Dialler Enabled	Y
2	Pulse Dialling	N
3	Dial Tone Detect	Y
4	Busy Tone Detect	N
5	Mirror Report To Web	Y
6	Extend H/S To 1min	N
7	Reserved	N
8	Abort Failed Reports	Y

Comms > Properties >
Phone Line Options MENU 5-2-2

1	Display Line Fail	Y
2	Report Line Fail	Y
3	Alarm L/Fail If On	Y
4	Alarm L/Fail If Off	N
5	Reserved	N
6	Digital Line	N
7	Low Voltage	N
8	Display On Line	N

Comms > Properties >

Country MENU 5-2-3

(*** System Wide Parameter ***) 0 1

- Ln1 AUSTRALIA
- Ln2 NEW ZEALAND
- Ln3 ITALY
- Ln4 GREECE
- Ln5 CYPRUS
- Ln6 SPAIN
- Ln7 PORTUGAL
- Ln8 HUNGARY
- Ln9 CZECH REPUBLIC
- Ln10 POLAND
- Ln11 TURKEY
- Ln12 CHINA
- Ln13 HONG KONG
- Ln14 MALAYSIA
- Ln15 BRAZIL

Use [↑] and [↓] keys or enter 0 – 15 + [OK] to set which country the panel is being used in. Only 1 option can be programmed.

Comms > Properties >

Set SMS Pasword MENU 5-2-7

p a s s w d

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Comms > Remote Access >

Call Back Number MENU 5-3-0

1 Digits 32

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).

Comms > Remote Access >

RAS Security PIN MENU 5-3-1

1 2 3 4 5 6 7 8

Use keys [0] - [9] to program RAS Security PIN + [OK] to save.

Comms > Remote Access >

Log Threshold MENU 5-3-2

7 0 %

Enter 0 - 9 to program log threshold + [OK] to save.

Comms > Remote Access >

Ring Count MENU 5-3-3

00 - No Answer 2 0

01 to 30 - Answer Ring Count

Use [↑] and [↓] keys or enter 0 - 30 then press [OK] to program the ring count - single option only.

Comms > Remote Access >

RAS Options MENU 5-3-4

1	RAS Allowed	Y
2	Callback Verify	N
3	Abort RAS On Alarm	Y
4	Answer Bypass	Y
5	Answer Only If Armed	N
6	RAS Only If Disarmed	N
7	Allow User Functions	Y
8	Report RAS Sessions	Y

Comms > Remote Access >

DTMF Options MENU 5-3-5

1	DTMF Arming	Y
2	DTMF Disarming	N
3	DTMF User Functions	N
4	DTMF Quick Arming	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Comms > Remote Access >

Voice Access Code MENU 5-3-6

9 #

Reserved for future use.

Comms > Remote Access >

CLI Numbers MENU 5-3-7

First Number 1 Digits 32

Second Number 1 Digits 32

Third Number 1 Digits 32

Use [←] and [→] keys to scroll cursor left and right. Enter [0] – [9] for digits and use [↑] and [↓] to toggle special characters - * # and , (pause).



Up to 3 Phone numbers can be entered for CLI Call Line Identification for remote access detection. Press [OK] after each telephone number is entered to save and move to the next number. The control panel *is only required to match part of the CLI telephone number programmed to the number of the incoming call.*

Example

If the programmed CLI telephone number is 0296721777, the control panel would only be required to match part of the telephone number (eg. 96721777) to answer the incoming call.

Comms > Remote Access >

User RAS PIN MENU 5-3-8

0 0 0 0 0 0 0 0

Use keys [0] - [9] to program User RAS Security PIN + [OK] to save.

Comms > Reporting >

TX Format Dest 1 MENU 5-4-0

0 1

- | | |
|----------------------|-------------------------|
| 00 - Disabled | 08 - Voice PSTN |
| 01 - Contact ID PSTN | 09 - SIA+ PSTN |
| 02 - SIA PSTN | 10 - PSTN Voice+GSM SMS |
| 03 - Reserved | 11 - GSM 2G Contact ID |
| 04 - Reserved | 12 - GSM SMS |
| 05 - Reserved | 13 - Ethernet |
| 06 - SMS PSTN | 14 - GPRS |
| 07 - Domestic PSTN | 15 - MyAlarm IP |

Use [↑] and [↓] keys or enter 0 – 15 then press [OK] to program the transmission format the control panel will use to report to Destination 1. Only 1 option can be programmed.

Comms > Reporting >

TX Format Dest 2 MENU 5-4-1

0 1

- | | |
|----------------------|-------------------------|
| 00 - Disabled | 08 - Voice PSTN |
| 01 - Contact ID PSTN | 09 - SIA+ PSTN |
| 02 - SIA PSTN | 10 - PSTN Voice+GSM SMS |
| 03 - Reserved | 11 - GSM 2G Contact ID |
| 04 - Reserved | 12 - GSM SMS |
| 05 - Reserved | 13 - Ethernet |
| 06 - SMS PSTN | 14 - GPRS |
| 07 - Domestic PSTN | 15 - MyAlarm IP |

Use [↑] and [↓] keys or enter 0 – 15 then press [OK] to program the transmission format the control panel will use to report to Destination 2. Only 1 option can be programmed.

Comms > Reporting

Test Route MENU 5-4-2

00 - Log Events Only 0 1

01 - Dest 1 + Log

02 - Dest 2 + Log

03 - Dest 1 & 2 + Log

04 - Dest 2 If 1 Fails

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Reporting

System Route MENU 5-4-3

00 - Log Events Only 0 1

01 - Dest 1 + Log

02 - Dest 2 + Log

03 - Dest 1 & 2 + Log

04 - Dest 2 If 1 Fails

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Reporting

Emergency Route MENU 5-4-4

00 - Log Events Only 0 1

01 - Dest 1 + Log

02 - Dest 2 + Log

03 - Dest 1 & 2 + Log

04 - Dest 2 If 1 Fails

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Reporting >

Swinger Dialler MENU 5-4-5

(** System Wide Parameter **) 0 6

Enter 0 – 15 + [OK] to program number of times the dialler can report before lockout. 0 = Unlimited.

Comms > Reporting >

Burg Report Delay MENU 5-4-6

(** System Wide Parameter **) 0 0 0

Seconds

Enter 0 – 255 seconds + [OK] to program the delay time in seconds before reports are sent. 0 = No Delay.

Comms > Reporting >

Fire Report Delay MENU 5-4-7

(** System Wide Parameter **) 0 0 0

Seconds

Enter 0 – 255 seconds + [OK] to program the delay time in seconds before reports are sent. 0 = No Delay.

Comms > MyAlarm >
IP Address MENU 5-5-0

Primary 1 Digits 12
 0 5 2 0 6 4 0 1 7 0 5 4

Secondary 1 Digits 12
 0 5 2 0 6 4 0 1 7 0 5 4

Factory Set. Do not change unless advised to do so by the manufacturer.

Comms > MyAlarm >
IP Port MENU 5-5-1

Primary 0 9 0 5 0

Secondary 0 9 0 5 1

Factory Set. Do not change unless advised to do so by the manufacturer.

Comms > MyAlarm >
MyAlarm Options MENU 5-5-2

1	Disp Eth/WiFi Poll Fail	N
2	Rpt Eth/WiFi Poll Fail	N
3	Disp Cellular Poll Fail	N
4	Rpt Cellular Poll Fail	N
5	Disable Eth/WiFi MyAlar	N
6	Reserved	N
7	Reserved	N
8	Static IP	N

Comms > MyAlarm >
Gateway Numbers MENU 5-5-7

SMS Primary 1 Digits 32
 1 3 4 5 0 6 4 1

SMS Secondary 1 Digits 32
 1 3 4 5 1 8 2 5

Email 1 Digits 32
 1 3 4 5 2 5 0 5

MyAlarm 1 Digits 32
 1 3 4 5 2 5 0 5

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Comms > MyAlarm >
Email Address MENU 5-5-8

Email Address 1 Characters 80

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position. To program the '@' symbol, press the [↑] key 32 times.

Comms > MyAlarm >
Email Options MENU 5-5-9

1	Open Close	Y
2	Zones	Y
3	System	Y
4	Access	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Comms > IP Reporting >
Receiver IP MENU 5-6-0

Dest No 1 1 Digits 12
 0 0 0 0 0 0 0 0 0 0 0 0

Dest No 2 1 Digits 12
 0 0 0 0 0 0 0 0 0 0 0 0

Use [←] and [→] keys to scroll cursor, enter 0 – 9 for IP address digits and press [OK] to save when finished.

Comms > IP Reporting >
Receiver Port MENU 5-6-1

Dest No 1 0 7 7 0 0

Dest No 2 0 7 7 0 0

Enter base station port number - must be 5 digits within the range 0 to 65535. Use [←] and [→] keys to scroll cursor. Press [OK] to save.

Comms > IP Reporting >
Poll Rate MENU 5-6-2

0 3 6 0
 Seconds x10

Enter 0000 - 9999 + [OK] to program the poll rate time in seconds (x10) for both Destination 1 and/or Destination 2.

Comms > IP Reporting >
ACK Wait Time MENU 5-6-3
 0 | 1 | 0
 Seconds

Enter 0 - 255 + [OK] to program the acknowledge wait time in seconds for both Destination 1 and/or Destination 2.

Comms > IP Reporting >
IP Format MENU 5-6-4
 00 - Conettix 0 | 1
 01 - Conettix NNC (Anti Replay)
 02 - CSV IP ALARM
 03 - SIA UDP
 04 - SIA
 03 - Reserved
 06 - CSV IP UDP
 07 - Reserved
 08 - Reserved

Enter 0 - 7 + [OK] to program the IP format for both Destination 1 and/or Destination 2.

Comms > IP Reporting >
Retry Count MENU 5-6-5
 0 | 3

Enter 0 - 15 + [OK] to program the IP retry count (0 = No Retry) for both Destination 1 and/or Destination 2.

Comms > IP Reporting >
Encryption Key MENU 5-6-6
 Dest N° 1 1 Digits 32
 0 0 0 0 0 0 0 0 0 0 0 0
 Dest N° 2 1 Digits 32
 0 0 0 0 0 0 0 0 0 0 0 0

The encryption key must match the encryption key on the base station receiver for communication to take place. To remove encryption set MENU-5-6-6 to all zeros.

Comms > IP Reporting >
Conettix NNC MENU 5-6-7
 Dest N° 1 0 0 0 0 0 0 0 0 0
 Dest N° 2 0 0 0 0 0 0 0 0 0

The NNC number is used to prevent anti-replay attacks when reporting in Conettix format. The NNC number will be assigned by the control room at the time the account is setup. Like the account number the NNC will always be unique.

Comms > IP Reporting >
SIA IP Prefix MENU 5-6-8
 Account 1 Digits 16
 Dest N° 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
 Account 1 Digits 16
 Dest N° 2 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

Account Prefix 1 Digits 6
 Dest N° 1 0 0 0 0 0 0
 Account Prefix 1 Digits 6
 Dest N° 2 0 0 0 0 0 0
 Receiver Prefix 1 Digits 6
 Dest N° 1 0 0 0 0 0 0
 Receiver Prefix 1 Digits 6
 Dest N° 2 0 0 0 0 0 0

Highlight the parameter that you want to program, then press [OK] to select. Use the [←] and [→] keys to scroll cursor left and right. Use the [0] - [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Comms > IP Reporting >
User Name/Password MENU 5-6-9
 Username 1 Digits 16
 Password 1 Digits 16

Username
 Password

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] - [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Comms > IP Reporting >
IP Reporting Options MENU 5-6-1-0

1	Use SIA Format	N
2	SIA With Text	N
3	32 Bit Checksum	N
4	Reserved	N
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Comms > IP Remote Access >

IP Address MENU 5-7-0

1 12
 Digits
 Installer 0 0 0 0 0 0 0 0

1 12
 Digits
 User 0 0 0 0 0 0 0 0

Use [←] and [→] keys to scroll cursor, use [0] – [9] keys to enter IP address, then press [OK] to save when finished.

Comms > IP Remote Access >

IP Port MENU 5-7-1

Installer 0 7 7 0 1

User 0 7 7 0 1

Enter IP Port - must be 5 digits within the range 0 to 65535. Use [←] and [→] keys to scroll cursor. Press [OK] to save.

Comms > IP Remote Access >

IP RAS Options MENU 5-7-2

1	IP RAS Allowed	Y
2	RAS Only If Disarmed	N
3	Report IP Session	Y
4	Report IP Lockout	Y
5	UDP Installer RAS	Y
6	UDP User RAS	Y
7	Reserved	N
8	Reserved	N

Comms > IP Remote Access >

RAS Lockout Time MENU 5-7-3

0 6 0

Seconds

Enter 0 - 255 + [OK] to program the acknowledge wait time in seconds.

Comms > IP Remote Access >

IPRS Address MENU 5-7-5

2 0 2 1 2 9 0 8 3 0 5 8

Reserved for factory use. Do not change unless requested to do so.

Comms > IP Remote Access >

IPRS Port MENU 5-7-6

0 7 7 0 3

Reserved for factory use. Do not change unless requested to do so. Must be 5 digits within the range 0 to 65535.

Comms > Comms Test >

Send Test Report MENU 5-9-0

Comms > Comms Test >

Test Report Time MENU 5-9-1

Test Time

0 2 : 0 0

H H : M M

Use the [←] and [→] keys to move to the field then [↑] and [↓] to change. Press [OK] to save or [MENU] to exit without saving.



Scroll through hours using the [↑] and [↓] to change from am to pm.

Comms > Comms Test >

Test Report Period MENU 5-9-2

(** System Wide Parameter **) 0 1

- 00 - No Test Report
- 01 - Every Day
- 02 - Every Week
- 03 - Every Month
- 04 - Every 2 Days
- 05 - Every 3 Days
- 06 - Every 4 Days
- 07 - Every 5 Days
- 08 - Reserved
- 09 - Reserved
- 10 - Reserved
- 11 - Reserved
- 12 - Reserved
- 13 - Reserved
- 14 - Every Hour
- 15 - Every 12 Hours

MENU 5-9-2 programs the interval between automatic test reports. Use [↑] and [↓] keys or enter [0] to [15] + [OK] to program.

Comms > Comms Test >

Test Report Options MENU 5-9-3

1	Test If No Other Rpt	N
2	Test On Siren Reset	Y
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

Comms > Reporting

Test Route**MENU 5-9-4**

- 00 - Log Events Only
- 01 - Dest 1 + Log
- 02 - Dest 2 + Log
- 03 - Dest 1 & 2 + Log
- 04 - Dest 2 If 1 Fails

0 1

Use [↑] and [↓] keys or enter 0 - 4 + [OK]. Enter single option only. (** System Wide Parameter **).

Comms > Comms Test >

Dial Number Test**MENU 5-9-5**

Use the option to test the system dialer to your mobile or other phone. Enter the digits to dial and press OK. The system will call the number entered. This function will stop after 30 seconds, or by pressing [OK]. Enter [0] - [9] for telephone digits. Use [↑] and [↓] to toggle special Characters * # and , (Pause).

Device Programming

Devices > Commands >

Device Status**MENU 6-0-0****LAN Secure****MENU 6-0-1****LAN Scan****MENU 6-0-2****LAN Watch****MENU 6-0-3****Keypad Volume****MENU 6-0-7****Keypad Contrast****MENU 6-0-8****Keypad Backlight****MENU 6-0-9**

Devices > Keypads & Readers >

Name**MENU 6-1-0**

K	e	y	p	a	d	1	N	a	m	e									
---	---	---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--	--	--

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] - [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > Keypads & Readers >

Area Options**MENU 6-1-2**

1	All On Arming Allowed	Y
2	Part On Arming Allowed	Y
3	Disarming Allowed	Y
4	Single Button Control	Y
5	All User Areas	N
6	Zero Exit Time	N
7	PIN To Change Area	N
8	Home Area Only	N

Devices > Keypads & Readers >

Home Area**MENU 6-1-3**

0 1

- 00 - No Area
- 01 - Security System
- 02 - Area 2 Name
- 03 - Area 3 Name
- 04 - Area 4 Name
- 05 - Area 5 Name
- 06 - Area 6 Name
- 07 - Area 7 Name
- 08 - Area 8 Name

Use [↑] and [↓] keys or enter 0 - 8 then press [OK] to program. This is the area that will be displayed on the keypad by default.



All keypads must have a home area programmed to work correctly.

Devices > Keypads & Readers >

General Options**MENU 6-1-4**

1	Enable Rear Tamper	N
2	Report Temperature	Y
3	Installer PIN Allowed	Y
4	Show Alarm When Armed	Y
5	Reader Area Control	Y
6	Reader Badging	N
7	Enable Egress Input	N
8	Log Egress Events	N

Devices > Keypads & Readers >

Indicator Options**MENU 6-1-5**

1	Extinguish	N
2	Greetings	Y
3	Display Temperature	N
4	Display Area Icons	N
5	Trouble Alert Beeps	Y
6	Entry Exit Warning	Y
7	Part Exit Warning	N
8	Chime Tone	Y

Devices > Keypads & Readers >

Emergency Keys MENU 6-1-6

1	Audible Keypad Fire	Y
2	Report Keypad Fire	Y
3	Audible Keypad Medical	Y
4	Report Keypad Medical	Y
5	Audible Keypad Panic	Y
6	Report Keypad Panic	Y
7	Reserved	N
8	Reserved	N

Devices > Keypads & Readers >

Door Assignment MENU 6-1-7

0	0
---	---

- 00 - No Door Assignment
- 01 - Door 1 Name
- 02 - Door 2 Name
- 03 - Door 3 Name
- 04 - Door 4 Name
- 05 - Door 5 Name
- 06 - Door 6 Name
- 07 - Door 7 Name
- 08 - Door 8 Name
- 09 - Door 9 Name
- 10 - Door 10 Name
- 11 - Door 11 Name
- 12 - Door 12 Name
- 13 - Door 13 Name
- 14 - Door 14 Name
- 15 - Door 15 Name
- 16 - Door 16 Name

A single door can be assigned to each keypad. Use the [↑] and [↓] keys to highlight door name, then press [OK] to save.

Devices > Keypads & Readers >

Lockout Time MENU 6-1-8

(***) System Wide Parameter (***)

0	6	0
---	---	---

Seconds

Enter 001 – 255 + [OK] to program the keypad lockout time in seconds. 000 = No Lockout.

Devices > Keypads & Readers >

WiFi Settings MENU 6-1-9

SSID Scan
SSID
Security
Password
IP Address
Subnet Mask
Default Gateway
MAC Address
IP Options

This menu allows users and installers to scan local on-site Wi-Fi networks using the CP741B keypad including setting the required Wi-Fi security settings and password.

Devices > RF Devices >

Receiver Options MENU 6-2-0

1	Display RF Rcvr Trouble	Y
2	Alarm RF Rcvr Tamper	Y
3	Report RF Rcvr Tamper	Y
4	Alarm RF Rcvr Jamming	N
5	Report RF Rcvr Jamming	N
6	Alarm Rcvr Comms Fail	Y
7	Report Rcvr Comm Fail	Y
8	Bosch Compatible	N

Device > RF Devices >

Supervision Time MENU 6-2-1

(***) System Wide Parameter (***)

0	0	1
---	---	---

Hours

Enter the supervision time for RF devices in hours (001 - 255 Hours) 000 = No Supervision.

Device > RF Devices >

RF Device Options MENU 6-2-2

1	Display RF Tamper	Y
2	Report RF Tamper	Y
3	Report RF Low Battery	Y
4	Report Lost RF Devices	Y
5	Open Zone On Lost RF	N
6	Audible Keyfob Panic	Y
7	Report Keyfob Panic	Y
8	Keyfob Func Part On	Y

Devices > RF Devices >

Add RF Keypad MENU 6-2-3

Delete RF Keypad MENU 6-2-4

View RF Device ID MENU 6-2-5

Smart Keyfob Func MENU 6-2-6

This menu configures each button and function of smart keyfobs. Buttons 1 to 5 are single press functions and buttons 6 to 10 are hold down functions.

Devices > RF Devices >

RF Site Key MENU 6-2-9

--	--	--	--	--	--	--	--	--	--

This menu locks RF sensors to the control panel. The default RF Site Key is the serial number of the control panel.

Devices > Serial Device >

Device Type MENU 6-3-0

00 - Disabled 0 0

01 - Serial Printer

02 - Computer

Use [↑] and [↓] keys or enter 0 – 2 + [OK] to program the type of Serial device connected to the serial port.

Devices > Serial Device >

Baud Rate MENU 6-3-1

00 - No Device Conn 0 0

01 - 300 Baud 04 - 2400 Baud

02 - 600 Baud 05 - 9600 Baud

03 - 1200 Baud 06 - 19200 Baud

Use [↑] and [↓] keys or enter 0 – 2 to program the serial device baud rate, then press [OK] to save.

Devices > Serial Device >

Flow Control MENU 6-3-2

00 - No Handshaking 0 0

01 - Hardware

02 - Xon-Xoff


Use [↑] and [↓] keys or enter 0 – 2 to program the serial device flow control, then press [OK] to save.

Devices > GSM/GPRS Module >

GSM/GPRS Status MENU 6-5-0

This command interrogates the GSM module and displays information about the radio and the SIM installed. The first line is a heading which indicates the GSM module type that is installed. Typical information available includes details on the installed radio, the SIM provider and signal strength of the currently active SIM.

It should be noted that the use of SIM 2 is restricted to reporting protocols that utilise the dual sim where SIM 2 is a backup.

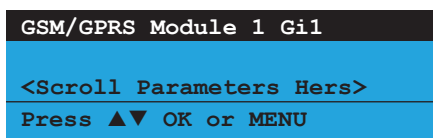

The following parameters will be displayed one at time on the display.

- IMEI
- Radio Model

Radio Firmware

Radio S/N

Provider

Signal Strength

Dual Sims Detected

Devices > GSM/GPRS Module >

GSM/GPRS Options MENU 6-5-1

1	Display Troubles	Y
2	Report Troubles	Y
3	Delay Reporting	Y
4	Alarm On LAN Fail	N
5	Lock GSM Band	N
6	Report Device Fail	Y
7	LTE Only	N
8	Second Carrier Preferred	N

Devices > GSM/GPRS Module >

CLI Trigger Table 1 MENU 6-5-5-0

	1	Digits	16
Phone 1	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 2	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 3	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 4	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 5	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 6	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 7	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 8	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 9	<input type="text"/>	<input type="text"/>	<input type="text"/>
	1	Digits	16
Phone 10	<input type="text"/>	<input type="text"/>	<input type="text"/>

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).



Up to 10 CLI telephone numbers can be entered for Table 1. Press [OK] after each telephone number is entered to save and move to the next telephone number. The control panel is only required to match part of the CLI telephone number

programmed to the number of the incoming call.

Do not enter international or domestic prefixes when entering CLI numbers. Eg. enter 0423584578 and not +61423584578

Devices > GSM/GPRS Module >

CLI Trigger Table 2

MENU 6-5-5-1

Phone 1	1	Digits	16
Phone 2	1	Digits	16
Phone 3	1	Digits	16
Phone 4	1	Digits	16
Phone 5	1	Digits	16
Phone 6	1	Digits	16
Phone 7	1	Digits	16
Phone 8	1	Digits	16
Phone 9	1	Digits	16
Phone 10	1	Digits	16

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).



Up to 10 CLI telephone numbers can be entered for Table 2. Press [OK] after each telephone number is entered to save and move to the next telephone number. The control panel is only required to match part of the CLI telephone number programmed to the number of the incoming call.

Do not enter international or domestic prefixes when entering CLI numbers. Eg. enter 0423584578 and not +61423584578

Devices > GSM/GPRS Module >

SMS Control

MENU 6-5-6

Phone 1	1	Digits	16
Phone 2	1	Digits	16
Phone 3	1	Digits	16
Phone 4	1	Digits	16
Phone 5	1	Digits	16
Phone 6	1	Digits	16
Phone 7	1	Digits	16
Phone 8	1	Digits	16
Phone 9	1	Digits	16
Phone 10	1	Digits	16

Use [←] and [→] keys to scroll cursor. Enter [0] – [9] for telephone digits. Use [↑] and [↓] to toggle special characters * # and , (Pause).



Up to 10 telephone numbers can be entered to provide SMS control. Press [OK] after each telephone number is entered to save and move to the next telephone number. Do not enter international or domestic prefixes when entering SMS Control numbers. Eg. enter 0423584578 and not +61423584578

Devices > GSM/GPRS Module >

APN Server Name

MENU 6-5-7

APN Server Name	1	Digits	32
-----------------	---	--------	----

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > GSM/GPRS Module >

APN Username MENU 6-5-8

APN 1 Digits 32
 Username

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Enter the appropriate name of your 3G/4G GPRS mobile network provider to connect to the public Internet. For example Telstra APN=Telstra.wap, Optus APN=yesinternet or APN = connectme, Vodafone APN=live.vodafone.com

Devices > GSM/GPRS Module >

APN Password MENU 6-5-9

APN 1 Digits 32
 Password

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

Devices > Ethernet Module >

Module IP Address MENU 6-6-0

This is the IP address of the module on the customers internal local area network.

Devices > Ethernet Module >

Subnet Mask MENU 6-6-1

This can be found by running IPCONFIG on a PC connected to the clients network. Typical Subnet mask is 255.255.255.0.

Devices > Ethernet Module >

Default Gateway MENU 6-6-2

This gateway IP address can be found by running IPCONFIG on a PC connected to the clients network.

Devices > Ethernet Module >

Module MAC Address MENU 6-6-3

This is the hardware machine address of the module and can be found on the bar-coded sticker on the module.

Devices > Ethernet Module >

Ethernet Options MENU 6-6-9

1	Display Faults	Y
2	Report Network Lost	Y
3	Report IP Conflict	Y
4	Report Poll Fail	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Report Module Missing	N



See the ethernet module installation guide for more detailed explanation on installation configuring the ethernet module.

System Programming

System > Commands >

Panel Status MENU 7-0-0**System Trouble** MENU 7-0-1**History Log** MENU 7-0-2**Domestic Default** MENU 7-0-3**Factory Default** MENU 7-0-4**Template Default** MENU 7-0-5

Reserved for future use.

TimeZone Array MENU 7-0-6**Service Mode** MENU 7-0-8

System > Clock >

Set Date And Time MENU 7-1-0

System > Clock >

Summertime On MENU 7-1-1

At 2:00am

Month Week Day

(*** System Wide Parameter ***)

Program the month of the year (Jan – Dec), week of the month (Wk1 to Last) and day of the week (Sun To Sat). Use [←] and [→] keys to scroll cursor left and right and use [↑] and [↓] to toggle options.

System > Clock >

Summertime Off

MENU 7-1-2

At 2:00am

Month Week Day

(*** System Wide Parameter ***)

Program the month of the year (Jan – Dec), week of the month (Wk1 to Last) and day of the week (Sun To Sat). Use [←] and [→] keys to scroll cursor left and right and use [↑] and [↓] to toggle options.

System > Clock >

Locale

MENU 7-1-3

(*** System Wide Parameter ***)

- 00 - Disabled
- 01 - SYDNEY
- 02 - MELBOURNE
- 03 - BRISBANE
- 04 - ADELAIDE
- 05 - PERTH
- 06 - HOBART

MENU 7-1-3 programs the locale in Australia. Use [↑] and [↓] keys or enter [0] to [15] + [OK] to program.

System > Power >

AC Options

MENU 7-3-0

1	Display AC Fail	Y
2	Report AC Fail	Y
3	Sync Clock To AC	Y
4	Random AC Report 2hr	N
5	AC Fail After 1hr	N
6	Reserved	N
7	Reserved	N
8	Display Clock Trouble	Y

System > Power >

Battery Options

MENU 7-3-1

1	Display Battery Fail	Y
2	Report Battery Fail	Y
3	Battery Test On Arming	Y
4	OK To Arm Low Battery	Y
5	Reserved	N
6	Reserved	N
7	Reserved	N
8	Reserved	N

System > Power >

Fuse Options

MENU 7-3-2

1	Display COMM+ O/Load	Y
2	Report COMM+ O/Load	Y
3	Display +12v O/Load	Y
4	Report +12v O/Load	Y
5	Display LAN O/Load	Y
6	Report LAN O/Load	Y
7	Reserved	N
8	Reserved	N

System > Siren >

Tone

MENU 7-4-0

Speed

MENU 7-4-1

Volume

MENU 7-4-2

(*** System Wide Parameter ***)

Enter 0 – 15 + [OK] to program the speaker beep volume of the siren for RF keyfob and keyswitch input operation (0 = Disabled / 1 = Low – 15 = High).

System > Siren >

Siren Swinger

MENU 7-4-3

(*** System Wide Parameter ***)

Enter 0 – 15 + [OK] to program number of times siren can sound before lockout. (0 = Unlimited).

System > TimeZones >

Name

MENU 7-5-0

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > TimeZones >

Time MENU 7-5-1

Period 1	Start Time -- : -- : -- HH MM SS	Stop Time -- : -- : -- HH MM SS
Period 2	Start Time -- : -- : -- HH MM SS	Stop Time -- : -- : -- HH MM SS
Period 3	Start Time -- : -- : -- HH MM SS	Stop Time -- : -- : -- HH MM SS
Period 4	Start Time -- : -- : -- HH MM SS	Stop Time -- : -- : -- HH MM SS

Use [←] and [→] keys to scroll cursor left and right. Use keys [0] – [9] to enter time in hours (HH) / minutes (MM) and seconds (SS). Press [OFF] to disable the time and press [OK] to save.

System > TimeZones >

Day MENU 7-5-2

Period 1	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Hol
	N	N	N	N	N	N	N	N
Period 2	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Hol
	N	N	N	N	N	N	N	N
Period 3	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Hol
	N	N	N	N	N	N	N	N
Period 4	Sun	Mon	Tue	Wed	Thu	Fri	Sat	Hol
	N	N	N	N	N	N	N	N

Enter 1 – 8 to toggle days ON/OFF, then press [OK] to save.



To create a timezone for auto arming you must enter the arm time in the stop time field. For example, if you want the system to arm at 5.30pm you would program 17:30:00 in the stop field.

If auto disarming is also required then you would enter the disarm time in the start time field of the same timezone period. For example, if you want the system to disarm at 7.30am you would program 07:30:00 in the start field. See the full installation manual for more details.

System > TimeZones >

TimeZone Options MENU 7-5-3

1	Invert Period Logic	N
2	Master Edit Allowed	N
3	Reserved	N
4	Reserved	N
5	Reserved	N
6	Reserved	Y
7	Reserved	N
8	Reserved	Y

System > Holidays >

Holiday Name MENU 7-6-0

H o l i d a y 1 N a m e

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > Holidays >

Start Stop Dates MENU 7-6-1

Start 12am	Stop 12am
01 Jan	01 Jan
DD MM	DD MM

Use the [←] and [→] keys to move to the field then [↑] and [↓] to change. Press [OK] to save or [MENU] to exit without saving.



Press [OFF] to disable the holiday.

System > System Options >

General Options MENU 7-7-0

1	Display LAN Fail	Y
2	Report LAN Fail	Y
3	Alarm On LAN Fail	N
4	Cannot Change Own PIN	N
5	Extend LAN Fail (Enable when using CM430S)	N
6	Monitor Default PINs	Y
7	PIN Always Required	N
8	Display Menu Numbers	Y

(*** System Wide Parameter ***)

System > System Options >

Area Options		MENU 7-7-1
1	Area 1 Common	N
2	First Open Last Close	N
3	Reset Siren All Users	Y
4	Power Up As Down	Y
5	Fault ACK All Areas	Y
6	Delay Trouble Beeps	Y
7	Power Up Disarmed	N
8	Ignore Trouble On Arm	N

(*** System Wide Parameter ***)

System > System Options >

Keypad Idle Screen		MENU 7-7-2
		0 0

(*** System Wide Parameter ***)

- 00 - No Idle Screen 02 - Time
- 01 - Date And Time 03 - Custom Screen

Use [↑] and [↓] keys or enter 0 - 3, then press [OK] to program the keypad idle screen - Single option only.

System > System Options >

Keypad Hi/Lo Temp		MENU 7-7-3
0 0 0 °C	0 0 0 °C	
Hi TEMP	Lo TEMP	

(*** System Wide Parameter ***)

Use [↑] and [↓] Keys To Program The High / Low Keypad Monitor Temperature. Max = 50 / Min = 0.

System > System Options >

Installer Options		MENU 7-7-4
1	Report Installer	N
2	Report Prog Change	Y
3	Restrict Installer PIN	N
4	Reserved	N
5	Auto Exit Install 2hr	Y
6	Auto Exit Service 2hr	Y
7	Multi Tenant Mode	N
8	Allow Defaulting	Y

(*** System Wide Parameter ***)

System > System Options >

Language		MENU 7-7-5
		0

Enter digits 0 – 1 to program the language required, then press [OK] to save.

System > System Options >

Site Name		MENU 7-7-7
1	Characters	32
M y A l a r m		

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > System Options >

Custom Text Line 1		MENU 7-7-8
[Empty grid]		

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

System > System Options >

Custom Text Line 2		MENU 7-7-9
[Empty grid]		

Use the [←] and [→] keys to scroll cursor left and right. Use the [0] – [9] keys or the [↑] and [↓] keys to scroll characters, then press [OK] to save. Press [OFF] to clear text from the current cursor position.

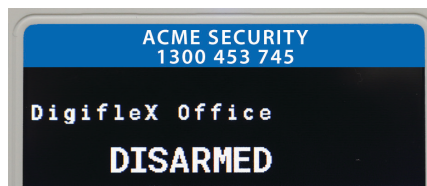


Figure 30: Custom Installer Banner Sample

System > System Testing >

Walk Test All Zones		MENU 7-9-0
Battery Test		MENU 7-9-1

Testing The System

You will need to be in programming mode before accessing the test functions listed below.

Walk Test

Use the walk test command MENU 3-9-0 to test and verify that all zones work correctly.

External Audible Test

Use MENU 4-9-0 to test and verify that all horn speakers operate. This test will sound the horn speaker for two seconds.

Internal Audible Test

Use MENU 4-9-1 to test and verify that all 12 VDC sirens operate. This test will sound the siren for two seconds.

Strobe Test

Use MENU 4-9-2 To test and verify that the strobe operates. This test will turn on the strobe until you manually stop the test.

Fire Audible Test

Use MENU 4-9-3 to test and verify that all 12 VDC sirens operate. This test will sound the siren for two seconds.

Battery Test

Use MENU 7-9-1 to test the back-up battery that is connected to the control panel.

Communication Test

Use MENU 5-9-0 to test the telephone reporting capability of the control panel. You can also activate a communication test by holding down the Test / Mail key on the keypad.

Specifications

Electrical

Voltage Input

- 16 - 22 VAC

Current Requirement

- 22 VA min plug pack adapter or transformer

Panel Current Consumption

- 110 ma standby

Power Outputs

Continuous Power

- 1 Amp (Primary supply source only)

Secondary Source

- 5 Amp (Total with both primary and secondary source combined)

Stand-By Battery

- 12 VDC, 7AH sealed rechargeable battery

Min Operating Voltage

- 10.2 VDC

LAN BUS

- Max total LAN length using multi strand security cable = 300m.
- Max total LAN length using 2 pair twisted shielded data cable (Belden 8723) = 1200m.

Telephone Connection

RJ-12 Socket or 4-way terminal.

Temperature

0° to 55°C.

Relative Humidity

5 to 85% at 30°C non-condensing.

Enclosure Dimensions

MW720 - 385mm (W), 260mm (H), 90mm (D)

MW730 - 385mm (W), 520mm (H), 90mm (D)

PCB Dimensions

235mm (W), 40mm (H), 85mm (D)

Warranty

3 years from date of manufacture

Approvals

- ◆ EN 55022:2006
- ◆ EN50131-3:2009 (Grade 2 - Class II)
- ◆ AS/NZS CISPR 22:2006
- ◆ EN 60950-1:2001 Amdt 11:2004
- ◆ AS/NZS 60950.1:2003 Amdt 1:2006
- ◆ AS/ACIF S002:2005
- ◆ PTC200 May 2006
- ◆ ETSI TS 103 021-1, 2 & 3

Installation Details

CUSTOMER NAME: _____

PHONE _____

INSTALLED BY: _____

DATE: _____

ACCOUNT N°: _____

PANEL LOCATION: _____

PANEL PHONE N°: _____

CLI ENABLED: _____

N° WIRED ZONES: _____

N° OF USERS: _____

N° RF ZONES: _____

N° OF AREAS: _____

WARRANTY
EXPIRES: _____

COMMON AREA
USED: _____

USER TRAINING
COMPLETED BY: _____

PERSON TRAINED: _____

NOTES:

Compatible Keypads

- ◆ CP155B - External Keypad with S/C Reader
- ◆ CP156B - Slim Style External Metal Keypad with S/C Reader
- ◆ CP736B - 3.5" Colour Keypad - S/C
- ◆ CP737B - 3.5" Colour Keypad - S/C,Wi-Fi
- ◆ CP722B - Graphic Keypad Smart Card Reader (White)
- ◆ CP732B - Graphic Keypad Smart Card Reader (Black)
- ◆ CP741B - Graphic Keypad With Wi-Fi (White)
- ◆ PR113B - Internal Smart Card Reader (Black)
- ◆ PR114B - Internal Smart Card Reader (White)
- ◆ PR115B - External Smart Card Reader (Black)
- ◆ PR116B - External Smart Card Reader (White)

Expansion Devices

- ◆ CM195B - Multi RF Receiver Interface
- ◆ CM368B - IP Communications Module 4G GPRS Module
- ◆ CM430S - LAN to Ethernet Converter Module
- ◆ CM704B - 8/16 Zone Input Expander
- ◆ CM705B - Universal Expansion Module
- ◆ CM707B - 8/16 Piggy Back Zone Input Expander Module
- ◆ CM710B - 4-Way Relay Output Module
- ◆ CM720B - 1 Amp Power Supply Module
- ◆ CM723B - LAN 5 Amp P/S Module/Dual Battery Chargers
- ◆ CM724B - LAN 5 Amp P/S Module/Dual Battery Chargers (Export Model)
- ◆ CM746B - Plug On 4G GSM/GPRS Module
- ◆ CM751B - TCP/IP Interface Module
- ◆ CM760B - Real Time Clock Module
- ◆ CM797B - LAN Isolator Module
- ◆ CM796B - Wiegand to RS485 LAN Interface Module

- ◆ RF120 - Smart RF LAN Base Station Receiver 2-Way
- ◆ RF121 - Smart RF LAN Base Station Receiver With 4 Relay Outputs 2-Way
- ◆ RF160 - Smart RF 2 Channel Wireless Output Module

Accessories

- ◆ CM255 - Default Key
- ◆ CM435B Power Terminal Expander Module
- ◆ CM436B - Desktop Reader Interface For 3rd Party Wiegand Readers
- ◆ CM438B - USB Powered Desktop Reader Interface For DF Format EM Prox Tokens
- ◆ CM439B - USB Powered Desktop Reader Interface For DF MiFare Smart Card Tokens
- ◆ CM444B Slim Style Relay Card Form C-2 Amp
- ◆ CM910 - Combined Direct Link/Flash Programmer - USB
- ◆ CM940B - 6 Way Programmable Relay Card
- ◆ CP799 - Installer Service Keypad
- ◆ RF110 - Smart RF 5 Button 2-Way Keyfob
- ◆ RF110FK - Colour Fascia Kit To Suit RF110 Keyfobs
- ◆ RF112W - Smart RF Reed-HW Input+Shock+Pulse
- ◆ RF112B - Smart RF Reed-HW Input+Shock+Pulse
- ◆ RF112W - Smart RF SM Reed-HW Input+PWR Out
- ◆ RF112B - Smart RF SM Reed-HW Input+PWR Out
- ◆ PR301 - Smart Card Token With Keyring
- ◆ PR350 - ISO Smart Card
- ◆ PR365 - Adhesive Smart Card Sticker
- ◆ PR370 - Dual Smart Card and EM Format Token
- ◆ SW500B - Solution Link Software
- ◆ SW501B - Site Manager Onsite Administration Software

The following parts are supplied with the panel

(Australian models only - content may differ in export models)

Panel Assembly Includes	1 x Metal Enclosure with tamper 1 x Panel PWA 1 x User Manual	1 x Installer Reference Guide 1 x Resistor Pack
Resistor Pack Includes	1 x Red Battery Lead 1 x Black Battery Lead 1 x 2-Way Shunt With Handle 2 x Phillips Pan Head Zinc Plate Screw 10 x 3K3 – 0.25W +/- 1% Metal Film Resistors 10 x 6K8 – 0.25W +/- 1% Metal Film Resistors 1 x 3-Way AC Terminal Block 1 x Panel Tamper Switch 1 x Tamper Switch Bracket	

Bosch Security Systems
Level 2, 21 Solent Circuit
Baulkham Hills, NSW 2153
Australia
Phone: 1300 026 724
www.boschsecurity.com.au

© 2023 Bosch Security Systems
BLCC610R
Issue FTR2.5

BOSCH