


## B4512 IP control panel, 28 points

### B Series

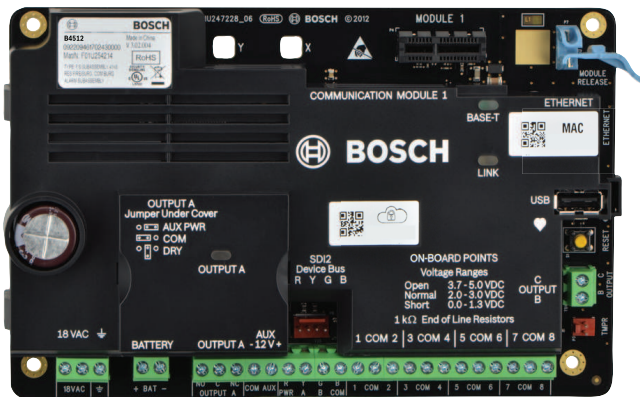

- ▶ Provides up to 28 points using a combination of hardwired or wireless points for installation flexibility and 2 areas with perimeter and interior control
- ▶ On-board Ethernet port for Conetix IP alarm communication and remote programming, compatible with modern IP networks including IPv6/IPv4, Auto-IP, and Universal Plug and Play
- ▶ Installer-friendly features for simple installation and communications, including plug-in PSTN and cellular communication modules
- ▶ Programmable keypad shortcuts, situation sensitive on-screen help, and a bilingual user interface make system operation simple and easy

The B4512 Control Panel integrates intrusion and residential fire, providing one simple user interface for both systems. The B4512 provides up to 28 individually identified points that can be split into 2 areas.

The control panel communicates via the built-in Ethernet port or via compatible plug-in modules that can send events over the public switched telephone network (PSTN) or over cellular network communications.

With the B4512, you can monitor doors, windows, and motion within areas like showrooms or those that hold inventory. Each user can have a personalized passcode, a wireless keyfob, and an access credential to control the system.

Use programmable authority levels with restricted privileges to provide service, security, and cleaning personnel with full or limited access. Use the three programmable outputs (expandable up to 27) to turn on lights or lock and unlock doors. Users can:

- Turn on the system to secure the stock room while you conduct daily business.
- Perform tests to ensure your system is working properly.
- Set your system to alarm immediately if a door opens.
- Activate the Watch feature so a tone sounds whenever a customer enters.

- Set a schedule for your system to automatically turn on at closing time.
- Use wireless security options to customize your system.

Central monitoring stations provide 24-hour system monitoring with access to vital services. Professional security personnel can test the system, monitor system activity, and alert the police, fire department, or other emergency response teams if necessary.

#### Functions

##### Programmable outputs

- Three programmable on-board outputs; one high current using a relay, and two trigger outputs
- Output A, with a contact rating of 3 Amps, can supply up to 1.0 A total current from AUX PWR
- Outputs B and C sink up to 50 mA at 12 VDC
- Four alarm-output patterns
- Programmable bell test

##### Output Profiles

Output Profiles support custom programming and provide a way for outputs to operate based on unique application requirements.

Once an Output Profile is created, it can be reused and assigned to multiple outputs enabling quick output programming.

You can create Output Profiles that define how an output operates when specific events occur. Output Profiles provide a way to assign and use consistent output effects throughout the system.

#### Point response

- 20 custom point profiles
- Selectable point response time
- Cross point capability
- Fire alarm verification
- Dangerous gas indicator includes carbon monoxide
- Watch mode

#### User interface

- Supervision of up to 8 keypads
- Custom keypad text is fully programmable through RPS
- Full function menu including custom functions
- Authority by area and 32 character name for each user
- 14 custom authority levels to restrict system features that each user can access
- Programmable primary and secondary language by user and keypad
- 12 available languages (any two can be concurrently used)

#### User interface languages

The following table shows the available languages per keypad type.

	B915/ B915I	B920/ B925F/ B926F / B926M	B921C	B930	B940W/ B942/ B942W
English	✓	✓	✓	✓	✓
Chinese	✓				✓
Dutch	✓	✓	✓	✓	✓
French	✓	✓	✓	✓	✓
German	✓	✓	✓	✓	✓
Greek	✓				✓
Hungarian	✓	✓	✓	✓	✓
Italian	✓	✓	✓	✓	✓
Polish	✓				✓
Portuguese	✓	✓	✓	✓	✓
Spanish	✓	✓	✓	✓	✓
Swedish	✓	✓	✓	✓	✓

#### Area configurations

Area programming offers a wide selection of different system configurations. Make area arming conditional on other areas (master or associate), if desired. You can configure any area for perimeter and interior arming, not requiring a separate area for this function. For higher security applications, the Area Re-Arm feature guarantees that areas are always rearmed, and are disarmed for no longer than a specific, configurable, amount of time (for example, service time).

#### Custom functions

For added convenience, the installer can program custom functions that allow customers to complete complex tasks with one simple action. For example, a custom function can bypass a group of points and arm the system, allowing the user to perform these functions with one easy command. Users can activate custom functions with a keypad, keyfob, token, or card, or the control panel can activate a function in reaction to a faulted point, or automatically through a scheduled event (SKED).

#### Passcode security

- Two-man rule. Requires two people with two unique passcodes to be present at the time of opening.
- Early ambush. Allows users to verify that the facility is safe by requiring two passcodes. The control panel sends a duress event if the user does not enter the passcode a second time after inspecting the premises.
- Dual authentication. Requires two forms of identification before processing certain system commands, including turning off the system and opening doors. A standard system user must have a passcode, a credential (token or card), and appropriate command authority permissions.

#### Easy exit control

The control panel changes from one On (armed) state to another without turning off (disarming) the system. For example, if you change the state from Part On (Perimeter Arm) to All On (Master Arm), the control panel complies and reports the change. Easy exit control reduces the number of keystrokes, simplifying system operation.

#### Programmable passcode-controlled menu list

Passcode-controlled shortcuts provide users only with the options and information pertinent to them, simplifying system operation.

#### Flexible control

The system provides the flexibility to choose added convenience or high security. For example, you can restrict to a keypad's immediate local area turning on (arming) and turning off (disarming) the system with a passcode, even if the user has access to other areas. This is particularly useful for high security areas,

where a user may have access to the area, but would prefer to only turn off (disarm) the area individually rather than with the rest of the system.

### Monitor Delay/Delayed Response

Create a special point profile that delays the reaction of a point for a specified time (up to 1 hour in minutes and seconds). This delay provides time for the specified condition to reset before activating any annunciation. The system can annunciate locally and send a report, if desired. When the system is armed, the point can respond like a normal point - providing dual functionality. Use this feature to ensure that perimeter doors have not been propped open, or to monitor critical areas such as computer rooms and safes, for example.

### System users

The system supports up to 32 users. Each user can have a personalized passcode, a wireless keyfob, and an access credential to control the system. You can assign passcodes to one of 14 customized authority levels in each area and can be restricted to operate only during certain times. Programmable primary and secondary language by user and keypad; select from English, Chinese, French, Greek, Hungarian, Italian, Polish, Portuguese, and Spanish.

### Route groups and destinations

The control panel can send reports to four different route groups using one primary and up to three backup destination devices for each route group.

### Reporting capabilities

The control panel has flexible communications for most central station receivers with reporting capabilities such as:

- Individual point numbers
- Opening or closing reports by user and area number
- Remote programming attempts
- Diagnostic reports

### Destination test

It is possible to send test reports to each and all destinations within each route group.

### Communication formats

The control panel sends reports in these formats:

- Contact ID (PSTN)
- Modem4 (PSTN)
- Conettix Modem4
- Conettix ANSI-SIA Contact ID
- ANSI-SIA DC-09



### Notice

#### UL and ULC LISTED applications

ANSI-SIA DC-09 format is not available for UL and ULC LISTED applications.

### IP communication

The control panel can use IP to communicate with a Conettix D6600 or a Conettix D6100IPv6 communications receiver/gateway. Use one of the following for IP:

- The on-board Ethernet connection
- Ethernet Communication Module: B426
- Plug-in cellular communicator: B442/B443/B444-A/B444-V

Conettix IP communication provides a secure path that includes anti-replay/anti-substitution features, and enhanced security with up to AES 256-bit encryption (using Cipher Block Chaining (CBC)). The control panel supports Domain Name System (DNS) for both remote programming and central station communication. DNS provides ease of use, eliminating the need to use static IP addresses as your reporting destination, and accommodates a simple solution for central station disaster recovery. The control panel supports both IPv6 and IPv4 networks.

### Communication paths

The control panel accommodates up to four separate phone and four separate network paths to the central station receiver. When resetting alarms or turning a system on and off, the user is identified by name and number.

### Personal notification

The control panel can send text messages and emails for personal notification over Ethernet or using a cellular communicator. You can configure up to 16 destinations using a combination of cellular phone numbers and email addresses. The control panel sends notifications in the user's programmed primary language.

### Firmware updates

Remote firmware updates are available.

### A wide variety of input options

Each point:

- Single 1 k $\Omega$ , single 2 k $\Omega$ , dual 1 k $\Omega$  (1 k $\Omega$  + 1 k $\Omega$ ), and No EOL (end-of-line) (EOL) resistor options (for on-board and B208 inputs)
- Programmable for Fire, Intrusion, Gas, and Supervisory devices
- Supports hardwired and wireless devices
- Supports IP cameras by Bosch as point and output devices

### IP camera support

The control panel can integrate directly with Bosch IP cameras, using them as fully supervised points and outputs.

Integration of cameras allows the camera's video motion detection to activate points on the control panel. The IP Camera Point Source now includes two wired inputs of an IP camera. The control panel's virtual outputs (IP camera output source) can be configured to trigger camera actions, including sending video snapshots via email.

## Security and fire detection

The control panel provides eight on-board points, and up to 20 additional off-board points (depending on model and expansion interfaces). You can program individual points to monitor some types of burglar alarms, fire alarms, and supervision devices.

## Event log

The event log stores local and reported events. The event log includes information such as time, date, event, area, point, and user. View the event log from a keypad or use RPS to remotely retrieve event information. When the event log reaches a programmed threshold of stored events, it can send an optional report to a receiver.

The log stores up to 127 local and reported events.

## Scheduled events (SKEDs)

The internal clock and calendar start individually scheduled events (SKEDs). SKEDs perform several functions such as turn on or off, relay control, or point bypassing.

The control panel offers:

- Five scheduled events with up to 25 different functions
- Two opening windows and two closing windows
- Two user group windows
- Day-of-week, date-of-month, or holiday only schedules
- One holiday schedule of 366 days (leap year)

## Programming

Installers can perform limited programming on-site with a keypad (critical parameters; such as account IDs, central station and RPS IP addresses and phone numbers, reporting formats, and more). They can also do full programming on-site or remotely (attended or unattended) with RPS. A programmable system passcode prevents unauthorized remote programming.

The following table shows the available languages for RPS

	RPS programming	RPS custom text*
English	✓	✓
Dutch		✓
French		✓
German		✓
Hungarian		✓
Italian		✓
Portuguese		✓
Spanish		✓

	RPS programming	RPS custom text*
Swedish		✓

\* RPS custom text is text, that can be entered in RPS and which will then be displayed on keypads and on the mobile app.

## Diagnostics

Keypads and RPS offer diagnostic help for monitoring and troubleshooting. The diagnostics features allow you to view the status of the wired and wireless devices. The features provide the status of the control panel and its connected devices, such as firmware version, power, and missing conditions. View the status of each area.

## 3rd Party Integrations

The control panel provides options for integration with software applications and solutions. Depending on the application, options include a Bosch SDK, RPS-API, Bosch proprietary MODE 2 or OPC interface. The OPC interface enables key DA (Data Access) and AE (Alarms & Events) to integrate with the Bosch BIS solution or 3rd party OPC Classic systems.

## Bosch Video Management System integration

With Bosch Video Management System (Bosch VMS) and an intrusion system, the VMS operator has a single user interface to monitor and control the intrusion system combined with video surveillance. With Bosch VMS and a control panel, the operator can, for example:

- View videos triggered by intrusion events, including all relevant information such as areas, point, and user show in the display with the event.
- View areas, points, outputs, and doors - with their statuses - on the Bosch VMS map, providing the exact location in the system.
- Turn on (arm) and turn off (disarm) areas.
- Bypass and unbypass points.

Requirements to integrate Bosch VMS with a control panel:

- A licensed Bosch VMS system using Professional Editions v5.5 or higher or Bosch VMS Enterprise.
- Edition v5.5 or higher.
- Expansion license to integrate the intrusion control panel. One license needed per control panel. Order number MBX-XINT-xx for the expansion license added to a Bosch VMS base license. Refer to the Bosch Video Management Software product page on the Bosch website, [www.boschsecurity.com](http://www.boschsecurity.com).
- Access to the control panel account and Remote Programming Software (RPS).

## Bosch Security Manager Mobile App

The Bosch Security Manager app allows users to control their security systems remotely from their smart devices. Users can:

- Easily view their system's status at a glance via the advanced and colorful design of the app

- Turn the security system On or Off (either the entire system or specific areas)
- Receive and filter event-driven push notifications
- View full event history for their system
- Add, edit, and delete users in their system
- Control outputs and doors
- View live video from Bosch IP cameras
- Access their panels from any device just by logging into the app with a Bosch ID (panels are now linked to an account and not a device)

Full functionality requires panel firmware 3.10 or higher and integration with the new Installer Services Portal. App users must have a valid email account and must be invited to the app by their Bosch certified dealer.

For those without access to the Installer Services Portal, Remote Security Control will remain available.

### Installer Services Portal (North America)

The Installer Services Portal offers secure and easy access for managing Bosch cloud and cellular communication services for remote programming and alarm reporting. The Bosch Cloud Remote Connect service eliminates the need to change local router settings, firewall rules or to use Domain Name Service (DNS). In addition to seamless integration with RPS for remote programming, the Remote Connect service fully supports the Bosch Security Manager mobile app.

### Regulatory information

Region	Regulatory compliance/quality marks	
USA	ANSI-SIA	CP-01-2010-Control Panel Standard - Features for False Alarm Reduction
Australia	RCM	ACMA
Europe	CE	EMC, LVD, RoHS [B6512, B5512, B4512, B3512]
USA	UL	Underwriters Laboratories
	UL	UL 365 - Police Station Connected Burglar Alarm Units
	UL	UL 609 - Standard for Local Burglar Alarm Units and Systems
	UL	UL 636 - Holdup Alarm Units and Systems
	UL	UL 985 - Household Fire Warning System Units (6th edition)
	UL	UL 1023 - Household Burglar Alarm System Units
	UL	UL 1076 - Proprietary Burglar Alarm Units and Systems
	UL	UL 1610 - Central Station Burglar Alarm Units

Region	Regulatory compliance/quality marks	
	UL	UL 1635 - Standard for Digital Alarm Communicator System Units
	CSFM	California State Fire Marshal
	FCC	Part 15 Class B
Canada	ULC	Underwriters Laboratories of Canada S1871-20121210
	ULC	CAN/ULC S303 - Local Burglar Alarm Units and Systems
	ULC	CAN/ULC S304 - Standard for Signal Receiving Center and Premise Burglar Alarm
	ULC	CAN/ULC S545 - Residential Fire Warning System Control Units
	ULC	CAN/ULC S559 - Fire Signal Receiving Centres and Systems
	ULC	ULC-ORD C1023 - Household Burglar Alarm System Units
	ULC	ULC-ORD C1076 - Proprietary Burglar Alarm Units and Systems
	IC	ICES-003 - Information Technology Equipment (ITE)
Brazil	ANATEL	04712-16-01855

### Installation/configuration notes

#### **i** Notice

Not all products and features are available in all regions. Consult your local Bosch representative for availability details.

#### Keypads

B940W Touch screen KP, White (SDI2)

B942/B942W Touch Screen Keypad (SDI2)

B930 ATM Style Alphanumeric Keypad (SDI2)

B921C Two-line Capacitive Keypad (SDI2)

B920 Two-line Alphanumeric Keypad (SDI2)

B915/B915I Basic Keypad (SDI2)

#### Power

CX4010 Plug-in Transformer (18 VAC 22 VA 60 Hz)

ICP-TR1822-CAN Plug-in Transformer (110 VAC primary, 18 VAC 22 VA secondary)

DE-45-18 Transformer

D126 Standby Battery (12 V, 7 Ah)

D1218 Battery (12 V, 18 Ah)

D122 Dual Battery Harness

D122 Dual Battery Harness with long leads

### Enclosures

B10 Medium Control Panel Enclosure

B11 Small Control Panel Enclosure

B12 Mounting Plate for D8103 Enclosure

B8103 Universal Enclosure (requires a B12)

D8108A Attack Resistant Enclosure (requires a B12)

D8109 Fire Enclosure (requires a B12)

D8108A-CE Attack Resistant Enclosure with Built-in Transformer (requires a B12)

B-ENCL-1 Metal Enclosure Kit (includes B12 and transformer)

### Accessories

B56 Keypad Surface Mount Box

B96 Keypad Trim Bezel

B99 USB Direct Connect Cable

B501-10 Interconnect wiring cables (pack of 10)

### Detectors

FCC-380 Carbon Monoxide Detector

F220-P: Photoelectric Smoke Detector

F-220-PTH: Photoelectric/Heat Detector

FCP-OT320 Multisensor Detector Optical/Thermal

FCP-O320 Optical Smoke Detector

FCH-T320 Heat Detector

Bosch conventional detectors, including Professional Series, Blue Line Gen2, Blue Line, Classic Line, Commercial Line, and Ceiling Mount motion detectors, as well as glass break, seismic, request-to-exit, photoelectric, heat, and smoke detectors.

### Modules

B201 2-wire Powered Loop Module

B208 Octo-input Module

B308 Octo-output Module

B426 Conettix Ethernet Communication Module

B430 Plug-in Telephone Communicator

B440 Conettix Plug-in Cellular Communicators

B442 Conettix Plug-in Cellular Communicator (using GPRS)

B443 Conettix Plug-in Cellular Communicator (using HSPA+)

B444 Conettix Plug-in Cellular Communicator

B444-A Plug-in cell module, AT&T LTE

B444-V Plug-in cell module, Verizon LTE

B450 Conettix Plug-in Communicator Interface

B520 Auxiliary Power Supply Module

B810 wireless receiver (RADION)

B820 SDI2 Inovonics Interface Module

D113 Battery Lead Supervision Module

D125B Dual Class B Initiating Module

D129 Class A Initiating Module

D130 Auxiliary Relay Module

D132A Smoke Detector Reversing Relay Module

D133/D134 Relay Module

D135A Low Battery Disconnect Module

D185 Reverse Polarity Signaling Module

D192G Class "B", Style Y Bell Circuit Supervision

### Applications

Remote Programming Software (RPS or RPS-LITE) v6.03 and higher

Bosch Video Management System v5.5 and higher

Remote Security Control

**Conettix receivers**

(Managed and configured with Conettix D6200 Programming/ Administration Software v2.00)

Conettix D6600 Communications Receiver/Gateway (with only D6641 line cards installed) with CPU version 01.10.00

Conettix D6100IPv6 Communications Receiver/Gateway with CPU version 61.10.00

Conettix D6100i Communications Receiver/Gateway with CPU version 61.10.00

**RADION wireless from Bosch**

B810 wireless receiver (RADION)

RFBT-A/RFBT bill trap

RFDL-11-A/RFDL-11 TriTech motion detector

RFDW-RM-A/RFDW-RM recessed mount door/window contact

RFDW-SM-A/RFDW-SM surface mount door/window contact

RFGB-A/RFGB glass break detector

RFKF-A/RFKF two-button keyfob

RFKF-FBS-A/RFKF-FBS four-button keyfob

RFKF-TBS-A/RFKF-TBS two-button keyfob

RFPB-SB-A/ RFPB-SB single-button panic

RFPB-TB-A/RFPB-TB two-button panic

RFRP-A/RFRP repeater

RFHT-A Wireless heat detector

RFSM2-A Wireless smoke detector

RFCO-A Wireless CO detector

RFPR-12-A/RFPR-12 PIR motion detector

RFPR-C12-A/RFPR-C12 PIR curtain motion detector

RFUN-A/RFUN universal transmitter

**Inovonics Wireless**

B820 SDI2 Inovonics Interface Module

ENKIT-SDI2 SDI2 Inovonics Interface and Receiver Kit. Includes B820 and EN4200

EN1210 Universal Transmitter (Single-input)

EN1210EOL Universal Transmitter with EOL Resistor

EN1210W Door-Window Transmitter with Reed Switch

EN1215EOL Universal Transmitter with Wall Tamper, Reed Switch, and EOL Resistor

EN1223D Water-resistant Pendant Transmitter (Double-button)

EN1223S Water-resistant Pendant Transmitter (Single-button)

EN1224-ON Multiple-Condition Pendant Transmitter

EN1233D Necklace Pendant Transmitter (Double-button)

EN1233S Necklace Pendant Transmitter (Single-button)

EN1235D Beltclip Pendant Transmitter (Double-button)

EN1235DF Fixed-location Transmitter (Double-button)

EN1235S Beltclip Pendant Transmitter (Single-button)

EN1235SF Fixed-location Transmitter (Single-button)

EN1247 Glass-break Detector Transmitter

EN1249 Bill Trap Transmitter

EN1242 Smoke Detector Transmitter

EN1260 Wall Mount Motion Detector

EN1261HT High Traffic Motion Detector

EN1262 Motion Detector with Pet Immunity

EN1265 360° Ceiling Mount Motion Detector

EN4200 Serial Receiver

EN5040-T High Power Repeater with Transformer

**Parts included**

Quantity	Component
1	Control panel
1	Literature pack: <ul style="list-style-type: none"> <li>• UL Installation Guide</li> <li>• ULC Installation Guide (English and French)</li> <li>• Owner’s Manual</li> </ul>

Quantity	Component
	<ul style="list-style-type: none"> <li>Release Notes</li> <li>SIA Quick Reference Guide</li> <li>Quick Installation Guide</li> </ul>
1	Literature CD containing product literature
1	Wiring label for enclosure door
1	Hardware pack: <ul style="list-style-type: none"> <li>Mounting clips</li> <li>1 kΩ EOL resistors</li> <li>Battery wires</li> <li>Four #6 x 3/4 in self threading screws</li> </ul>

## Technical specifications

### Capacity

Number of points	28
Number of areas	2
Number of events	512
Number of users	33
Number of outputs	27
Number of on-board outputs	3
Number of SKEDs	5
Number of IP cameras	2

### Electrical

Current consumption (mA)	125 mA – 155 mA
Input voltage (VAC)	16.50 VAC – 18 VAC
Maximum auxiliary output current (mA)	800 mA
Nominal voltage (VDC)	12 VDC
Output current (A)	0 A – 1.30 A

### Environmental

Operating temperature (°C)	0°C – 49°C
Operating temperature (°F)	32°F – 122°F
Operating relative humidity, non-condensing (%)	5% – 93%

## Network

Ethernet type	10/100BASE-T
---------------	--------------

## Ordering information

### B4512 IP control panel, 28 points

Supports up to 28 points, 3 on-board outputs, and 2 areas for intrusion, residential fire. On-board Ethernet.

Order number	Asset Key	Vepos
<b>B4512   F.01U.323.782</b>		
<b>F.01U.390.778</b>		

### Accessories

#### B520 Auxiliary power supply module, 2A 12V

Provides auxiliary power to 12 VDC devices or to SDI2 modules.

Order number	Asset Key	Vepos
<b>B520   F.01U.172.941</b>		

#### B201 2-Wire Powered Loop

The module provides a single powered initiating device circuit. The module supports compatible 12 V 2-wire smoke detectors. It also supports connecting burglary devices to the control panel.

Order number	Asset Key	Vepos
<b>B201   F.01U.323.798</b>		

#### B208 SDI2 8-Input Expansion Module

Provides 8 programmable inputs.

Order number	Asset Key	Vepos
<b>B208   F.01U.385.671 F.01U.397.024</b>		
<b>F.01U.323.801</b>		

#### B308 SDI2 8-Output Expansion Module

Provides 8 programmable relays.

Order number	Asset Key	Vepos
<b>B308   F.01U.385.672 F.01U.397.025</b>		
<b>F.01U.323.802</b>		

#### B810 Wireless SDI2 bus interface

Receives RF signals from RADION transmitters, repeaters, and glassbreaks. Operates at 433.42 MHz. For use with compatible SDI2 bus control panels.

Order number	Asset Key	Vepos
<b>B810   F.01U.323.799 F.01U.383.394</b>		

#### D122 Dual battery harness

Harness with circuit breaker. Connects two batteries (in parallel) to a compatible control panel.

Order number	Asset Key	Vepos
<b>D122   4.998.800.378</b>		

#### D122L Dual battery harness, long

Harness with circuit breaker and leads measuring 35 in. (89 cm). Connects two batteries (in parallel) to a compatible control panel in a separate enclosure.

Order number	Asset Key	Vepos
<b>D122L   4.998.140.606</b>		

#### D126 Battery, 12V 7Ah

A rechargeable sealed lead-acid power supply used as a secondary power supply or in auxiliary or ancillary functions.

Order number	Asset Key	Vepos
<b>D126   4.998.125.825</b>	<b>4011</b>	<b>6845</b>



**D1218 Battery, 12V 18Ah**

The D1218 is a 12 V 18 Ah sealed lead-acid battery with two bolt-fastened terminals. It is used for standby and auxiliary power. It connects to a compatible control panel using a D122 or D122L Dual battery harness.

Order number Asset Key Vepos  
**D1218 | 4.998.125.820**

**CX4010 Transformer, plug-in, 18V 22VA**

For use in North America. 110 VAC primary voltage input. 18 VAC, 22 VA secondary input.

Order number Asset Key Vepos  
**CX4010 | F.01U.020.504**

**ICP-TR1822-CAN Transformer, plug-in, 18V 22VA, Canada**

For use in Canada. 110 VAC primary voltage input. 18 VAC, 22 VA secondary input.

Order number Asset Key Vepos  
**ICP-TR1822-CAN | F.01U.005.574**

**B8103 Universal enclosure, white**

White steel enclosure measuring 41 cm x 41 cm x 9 cm (16 in. x 16 in. x 3.5 in.).

Order number Asset Key Vepos  
**B8103 | F.01U.300.149**

**D8108A Attack resistant enclosure, large, grey**

Grey steel enclosure measuring 41.5 cm x 41.5 cm x 9 cm (16 in. x 16 in. x 3.5 in.).

UL Listed. Includes a lock and key set.

Order number Asset Key Vepos  
**D8108A | 4.998.125.920**

**D8109 Fire enclosure, 16x16x3.5", red**

Red enclosure, 16in. x 16in. x 3.5in. (41cm x 41cm x 9cm), 16 gauge (1.5mm) cold-rolled steel, full-length hinge, D101F lock and 2 D102F keys, UL Listed for commercial fire/burglary applications.

Order number Asset Key Vepos  
**D8109 | 4.998.800.205**

**B10 Steel enclosure, medium, white**

White, steel enclosure. Accepts an optional lock and tamper switch. Measures 35.6 cm x 31.8 cm x 7.6 cm (14 in x 12.5 in x 3 in).

Order number Asset Key Vepos  
**B10 | F.01U.268.495**

**B11 Steel enclosure, small, white**

White, steel enclosure. Accepts an optional lock and tamper switch. Measures 27.8 cm x 25.9 cm x 8.32 cm (10.9 in x 10.2 in x 3.3 in).

Order number Asset Key Vepos  
**B11 | F.01U.262.005**

**B12 Mounting plate for D8103 enclosure**

Required for mounting select control panels and other devices in B8103, D8103, D8108A, D8109, and BATB Battery Box enclosures.

Order number Asset Key Vepos  
**B12 | F.01U.260.846**

**B-ENCL-1 Metal Enclosure kit w/transformer**

White steel enclosure with installed 220 VAC transformer.

Order number Asset Key Vepos  
**B-ENCL-1 | F.01U.322.491**

**D8004 Transformer enclosure kit, grey**

For applications that might require a remote transformer in an enclosure. Can be used with B Series control panels and D9412GV4/D7412GV4 control panels.

Order number Asset Key Vepos  
**D8004 | 4.998.140.404**

**D101 Enclosure lock and key set**

Short-body lock set with one key supplied. Uses the D102 (#1358) replacement key.

Order number Asset Key Vepos  
**D101 | 4.998.800.200**

**D110 Tamper switch for enclosure, 2pcs**

Screw-on tamper switch that fits all enclosures. Shipped in packages of two.

Order number Asset Key Vepos  
**D110 | F.01U.246.707 4.998.137.947**

**ICP-EZTS Dual tamper switch**

Combination tamper switch with a wire loop for additional tamper outputs.

Order number Asset Key Vepos  
**ICP-EZTS | F.01U.217.038**  
**F.01U.003.526**

**B99 USB direct connect cable**

Male A to Male A USB cable for local programming of control panels with on-board USB ports.

Order number Asset Key Vepos  
**B99 | F.01U.278.853**

**B915 Basic Keypad**

Two-line alphanumeric basic keypad with language function keys.

Available languages: English, Chinese, Dutch, French, German, Greek, Italian, Hungarian, Polish, Portuguese, Spanish, Swedish.

Order number Asset Key Vepos  
**B915 | F.01U.385.667 F.01U.323.784**

**B915I LCD keypad, icon keys, SDI2**

Two-line alphanumeric basic keypad with icon function keys.

Available languages: English, Chinese, Dutch, French, German, Greek, Italian, Hungarian, Polish, Portuguese, Spanish, Swedish.

Order number Asset Key Vepos  
**B915I | F.01U.315.437**  
**F.01U.385.666**

**B920 2 Line Alpha Numeric Keypad (SDI2)**

Two-line alphanumeric keypad

Available languages: English, Dutch, French, German, Hungarian, Italian, Portuguese, Spanish, Swedish.

Order number Asset Key Vepos  
**B920 | F.01U.385.668 F.01U.323.785**

**B921C Two-line Keypad w/Touch keys, Inputs**

Two-line alphanumeric keypad with inputs and capacitive touch keys in black.

Available languages: English, Dutch, French, German, Hungarian, Italian, Portuguese, Spanish, Swedish.

Order number Asset Key Vepos  
**B921C | F.01U.323.786**  
**F.01U.385.734**

**B930 ATM Style-Alpha Numeric Keypad (SD12)**

Five-line ATM style alphanumeric keypad  
 Available languages: English, Dutch, French, German, Hungarian, Italian, Portuguese, Spanish, Swedish.  
 Order number Asset Key    Vepos  
**B930 | F.01U.385.669 F.01U.323.787**

**B940W Slim Touch Keypad**

SDI2 compatible touch screen keypad with function keys.  
 Available languages: English, Chinese, Dutch, French, German, Greek, Italian, Hungarian, Polish, Portuguese, Spanish, Swedish.  
 Order number Asset Key    Vepos  
**B940W | F.01U.358.360**

**B942 Touch Screen KP Prox/Input/Output, black**

Black SDI2 touch screen keypad with inputs and one output.  
 Available languages: English, Chinese, Dutch, French, German, Greek, Italian, Hungarian, Polish, Portuguese, Spanish, Swedish.  
 Order number Asset Key    Vepos  
**B942 | F.01U.323.788 F.01U.386.352**

**B942W Touch screen KP, prox/input/output,white**

White SDI2 touch screen keypad with inputs and one output.  
 Available languages: English, Chinese, Dutch, French, German, Greek, Italian, Hungarian, Polish, Portuguese, Spanish, Swedish.  
 Order number Asset Key    Vepos  
**B942W | F.01U.323.789 F.01U.395.924**

**B426 Ethernet Communication Module**

Supports two-way communications over Ethernet networks for compatible control panels  
 Order number Asset Key    Vepos  
**B426 | F.01U.324.383 F.01U.386.952    4235    7897**

**B442 Plug-in cellular module, GPRS**

Multi-function cellular communicator that provides IP communication over a (GPRS) cellular network  
 Order number Asset Key    Vepos  
**B442 | F.01U.283.090 F.01U.385.514    4235    8330**

**B443 Plug-in Cellular, HSPA+ (3G+)**

Multi-function 3G/4G cellular communicator providing IP communication over a GPRS/EDGE/UMTS/HSPA+ cellular network  
 Order number Asset Key    Vepos  
**B443 | F.01U.323.796 F.01U.385.515    4235    8336**

**B444 Plug-in cellular module, VZW LTE, hot**

Pre-activated 4G LTE cellular communicator for secure two-way IP communication on the Verizon Wireless LTE network.  
 Order number Asset Key    Vepos  
**B444 | F.01U.335.089**

**B444-C Plug-in cell module, VZW LTE, cold**

Non-activated 4G LTE cellular communicator for secure two-way IP communication on the Verizon Wireless LTE network.  
 Order number Asset Key    Vepos  
**B444-C | F.01U.349.007**

**B444-A Plug-in cell module, AMEC LTE**

This communication module provides secure two-way IP communication on North American wireless networks.  
 Order number Asset Key    Vepos  
**B444-A | F.01U.385.518 F.01U.374.184**

**B444-V Plug-in cell module, VZW LTE**

This communication module provides secure two-way IP communication on the Verizon Wireless network.  
 Order number Asset Key    Vepos  
**B444-V | F.01U.385.517 F.01U.374.183**

**Software Options****D5500CU Upgrade DVD**

RPS software is available for free download on the RPS product page. It is also available on DVD-ROM.  
 Order number Asset Key    Vepos  
**D5500CU | 4.998.143.725**

**Services****EWE-CTRCOM-IW 12 mths wrty ext Control Communicator**

12 months warranty extension  
 Order number Asset Key    Vepos  
**EWE-CTRCOM-IW | F.01U.352.289**

**Represented by:**

**Europe, Middle East, Africa:**  
 Bosch Security Systems B.V.  
 P.O. Box 80002  
 5600 JB Eindhoven, The Netherlands  
 Phone: + 31 40 2577 284  
[www.boschsecurity.com/xc/en/contact/](http://www.boschsecurity.com/xc/en/contact/)  
[www.boschsecurity.com](http://www.boschsecurity.com)

**Germany:**  
 Bosch Sicherheitssysteme GmbH  
 Robert-Bosch-Ring 5  
 85630 Grasbrunn  
 Tel.: +49 (0)89 6290 0  
 Fax: +49 (0)89 6290 1020  
[de.securitysystems@bosch.com](mailto:de.securitysystems@bosch.com)  
[www.boschsecurity.com](http://www.boschsecurity.com)

**North America:**  
 Bosch Security Systems, LLC  
 130 Perinton Parkway  
 Fairport, New York, 14450, USA  
 Phone: +1 800 289 0096  
 Fax: +1 585 223 9180  
[onlinehelp@us.bosch.com](mailto:onlinehelp@us.bosch.com)  
[www.boschsecurity.com](http://www.boschsecurity.com)

**Asia-Pacific:**  
 Robert Bosch (SEA) Pte Ltd, Security Systems  
 11 Bishan Street 21  
 Singapore 573943  
 Phone: +65 6571 2808  
 Fax: +65 6571 2699  
[www.boschsecurity.com/xc/en/contact/](http://www.boschsecurity.com/xc/en/contact/)  
[www.boschsecurity.com](http://www.boschsecurity.com)